# INSTALLATION INSTRUCTION RDD35/RDP35/RDW35 ALL LIGHTING FIXTURES

All dimensions are given according to the SI system of units (mm, kg, °C), additional dimensions that are written in brackets, are given according to the U.S. measurement system (in, lbs, °F).

### GENERAL REMARKS ON SAFETY

- Read all of these instructions before installing fixtures.
- Keep all of the instructions for future reference.
- Turn off power before installing fixture.
- Installation is to be performed by a qualified electrician only.
- All installations are to conform to the standards of the National
- Electrical Code as
- well as all local jurisdictional codes and regulations.
- Any modification of the luminaire will void any and all written or
- implied warranties
- Do not open the fixture -this will void the IP rating.
- The manufacturer accepts no responsibility for damage to persons or

property arising through improper use or installation

### WARRANTY

All products are factory tested and are guaranteed free from factory defect for a period of 3 years under following terms:

- Product has not been subject to incorrect voltage or polarity connection

- Product has not been subject to physical or atmospheric damage.


- Product has been returned and factory evaluated for defect or malfunction.

All drivers and controllers are approved for use by FILIX.


- The luminaire factory seal ( IP rating ) has not been compromised

The manufacturer accepts no responsibility for damage to persons or property arising through improper use or installation.

# POSSIBLE INSTALLATION POSITIONS

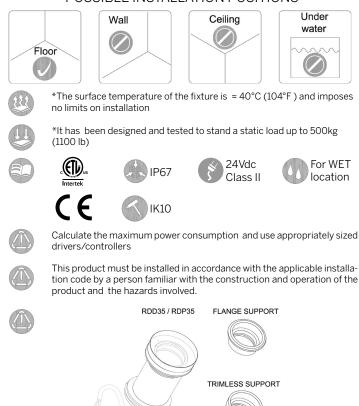


tion code by a person familiar with the construction and operation of the

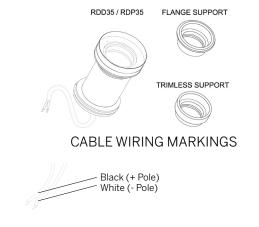

FILIX


# nter•lux WIRING MARKINGS

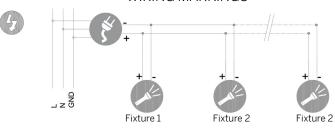


# IF CONNECTOR IS NOT SUPPORTED





# **INSTALLATION GUIDE**

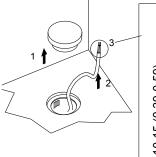

I,

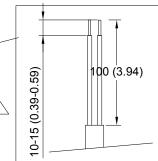

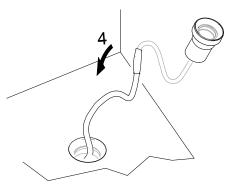

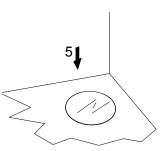

### LEGEND



#### inter-lux.com