

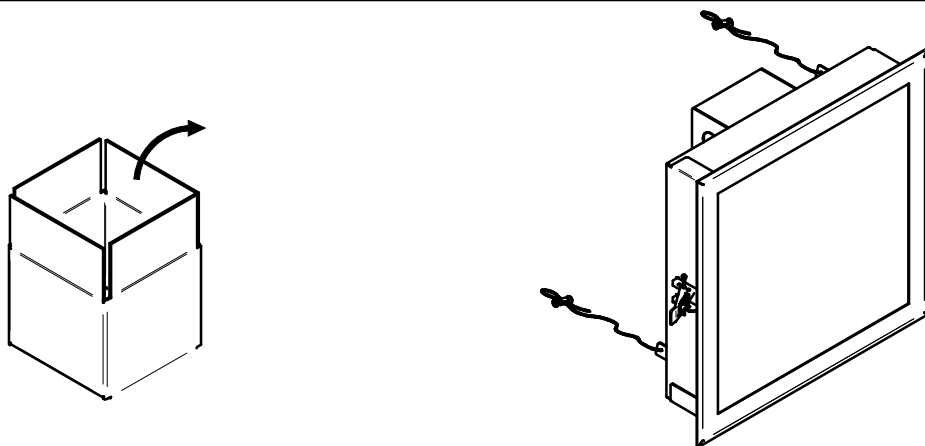
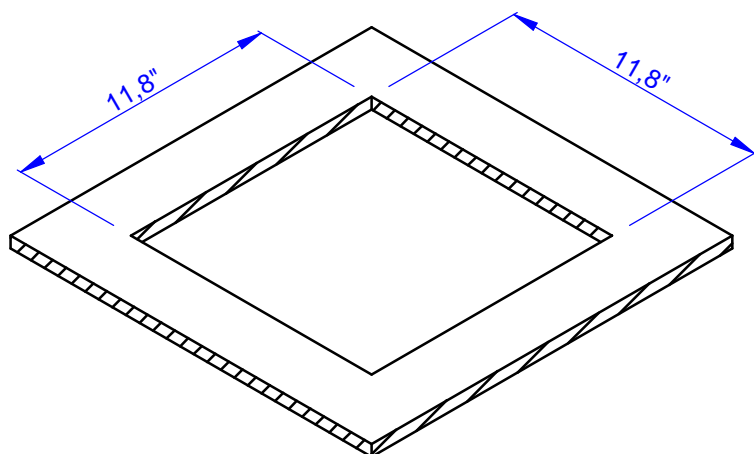
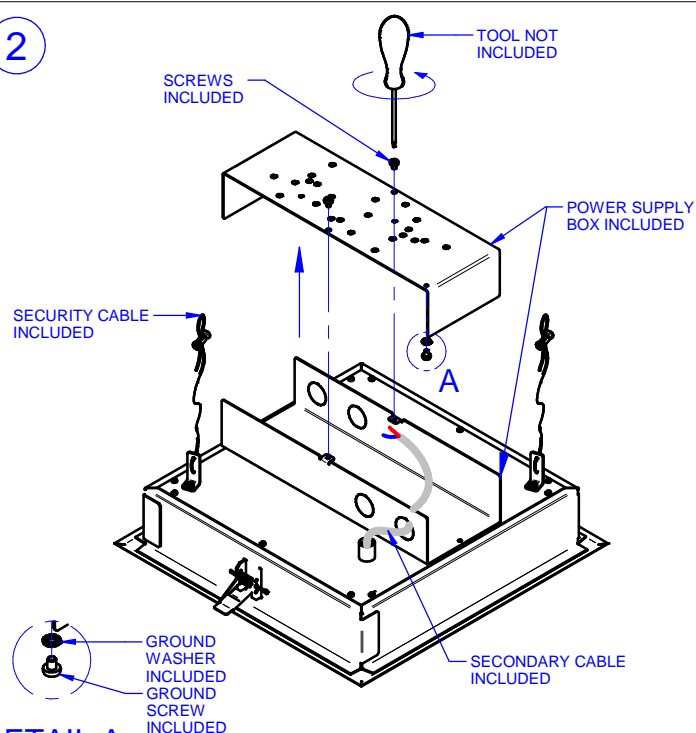
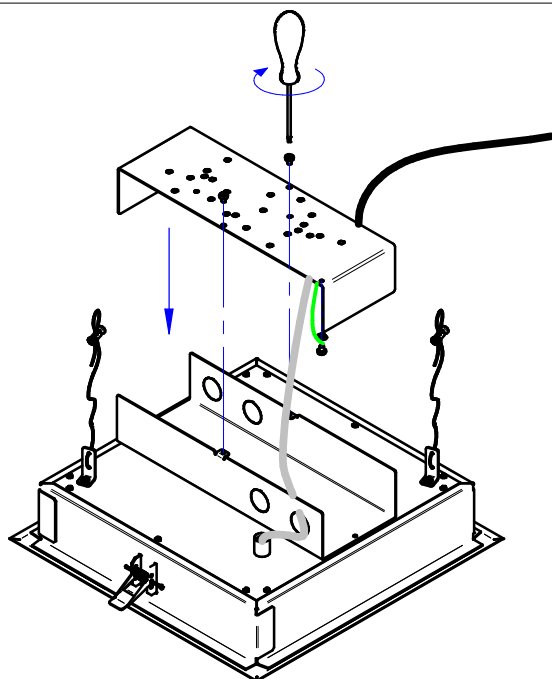
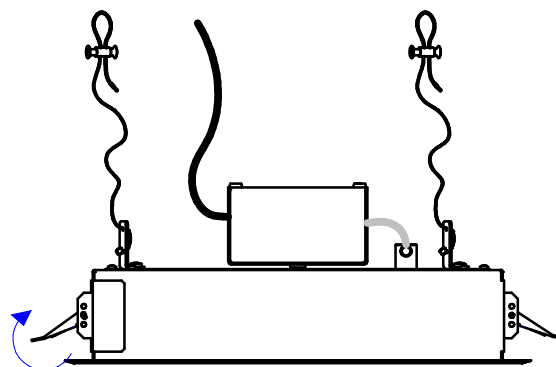


**EDITH RECESSED****1****DIMENSIONS HOLE****2****DETAIL A****3****4**


5

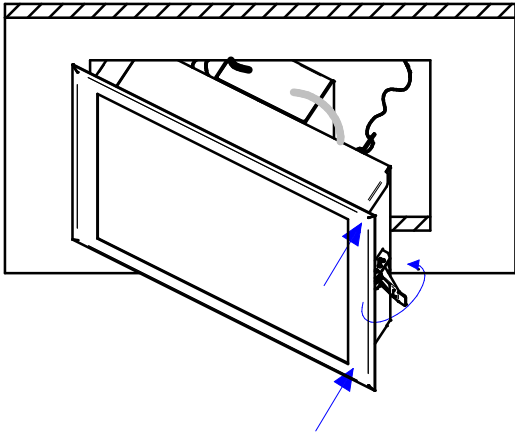



6

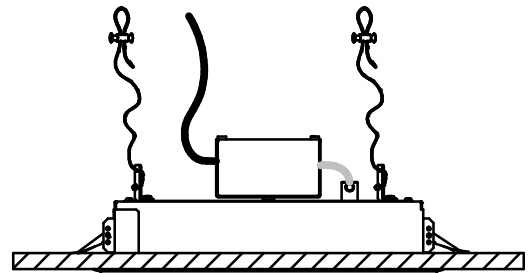

7

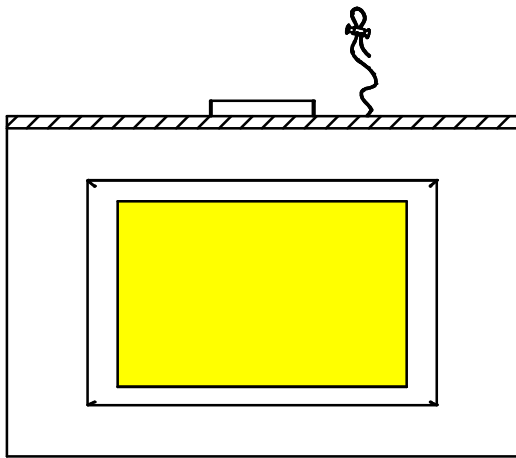**WARNING!!!**

DURING INSTALLATION DO NOT TOUCH THE SPEAKER OPAL. ARTICLE CAN BE HANDLED ONLY IN EXTERNAL FRAME.

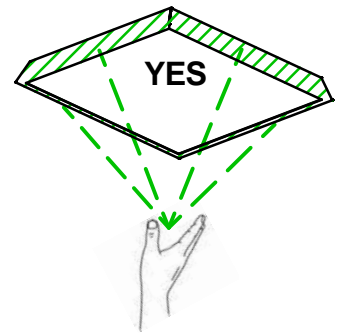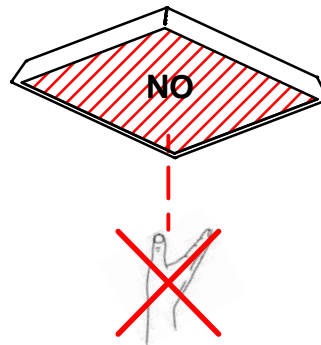

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED

### MOUNTING INSTRUCTIONS

READ ALL OF THESE INSTRUCTIONS BEFORE INSTALLING FIXTURES

- Keep all of the instructions for future reference
- Turn off power before installing fixture
- Installation is to be performed by a qualified electrician only
- All installations must conform to the National Electrical Code as well as all local jurisdictional codes and regulations
- Any modification of the luminaire will void any and all written or implied warranties
- The manufacture accepts no responsibility for damage to persons or property arising through improper use or installation

### INSTALLATION SEQUENCE

- Cut the correct size opening in the ceiling [1]
- Remove the cover up of the power supply box [2]
- Fix the power supply on the cover up of the power supply box
- Connect the secondary cable on the power supply (wire red + positive , wire blue - negative)
- Ensure power is off before connecting power supply to line voltage
- Connect the power supply on the line voltage and connect the ground
- Close the cover up of the power supply box [3]
- Fix the security cables
- Turn the first spring and insert one side on the hole in the ceiling [4 - 5]
- Turn the second spring and insert the Edith Recessed on the hole in the ceiling [5]
- WARNING - Be sure secondary wiring is connected to driver BEFORE energizing to avoid LED failure
- Energize