

Chicago Plenum/Insulated Ceiling Housing INSTALLATION INSTRUCTIONS

FINISH: GALVANIZED STEEL

PART. NO. CP/IC-WG-B100SAG22-X



INSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES; BY A QUALIFIED ELECTRICIAN.



FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS MAY RESULT IN DEATH OR SERIOUS INJURY.

WARNING:

READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE


CAUTION:

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT.


CAUTION:

INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.


ISOMETRIC VIEWS

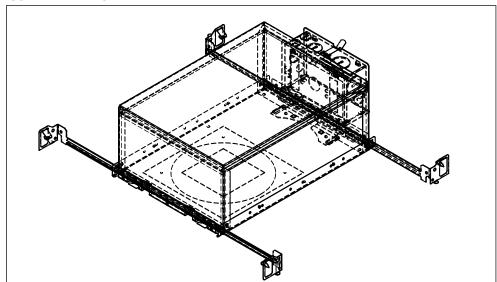


PACKAGE INCLUDES:

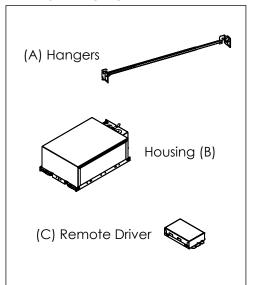

ITEMS NEEDED (SUPPLIED BY OTHERS):

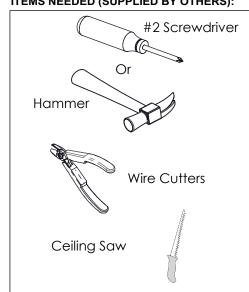


MOUNTING DIMENSIONS

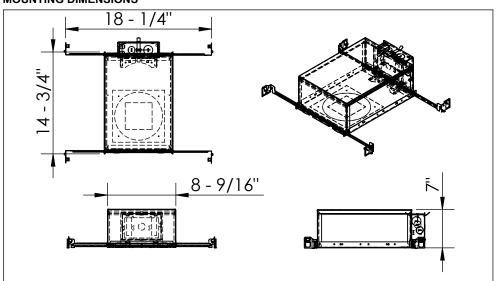


MOUNTING POSITIONS

Hangers can attach to 2 sides of the construction plate as shown below. (Top of Housing hidden for clarity)

PRODUCT

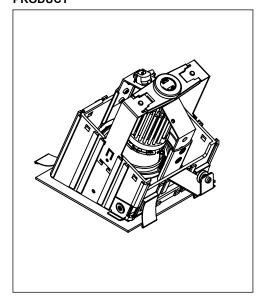


SURFACE MOUNT INSTALLATION STEPS

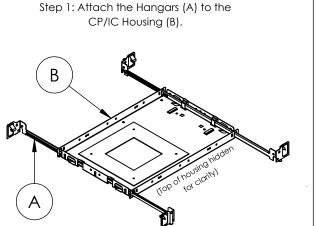


(Top of Housing hidden for clarity)

Step 2: Determine mounting position, adjust width of Hangers (A) until flush with surface. 2A- Anchor clips into wood joists

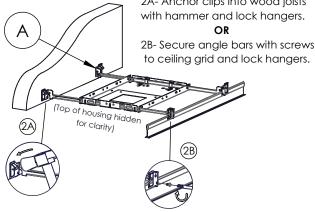


(Top of Housing hidden for clarity)




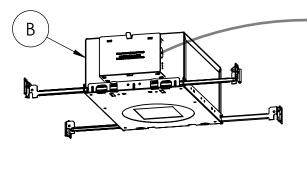


Step 4: Install the ceiling. Make sure that the Housing (B) is flat on top of the ceiling.

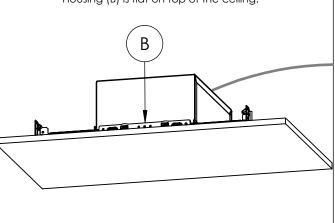

Step 5: Cut ceiling hole that matches the position and dimensions of the Construction Plate (B) hole.

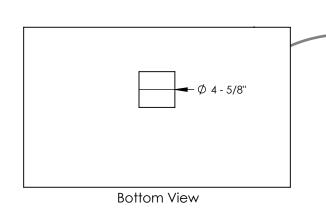

Step 6: Install product (refer to Product

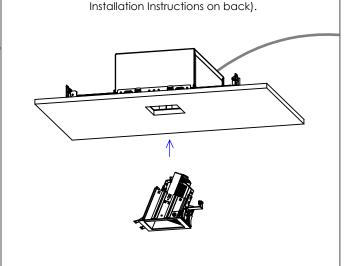

DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL ANGULAR: MACH ± 0.5 BEND ± 1.0 ONE PLACE DECIMAL $\pm\,\,$ 0.05 TWO PLACE DECIMAL ± 0.01

THREE PLACE DECIMAL ± 0.005

inter•lux

3RD ANGLE PROJECTION



Phone: (410)381-1497

Web: www.inter-lux.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION
IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.



Whitegoods Bezel 100 Square Angled Gimbal 22

INSTALLATION INSTRUCTIONS

FINISH: WHITE

PART. NO. CP/IC-WG-B100SAG22-X

ITEMS NEEDED (SUPPLIED BY OTHERS):

WARNING:

INSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES; BY A QUALIFIED ELECTRICIAN.



WARNING: READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE


INSTALLING LUMINAIRE. KEEP THESE

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT.


CAUTION:

CAUTION:

INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.

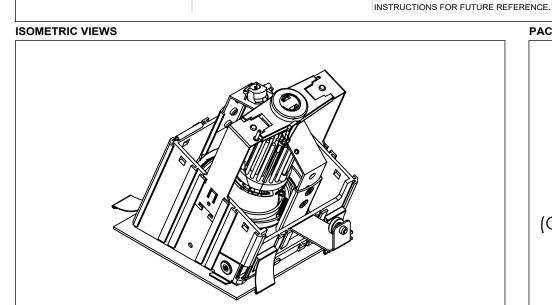

PACKAGE INCLUDES:

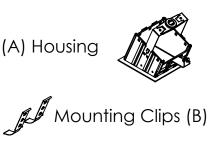





Light Engine (D)

Philips Head #2 Screwdriver Wire Connectors Wire Strippers Ceiling Saw


MOUNTING DIMENSIONS

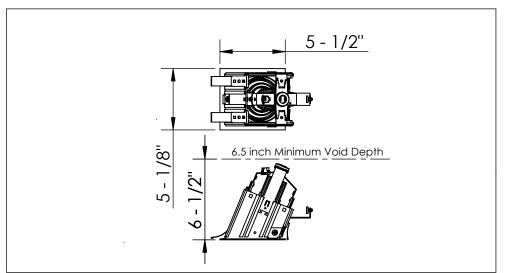

MOUNTING OPTIONS

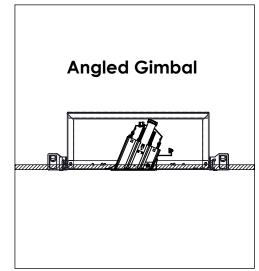


DIFFUSER POSITIONS

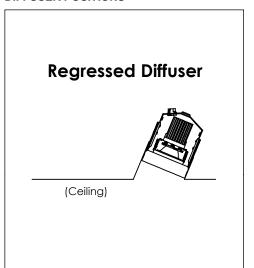


TURN OFF MAIN POWER BEFORE PROCEEDING!

 Step 1: Complete up to and including step 5 of the Chicago Plenum Surface Mount Installation Steps. (Refer to Ceiling Thickness Key before installing)




Step 4: Position Housing (A) into hole and push it all the way in. Once Housing (A) is in position push the Mounting Clips (B) own until the Housing (A) is secure in the ceiling

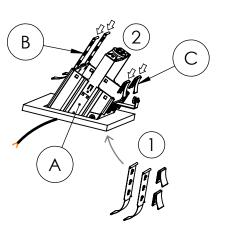


MOUNTING INSTALLATION STEPS

Step 2: Locate the DC Power wires. Then pull them through the hole in the Plenum Box and ceiling.

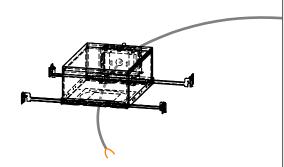


Step 5: Attach the safety cable to the Light Engine (C)(1). Then make the connection between the DC Power wires and Light Engine (C) using the supplied connectors (2).

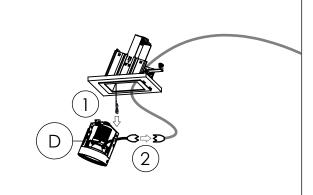


(CP/IC Housing hidden for clarity)

Step 3: Pull DC Power wires through Housing (B). Push the Mounting Clips (B) into shown slots until you hear the first tab engage.

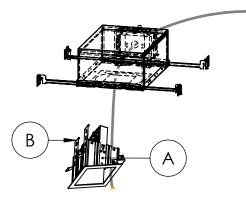

(Ceiling hidden for clarity)

Step 6: Push the Light Engine (C) up into the Housing (A) until it locks into the spring latch. Tilt light into desired

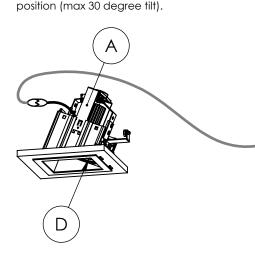

(CP/IC Housing hidden for clarity)

(CP/IC Housing filade					
Ceiling Thickness Key					
Material	Wood	Gypsum	Metal	Tile	
Minimum	1/4"	1/2"	1/16"	1/2"	
Maximum	1"	1"	11/16"	1"	

Phone: (410)381-1497

Web: www.inter-lux.com

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.

DRAWING NOT TO SCALE

940-B100SAG REV. B

*Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice.



INSTALL PRODUCT IN ACCORDANCE VITH LOCAL AND NATIONAL ELECTRICAL CODES; BY A QUALIFIED ELECTRICIAN.




FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS MAY RESULT IN DEATH OR SERIOUS INJURY.

READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT

INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.

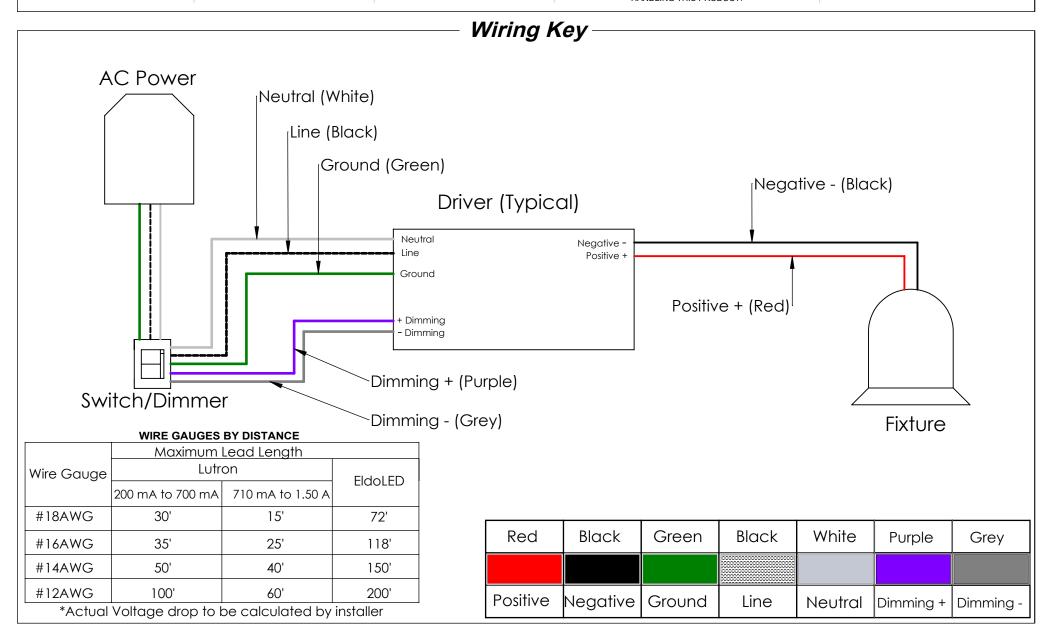



PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED. Phone: (410)381-1497 Web: www.inter-lux.com SHEET 3 OF 3

DRIVER MANUFACTURER. THE USE OF NON INTER-LUX PROVIDED DRIVERS VOIDS PRODUCT WARRANTY.