
inter•lux

Mole X

Installation and Maintenance Instructions

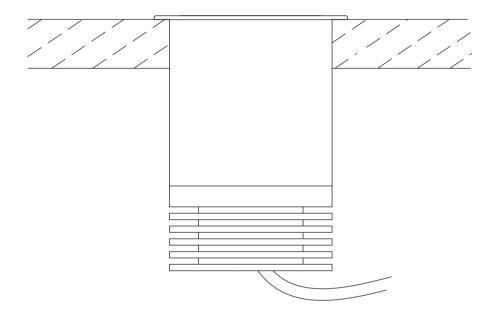

 
IMPORTANT: All wiring connections must be made before switching on mains power.

Xicato LED Module

IP66 Dust tight and protected against powerful jets of water.

X This product should not be disposed of in your general waste

Please retain these instructions for future reference



- E Suitable for Exterior Use
- **C**€ European Conformity

STOANE LIGHTING

1

inter•lux

Electrical Supply

Installation must be carried out by a qualified electrician in accordance with BS 7671:2008 Wiring Regulations. 230/240V AC 50/60Hz mains supply to a suitable SELV LED Driver.

Site conditions: LED equipment is more susceptible to static damage and overvoltage than previous technology. Before handling or connecting to the mains supply ensure that all MSL products are protected from static discharge and that the mains supply is to regulation. (230V + 10 - 6%)

This fitting is supplied with a Xicato LED module. Refer to the fitting label for the module version and wattage. More information on the module can be found at www.xicato.com/support

Mains cables must be double insulated, strain relieved and separated from E.L.V output cables.

This unit requires a constant current driver. 700mA Max.

Observe polarity: Positive (+) is marked as RED. Incorrect supply or reverse polarity can cause irreparable damage.

All connections must be made before switching on mains. If the supply is energised prior to making the connections to the fitting then the resulting surge will damage the LED.

All lighting equipment is delicate and easily damaged through misuse or inappropriate installation (mechanical or electrical). Repairs and replacements may cause delays and will be chargeable. Contact MSL for support if required. For full warranty terms & conditions please visit our website.

Dimming control circuit source must be of SELV insulation class.

Ensure supply driver and connectors are housed indoors OR in a suitably IP rated enclosure.

Installation

Check that the mounting surface is suitable for the installation of this fitting.

An 86mm diameter hole is required for mounting.

- Step 1 Make mains connections to SELV LED driver and extra low voltage connections to the fitting.
- Step 2 Insert the fitting into the cutout and secure in place with silicone or similar.

After opening the sealed portion of the luminaire for any reason, MSL recommends running the fitting for 15 minutes with the lid open to expel moisture before closing it up. This will prevent condensation on the lens and protect the fitting from corrosion.

WARNING: Do not look at exposed LED lamps in operation. Eye injury can result.

Cleaning:

Fully isolate the fitting and allow to cool.

Clean the fitting with a damp lint free cloth and a mild solution of soap and water. The fitting must be completely dry before reconnecting power.

Incompatible or abrasive chemicals can damage the fitting, contact MSL for advice if required.

inter•lux

