Q1361-E

INSTALLATION INSTRUCTIONS





JOE




Baltimore, MD 21227 Phone (410) 381-1497 inter-lux.com




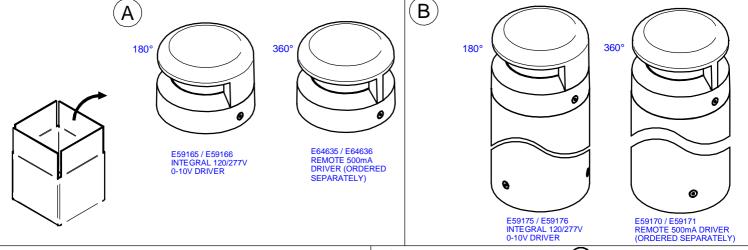


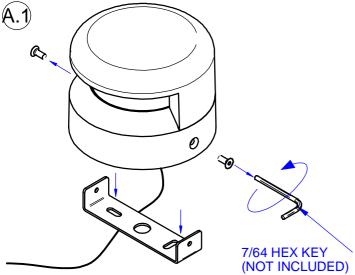


REMOTE DRIVER VERSION: 3 ft DIRECT BURIAL CABLE INSTALLED INTEGRAL DRIVER VERSION: 3 ft DIRECT BURIAL CABLE + MALE CONNECTOR INSTALLED FEMALE CONNECTOR INCLUDED (WIRING INSTRUCTION ON PAGE 3-4)

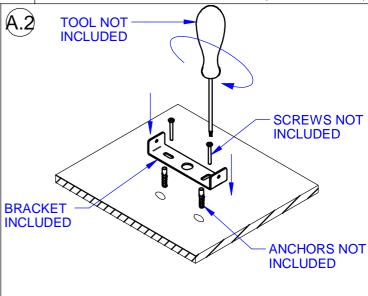


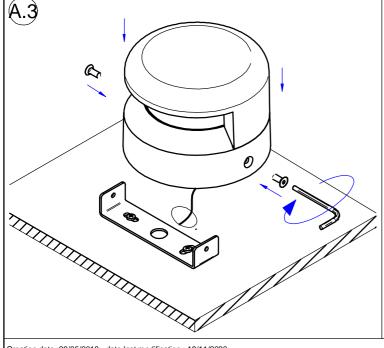

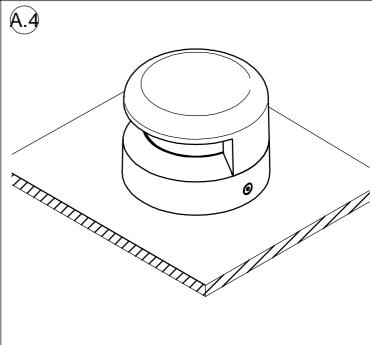


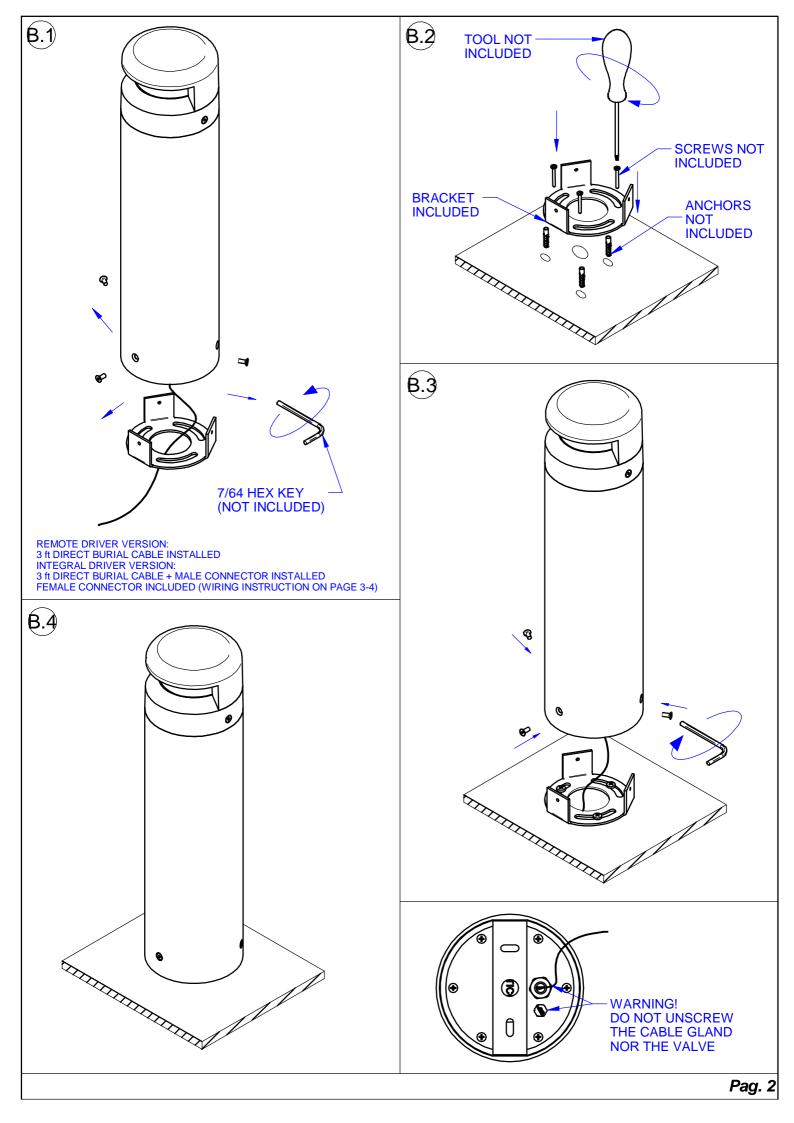


BRACKET MODEL JOE A

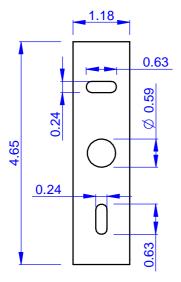


BRACKET MODEL JOE B

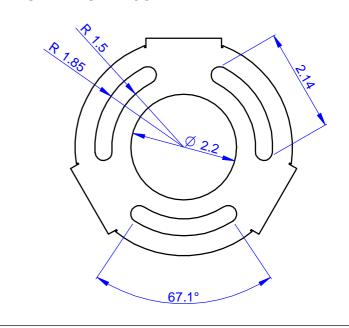

CABLE EXIT POSITION

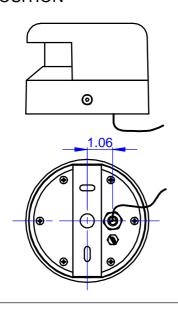

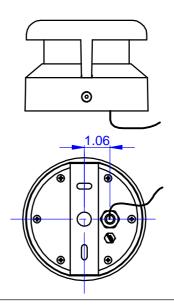

WIRING DIAGRAM (integral driver version)



POLE 1 = LINE

POLE 2 = NEUTRAL


POLE 3 = 0-10V +

POLE 4 = GROUND


POLE 5 = 0-10V -






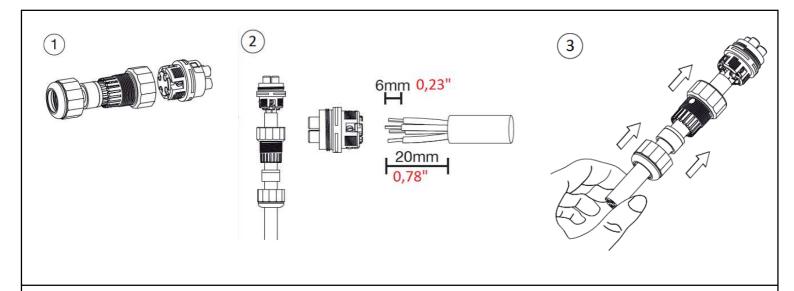

WIRING DIAGRAM (remote driver version)

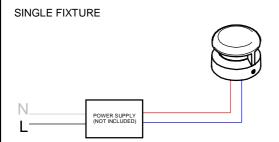

MULTIPLE FIXTURES WIRED IN SERIES (Constant Current)

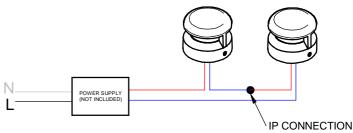

WARNING!

DO NOT CONNECT THE FIXTURES TO A LIVE DRIVER, DOING SO WILL IMMEDIATELY AND PERMANENTLY DAMAGE THE LEDs.

Secondary Cable Colours	Pole
Red wire	+
Blue wire	-

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED

MOUNTING INSTRUCTIONS

READ ALL OF THESE INSTRUCTIONS BEFORE INSTALLING FIXTURES \cdot CAUTION: USE ONLY WITH CLASS 2 POWER UNIT

- · Keep all of the instructions for future reference
- · Turn off power before installing fixture
- · Installation is to be performed by a qualified electrician only
- · All installations must conform to the National Electrical Code as well as all local jurisdictional codes and regulations
- · Any modification of the luminaire will void any and all written or implied warranties
- · The manufacture accepts no responsibility for damage to persons or property airing through improper use or installation

INSTALLATION SEQUENCE

- Mount remote driver in accessible well ventilated space
- Ensure power is off before connecting driver to line voltage
- Unscrew the screws for remove the bracket from the Joe [A.1-B.1]
- Fix the bracket on the ground/floor [A.2-B.2]
- Fix the Joe on the bracket with the screws [A.3-B.3]
- Make the wirings as shown in the wiring diagram.
- WARNING Be sure secondary wiring is connected to driver BEFORE energizing to avoid LED failure

CAUTION!!! DO NOT UNSCREW THE PLUG, THE CABLE GLAND AND THE VALVE OF ANY JOE MODEL