

Chicago Plenum Construction Plate Integral Driver

INSTALLATION INSTRUCTIONS



INSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES; BY A QUALIFIED ELECTRICIAN.



FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS MAY RESULT IN DEATH OR SERIOUS INJURY

WARNING:


READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE

CAUTION:


THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT.

INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.




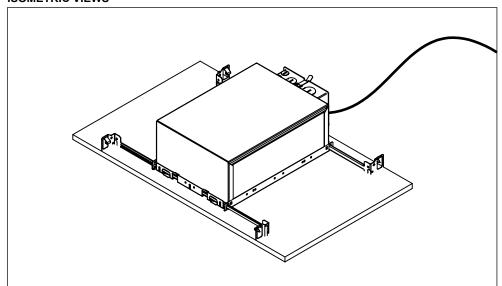


PACKAGE INCLUDES:

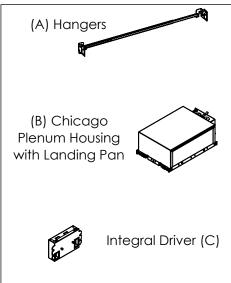


ITEMS NEEDED (SUPPLIED BY OTHERS):

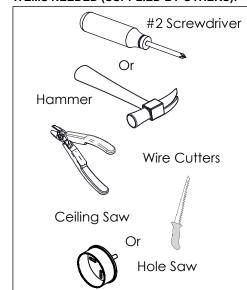

MOUNTING DIMENSIONS

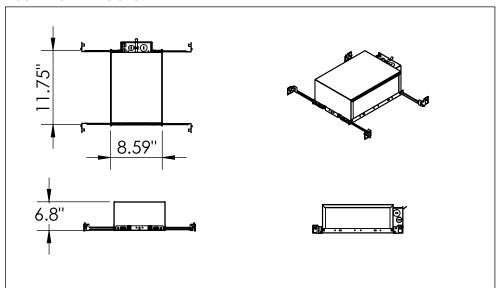


PRODUCT POSITIONS

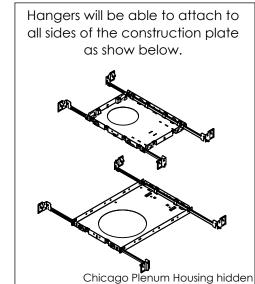

CEILING HOLE CUT-OUT CHART


CELENTO HOLE GOT GOT GHART		
	Round	Square
GDL	Ø 2-3/4''	N/A
GDL Mark II	Ø 2-3/4''	□2-3/4"
ProTools D	Ø 4-3/4''	□ 4-3/4"
ProTools DL	Ø 4-3/4''	□ 4-3/4"
ProTools DLX	Ø 4-3/4''	□ 4-3/4"

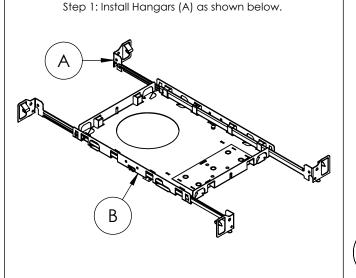

Chicago Plenum Housing hidden


Step 2: Determine mounting position, adjust width of Hangers (A) until flush with surface. 1A- Anchor clips into wood joists with hammer and lock hangers. 1B- Secure angle bars with screws

SURFACE MOUNT INSTALL

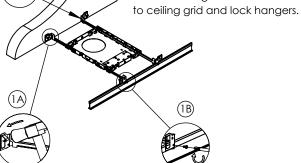


Chicago Plenum Housing hidden

Step 3: Install the Integral Driver (C) and make connection with AC power inside of Junction Box.

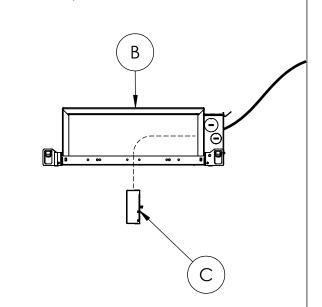

Step 6: Insert product in accordance with

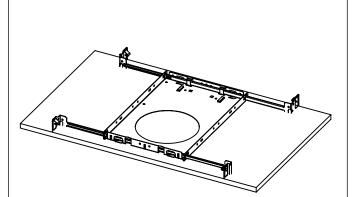

inter-lux


Step 4: Install the ceiling, ensuring the Chicago

Plenum Housing and Landing Pan (B)

ends up flat on top of the ceiling.

Chicago Plenum Housing hidden

*Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice.

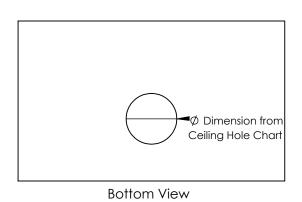


Step 5: Cut ceiling hole that matches the position and

dimensions of the Landing Pan (B) hole. For openings

less than \emptyset 3.9", the ceiling must be accessible.

provided Installation Instructions.

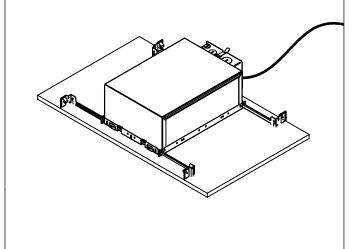

Phone: (410)381-1497 Web: www.inter-lux.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.

SHEET 1 OF 2



Wiring Instructions



INSTALL PRODUCT IN ACCORDANCE VITH LOCAL AND NATIONAL ELECTRICAL CODES; BY A QUALIFIED ELECTRICIAN.




FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS MAY RESULT IN DEATH OR SERIOUS INJURY.

WARNING:

READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT

INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.

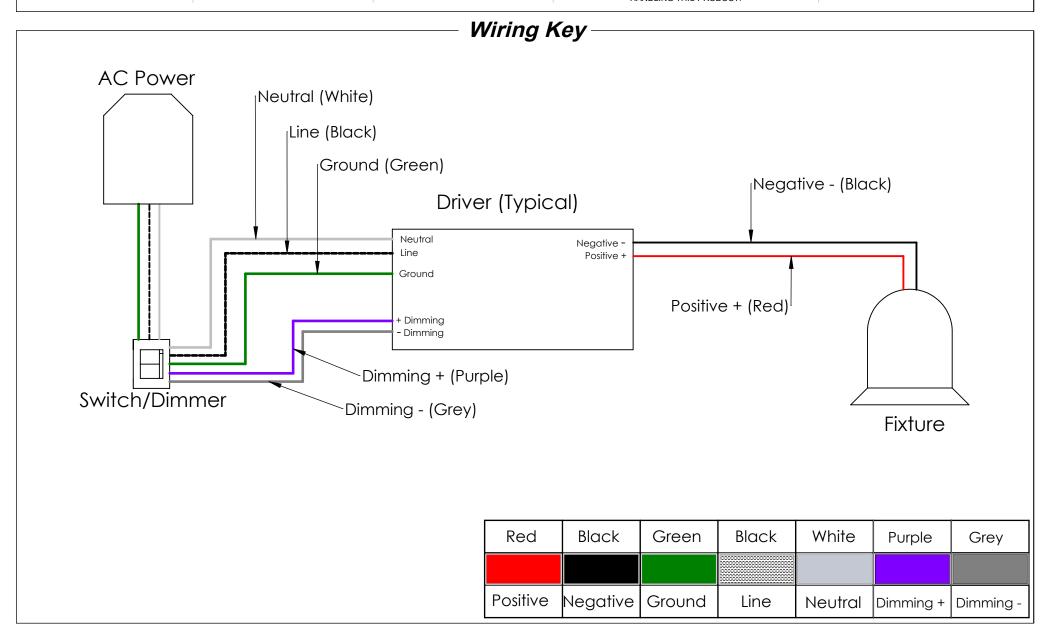



PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED. Phone: (410)381-1497 Web: www.inter-lux.com SHEET 2 OF 2

ALL SHOWN DRIVERS ARE INTER-LUX PROVIDED. FOR NON INTER-LUX PROVIDED DRIVERS PLEASE REFER TO DRIVER MANUFACTURER. THE USE OF NON INTER-LUX PROVIDED DRIVERS VOIDS PRODUCT WARRANTY.