

Whitegoods Linear Recessed Bezel - Grid

INSTALLATION INSTRUCTIONS

WG-20LRR-RGT



NSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES BY A QUALIFIED ELECTRICIAN.






SAFETY INSTRUCTIONS

NCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE SAVE INSTRUCTIONS FOR FUTURE USE

CAUTION

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILI

INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.

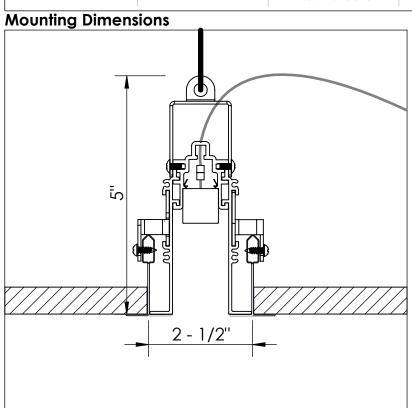

Isometric View



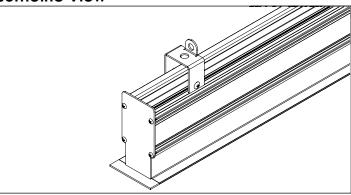


Photo Rendering

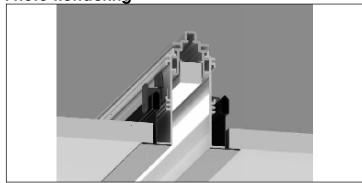

Package Includes

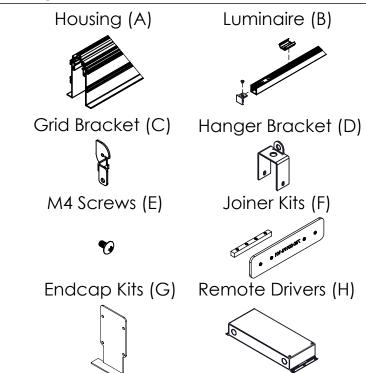

Items needed (supplied by others)

Philips Head #2 Screwdriver



Wire Connectors

Wire Strippers



1.5 and 2mm hex head Allen Key

Hanger Wires/Suspension Rods



Self tapping Screws



410-381-1497

inter-lux.com

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.

PAGE 1 OF 4



Whitegoods Linear Recessed Bezel - Grid **INSTALLATION INSTRUCTIONS**

WG-20LRB-G



NSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES BY A QUALIFIED ELECTRICIAN.

FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS MAY RESULT IN DEATH OR SERIOUS INJURY



READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE SAVE INSTRUCTIONS FOR FUTURE USE

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING, STORE IN A CLEAN, COOL AND DRY PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS

INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.


INSTALLATION INSTRUCTIONS


LOCATE AND REVIEW ANY CONSTRUCTION PLANS AND INTER-LUX RECORD DRAWINGS FOR ALL FIXTURE RUNS. IT IS RECOMMENDED TO LOCATE AND LAY OUT ALL COMPONENTS FOR EACH FIXTURE "RUN", A FIXTURE RUN TYPICALLY CONSISTS OF JOINERS, LENGTHS OF HOUSING, AND ENDCAPS.

BE SURE TO IDENTIFY ALL CORRECT LENGTHS FOR EACH FIXTURE RUN.


Step 1; Prepare Ceiling: Turn off Main Power **before Installing.** When installing T-grid, ensure there is 2 - 1/2" between the grids to accomodate the Housings (A).

Step 2; Install Remote Drivers: Install Remote Drivers (H) and run low voltage cables to the intended position(s) of the Luminaires (B).

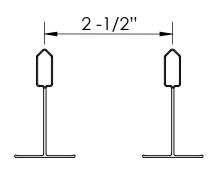


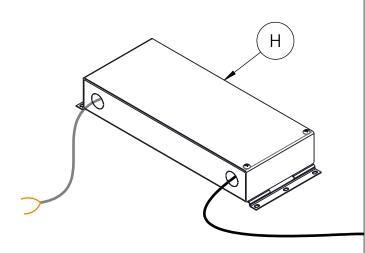

Step 3; Mounting Hardware: Install Mounting Clips onto Luminaires (B) using provided screws. If Stand alone(s), skip the rest of this step. Otherwise, Install Endcaps (G) on first and last Housing (A) and Luminaire (B) of each run. Then install Joiners (F) on one side of each Housing (A).

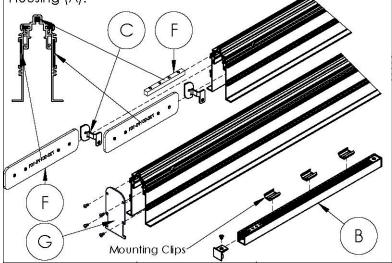

Step 4; Prepare Housings: Determine which end the Luminaire (B) will be located at in the Housing (A). Then drill 1/4" feed holes through Housings (A) as shown below which will line up with Low voltage cables. Next attach Hanger Brackets (D) to Housing (A) using M4 screws (E).

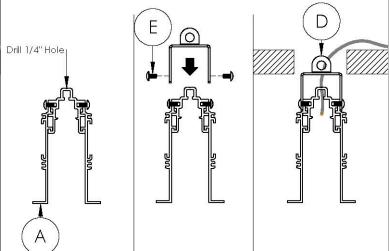



410-381-1497

inter-lux.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.

PAGE 2 OF 4

940-20LRR-RGT



Whitegoods Linear Recessed Bezel - Grid **INSTALLATION INSTRUCTIONS**

WG-20LRB-G



INSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES BY A QUALIFIED ELECTRICIAN.





READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE SAVE INSTRUCTIONS FOR FUTURE USE.

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION, ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT, AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT


INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.

INSTALLATION INSTRUCTIONS


LOCATE AND REVIEW ANY CONSTRUCTION PLANS AND INTER-LUX RECORD DRAWINGS FOR ALL FIXTURE RUNS.

IT IS RECOMMENDED TO LOCATE AND LAY OUT ALL COMPONENTS FOR EACH FIXTURE "RUN", A FIXTURE RUN TYPICALLY CONSISTS OF JOINERS, LENGTHS OF HOUSING, AND ENDCAPS. BE SURE TO IDENTIFY ALL CORRECT LENGTHS FOR EACH FIXTURE RUN.

Step 5; Install Housings: Position Housings (A) onto grid as shown below. Position Joiners (F) between every Housing (A) joint and tighten set screws to secure Housings (A) to each other. Then mechanically fasten the Grid

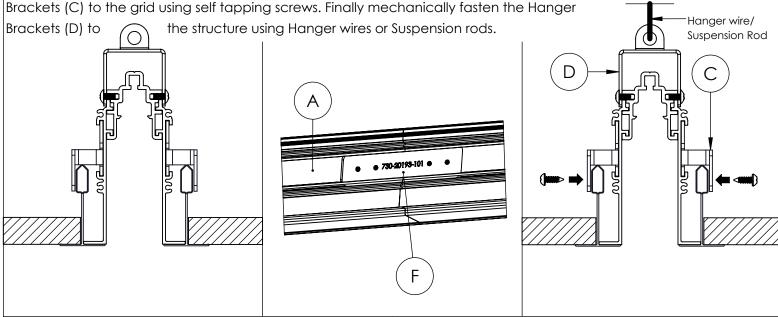

Step 6; Install Luminaires: Connect Luminaires (B) to Low Voltage Cables. Then install Luminaires (B) by pushing them up until they snap into Housings (A). If possible, arrange Luminaire (B) lenses so that they overlap fixture joints. Finally, power the Luminaires (B) to double check electrical connections.

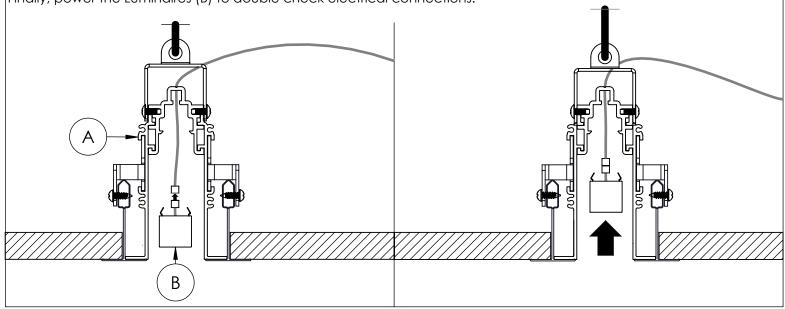



410-381-1497

inter-lux.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.

PAGE 3 OF 4



Whitegoods Linear Recessed Bezel - Grid INSTALLATION INSTRUCTIONS

WG-20LRB-G



INSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES BY A QUALIFIED ELECTRICIAN.







INSTRUCTIONS FOR FUTURE USE

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT.

INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED

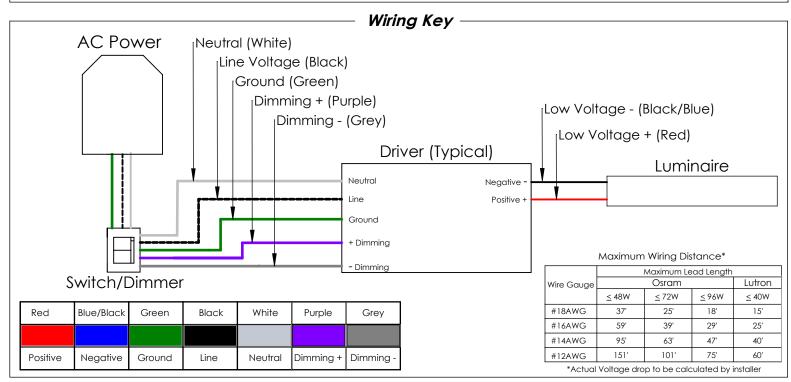


Driver Wiring Diagrams

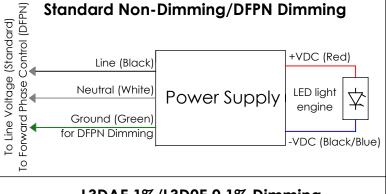


D3W 1% 3-Wire Dimming



L3DAE 1%/L3D0E 0.1% Dimming

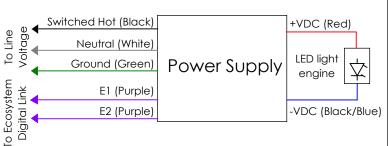

0-10V Dimming

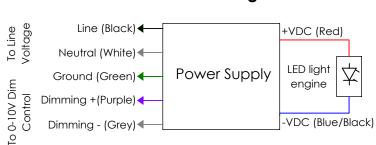

NOTE: ALL SHOWN DRIVERS ARE INTER-LUX PROVIDED. FOR NON INTER-LUX PROVIDED DRIVERS PLEASE REFER TO DRIVER MANUFACTURERS. THE USE OF NON INTER-LUX PROVIDED DRIVERS VOIDS PRODUCT WARRANTY.



410-381-1497

inter-lux.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHISITED.

PAGE 4 OF 4