

### Whitegoods ProTools DL Downlight Bezel Trim INSTALLATION INSTRUCTIONS

WG-100RPTDL-RBT



NSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES BY A QUALIFIED ELECTRICIAN.





READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE. SAVE INSTRUCTIONS FOR FUTURE USE.

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT.


INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED

### **Mounting Dimensions**

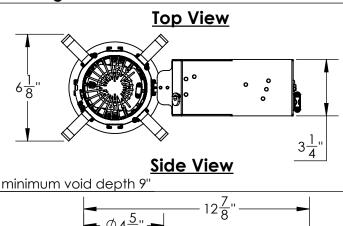


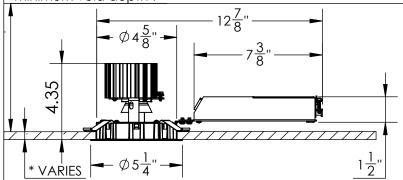


\* Minimum and Maximum thickness of ceiling are 1/16" and 1", respectively.

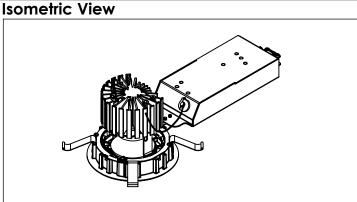


### **Photo Rendering**

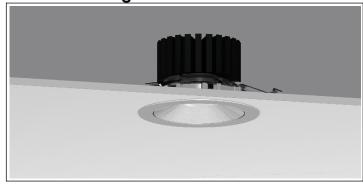

### Package Includes:

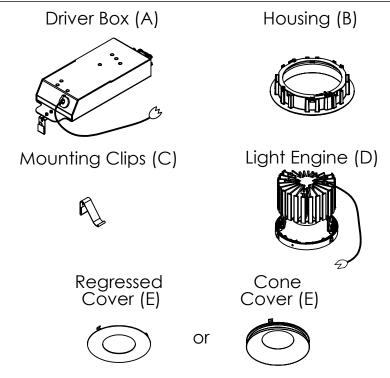

### Items needed (supplied by others)

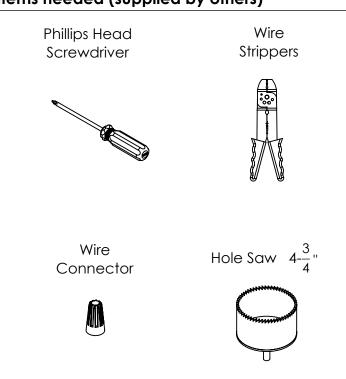

inter•lux

410-381-1497

inter-lux.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.

PAGE 1 OF 4



### Whitegoods ProTools DL Downlight Bezel Trim INSTALLATION INSTRUCTIONS

WG-100RPTDL-RBT



NSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES BY A QUALIFIED ELECTRICIAN

FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS MAY RESULT IN DEATH OR SERIOUS INJURY



READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE. SAVE INSTRUCTIONS FOR FUTURE USE

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION, ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT, AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT

INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED

### INSTALLATION INSTRUCTIONS

 
LOCATE AND REVIEW ANY CONSTRUCTION PLANS AND INTER-LUX RECORD DRAWINGS FOR ALL FIXTURE RUNS. IT IS RECOMMENDED TO LOCATE AND LAY OUT ALL COMPONENTS FOR EACH FIXTURE "RUN", A FIXTURE RUN TYPICALLY CONSISTS OF JOINERS, LENGTHS OF HOUSING, AND ENDCAPS. BE SURE TO IDENTIFY ALL CORRECT LENGTHS FOR EACH FIXTURE RUN.


Step 1; Prepare Ceiling: Turn off Power Before **Installation.** Cut a hole in the ceiling and clear insulation as shown below. The 12" space is made to accommodate the Driver (A) and 3" of clearance.


leads if required, through ceiling hole and Housing (B).

Step 2; Wiring: Pull AC Power, and dimming

### **Bottom View**




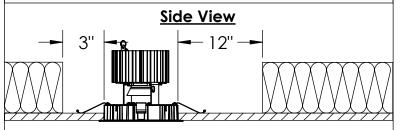


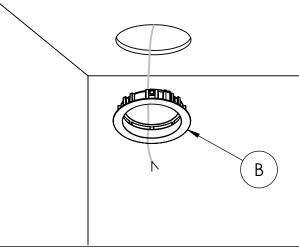

Step 3; Installation of Housing: Push Housing (B) up into ceiling hole. Then, push Mounting Clips (C) down into slots located on Housing (B). Make sure that all four clips are pushed down until the housing is secured in the ceiling.

**Step 4**; **Electrical Connection**: Make electrical connections between the Driver (A) and AC Power cable.

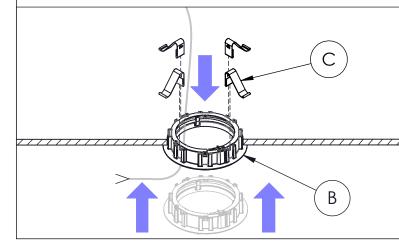

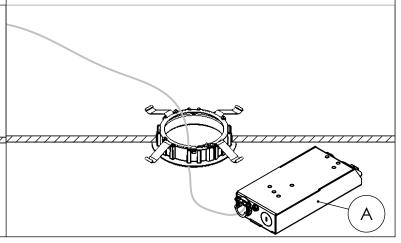



410-381-1497

inter-lux.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.

PAGE 2 OF 4



### Whitegoods ProTools DL Downlight Bezel Trim INSTALLATION INSTRUCTIONS

WG-100RPTDL-RBT



NSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES BY A QUALIFIED ELECTRICIAN

FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS MAY RESULT IN DEATH OR SERIOUS INJURY



READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE. SAVE INSTRUCTIONS FOR FUTURE USE

THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION, ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT


INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED

### INSTALLATION INSTRUCTIONS


LOCATE AND REVIEW ANY CONSTRUCTION PLANS AND INTER-LUX RECORD DRAWINGS FOR ALL FIXTURE RUNS.

IT IS RECOMMENDED TO LOCATE AND LAY OUT ALL COMPONENTS FOR EACH FIXTURE "RUN". A FIXTURE RUN TYPICALLY CONSISTS OF JOINERS, LENGTHS OF HOUSING, AND ENDCAPS. BE SURE TO IDENTIFY ALL CORRECT LENGTHS FOR EACH FIXTURE RUN.


Step 5; Installation of Driver Box: Push the Driver Box (A) up through the Housing (B). Insert the tab protruding from the Driver (A) into one of the slots located on Housing (B).

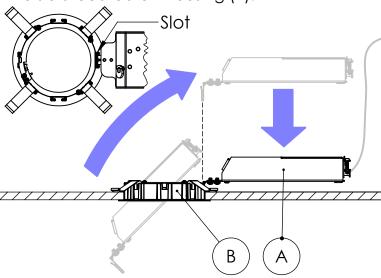


Step 6; Installation of Safety Cable: Attach the Safety Cable to the Light Engine (D). Then make the electrical connection between the Driver (A) and the Light Engine (D).

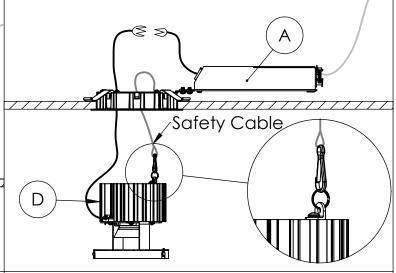

Step 7; Installation of Diffuser: Align legs of Diffuser (E) with holes on Light Engine (D), then Insert the Diffuser (E) into Light Engine (D) until it locks into place.

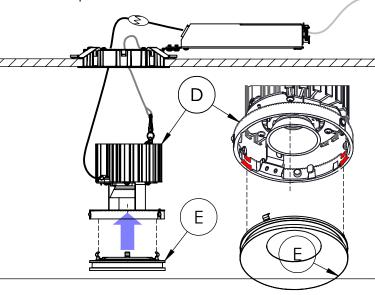

Step 8; Installation of Light Engine: Push the Light Engine (D) up into Housing (B) until it locks into place. Make sure pin of Housing enters between fins of Light Engine. Finally, power and test the Luminaire for proper operation.

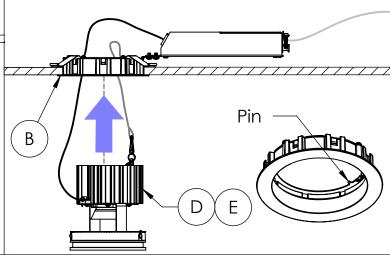

inter•lux

410-381-1497

inter-lux.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux, ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.

PAGE 3 OF 4



# Whitegoods ProTools DL Downlight Bezel Trim INSTALLATION INSTRUCTIONS

WG-100RPTDL-BT



WARNING:

INSTALL PRODUCT IN ACCORDANCE
WITH LOCAL AND NATIONAL ELECTRICAL
CODES BY A QUALIFIED ELECTRICIAN.



## $\triangle$

### ^


READ ALL SAFETY INSTRUCTIONS
INCLUDED WITH LUMINAIRE BEFORE
INSTALLING LUMINAIRE. SAVE
INSTRUCTIONS FOR FUTURE USE.

### CAUTION


THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT.

### CAUTION


INTER-LUX IS NOT RESPONSIBLE FOR THE
STRUCTURAL INTEGRITY OF THE BUILDING TO
SUPPORT THE LUMINAIRE. ADDITIONAL BACKING
MAY BE REQUIRED.

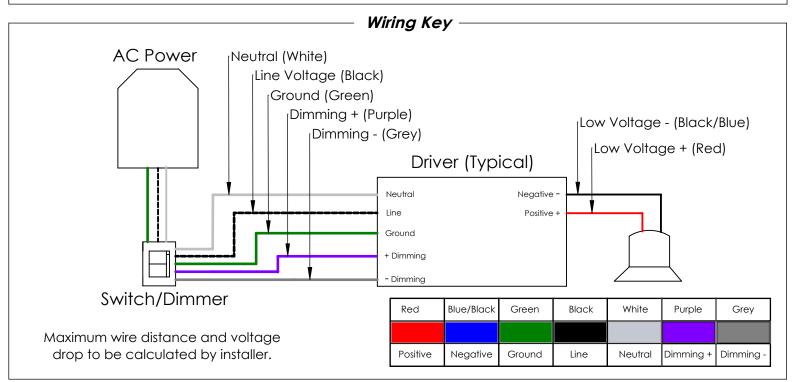


### **Driver Wiring Diagrams**

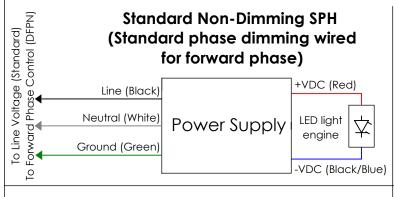


# DFPN (Lutron forward phase dimming) SPH (Standard phase dimming wired for reverse phase)

 

### PEQ1 1%/PEQ0 0.1% Dimming

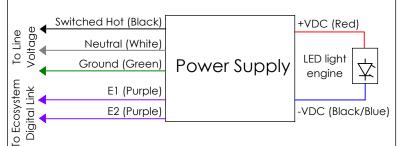

### 0-10V Dimming

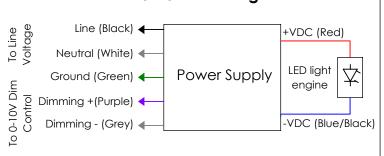

NOTE: ALL SHOWN DRIVERS ARE INTER-LUX PROVIDED. FOR NON INTER-LUX PROVIDED DRIVERS PLEASE REFER TO DRIVER MANUFACTURERS. THE USE OF NON INTER-LUX PROVIDED DRIVERS VOIDS PRODUCT WARRANTY.

inter•lux

410-381-1497

inter-lux.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.

PAGE 4 OF 4