Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).




To prevent electrical shock, disconnect electrical supply before installation or servicing. Never connect a live fixture!!!

Bezel Trim Linear Recessed Installation Instructions

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.


Individual / Starter Housing

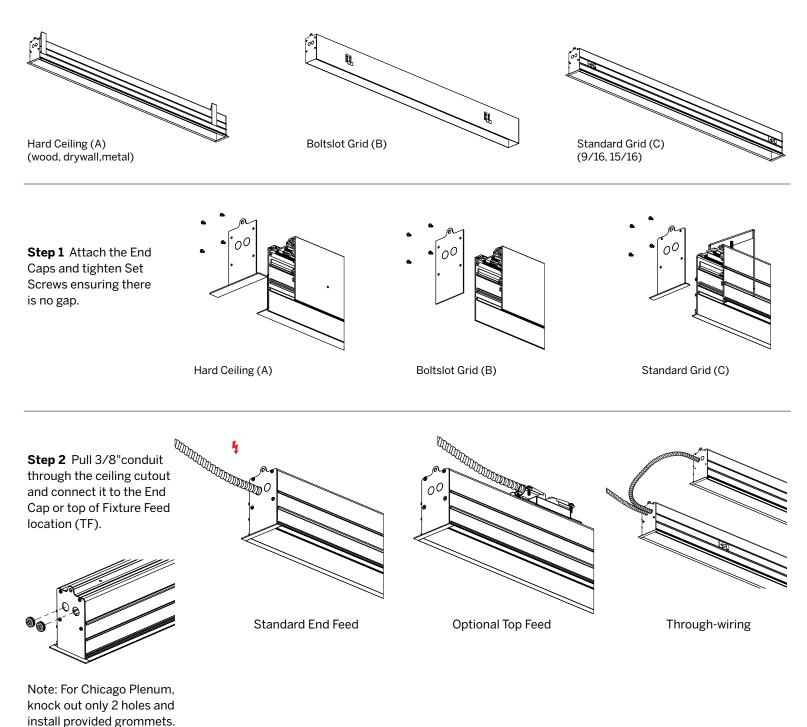

whitegoods



Bezel Trim Linear Recessed Installation Instructions

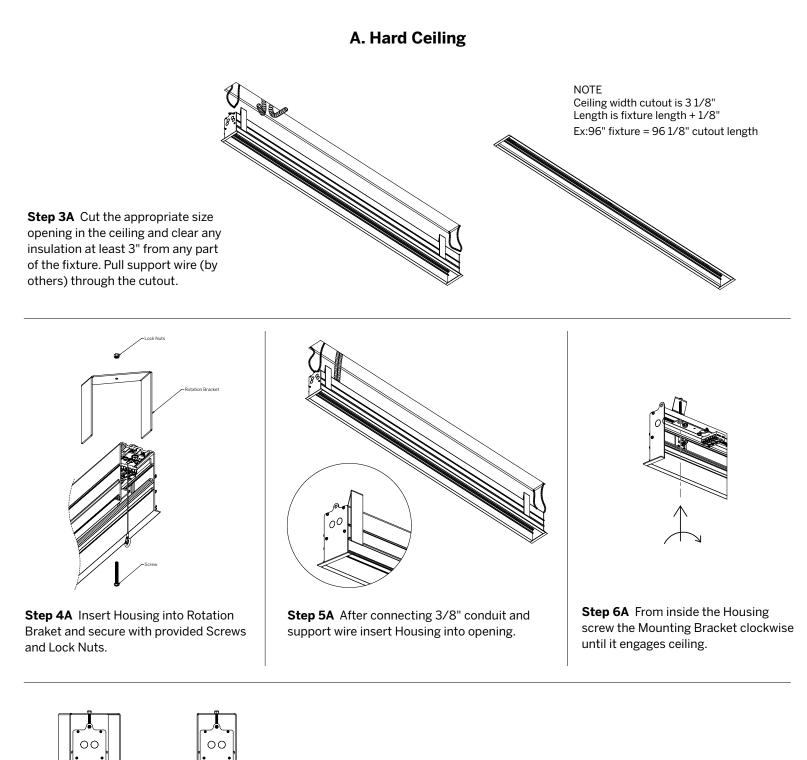

FIXED

 
NOT FIXED

Step 7A Ensure the Mounting Clip is fixed.


whitegoods

Bezel Trim Linear Recessed Installation Instructions


B. Boltslot Grid




Step 3B Frame an opening with adequately supported grid, and clear any insulation at least 3" from any part of the Housing.

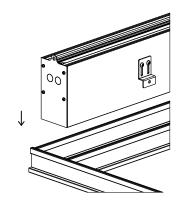

Step 4B Insert Housing into opening and install Clip on to Housing.

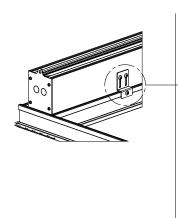


Step 5B Lower Housing so the Clip rests on the grid.

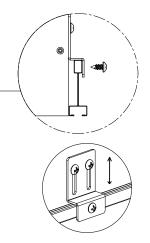

Step 6B With clip on the grid, screw into grid and adjust height to align the bottom of the Housing flush to the bottom of the grid, and tighten the Set Screw onto the grid.

C. Standard Grid

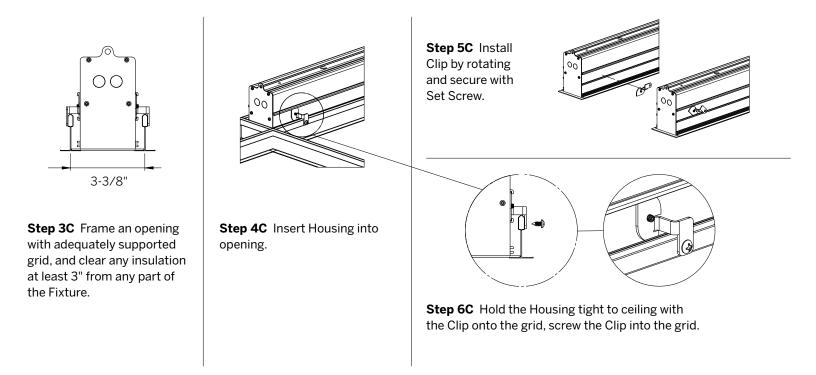

whitegoods





ProTools Linear

WG-60PTL-RBT/RG9/RG15/RGS WG-60PTLWW-RBT/RG9/RG15/RGS


Bezel Trim Linear Recessed Installation Instructions

Continuous Run Housing (see steps 1-6 for starter)

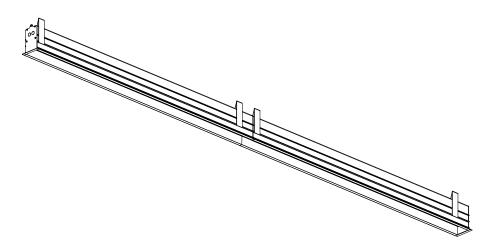

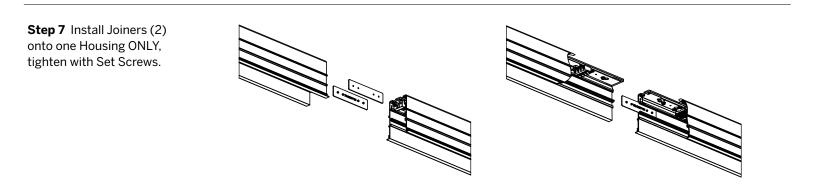

Step 8 Slide joining Housing onto Joiners and tighten Set Screws.

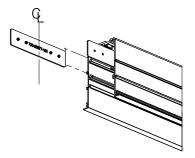




410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.



Bezel Trim Linear Recessed Installation Instructions

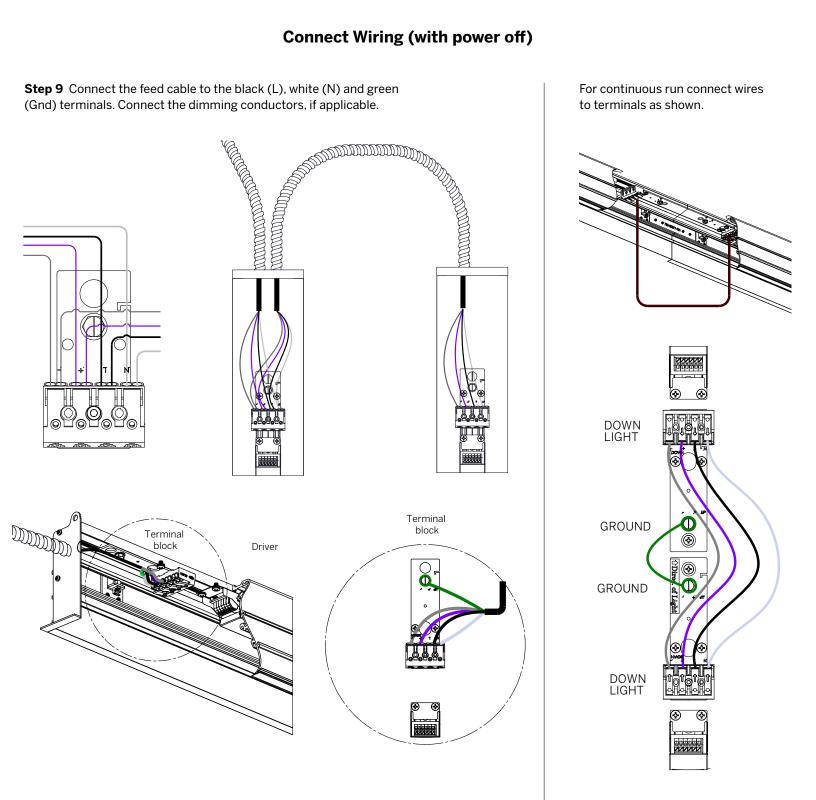


whitegoods

410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.




Bezel Trim Linear Recessed Installation Instructions


Install LED Tray

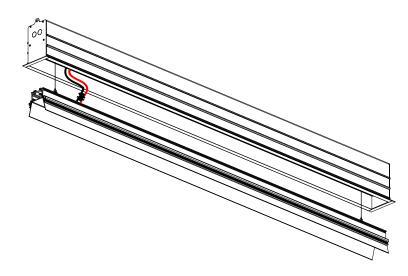

Step 10 Connect low voltage wires from the Gear Tray to the Driver Secondary.

Step 11 Push Gear Tray straight and level into the Housing until it clicks into place. Slide the Gear Tray to adjust as needed.

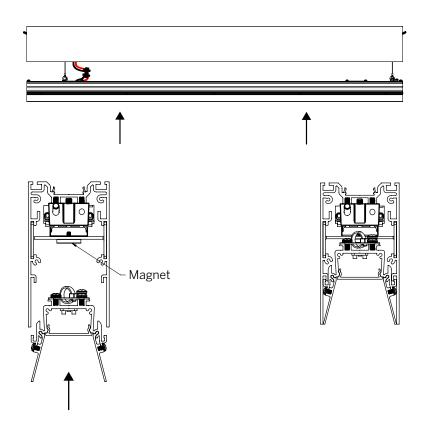


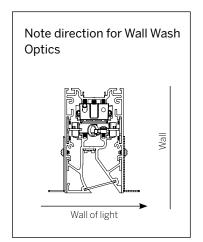




ProTools Linear

Step 1 Slide provided Gear Tray Removal Tool between Gear Trays.

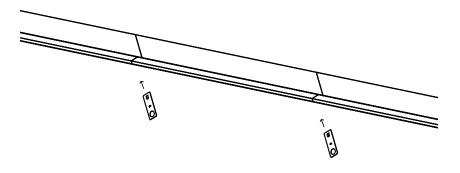

Step 2 Making sure the tab passes through the opening.

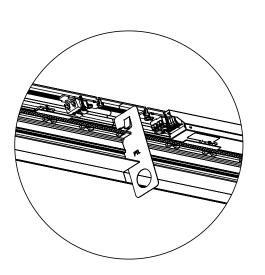

Step 3 Pull both Tools straight down with thumbs against lens.

