WG-75RPTAWW-RBT WG-75SPTAWW-RBT

 
Installation Instructions

Downlight

Round and Square Accent Wall Wash Recessed Bezel Trim


IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.




To prevent electrical shock disconnect electrical supply before installation or servicing Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

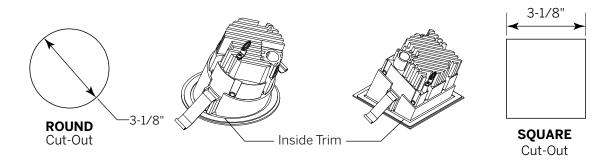

Step 1 - Confirm Power Supply is Off!

Unpack luminaire unit. Unit ships in **two** major parts: Fixture Insert/Driver Box Assembly, and Lens/Cover unless Remote Driver version was supplied, then Plenum-rated cable with bare leads is provided. In this configuration, integral conduit and driver box are not included. However, a strain relief is added to where the low voltage wires exit. Remote drivers and housings are supplied by Inter-lux.

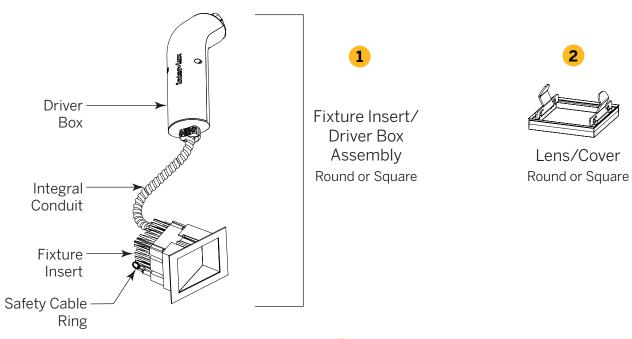

NOTE: Safety Cable not supplied with fixture





WG-75RPTAWW-RBT WG-75SPTAWW-RBT

Installation Instructions

Downlight

Round and Square Accent Wall Wash Recessed Bezel Trim


Page 2

Step 2 - Ceiling Preparation

Cut appropriate size opening in the ceiling as shown below. Clear any insulation at least 3" from any part of the fixture or driver enclosure.



NOTE: Before Installation in dry location, remove supplied Gasket. For wet location, remove backing paper from the Gasket, expose adhesive and apply Gasket to inside trim.

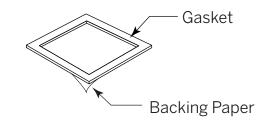

Step 3 - Wiring

- a Locate Fixture Insert/Driver Box assembly.
- Priver Box Cover.


 Loosen Cable Strain Relief

 Bracket(s) and Hex Screws.

 Remove (unscrew)

 Knock-outs as necessary.

NOTE: Illustrations show conduit exiting from ceiling. This may not be the case in your installation.

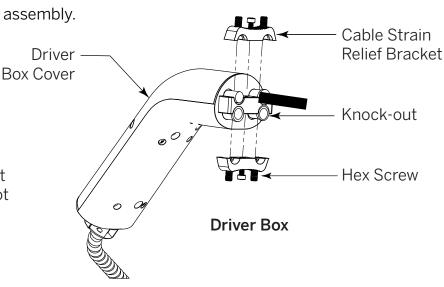





WG-75RPTAWW-RBT WG-75SPTAWW-RBT


Installation Instructions

Downlight

Round and Square Accent Wall Wash Recessed Bezel Trim

Step 4 - Wiring (continued)

Connect the Power Feed Cable to the Black (L), White (N) and Green (Gnd) Terminals. Connect the Control Wires, if applicable.

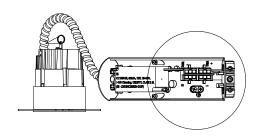


Driver Box

Connected to

Page 3

Driver Box Connected to

Conduit

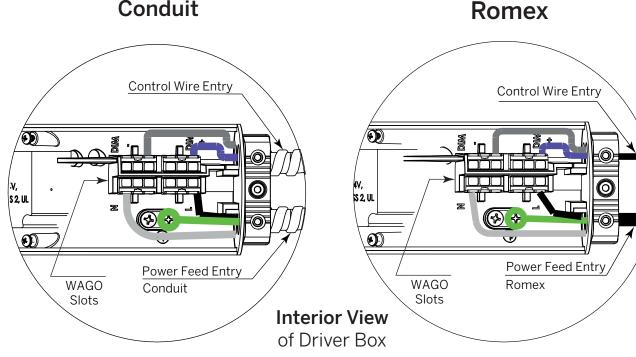

To connect to driver box, incoming conduit must be Trade Size 3/8

However, this size conduit cannot enter driver box. It is held in place by Cable Strain Relief Bracket only.

If Romex is used, fasten set screws to secure in addition to closing strain relief bracket.

Use 7/64" allen key to fix set screws.

Refer to Driver Wiring Instructions for other control protocols





WG-75RPTAWW-RBT WG-75SPTAWW-RBT

Installation Instructions


Downlight

Round and Square Accent Wall Wash Recessed Bezel Trim

Page 4


Step 5 - Fixture Orientation

Orient Fixture Insert such that wall wash lens cover faces wall surface.

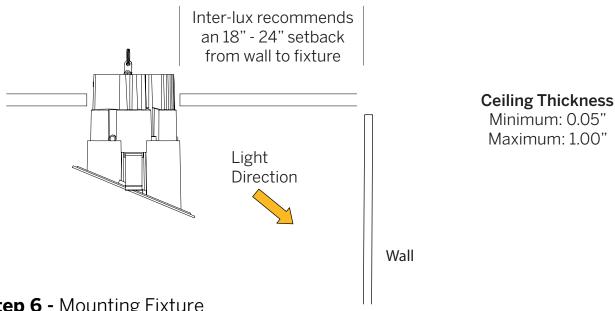

Step 6 - Mounting Fixture

- Compress trim springs against housing
- **b** Push fixture insert though ceiling hole.
- c Once through hole, let go of springs and adjust insert such that bezel is flat on ceiling. **IMPORTANT:** Be careful not to damage LED or Optic during installation process.

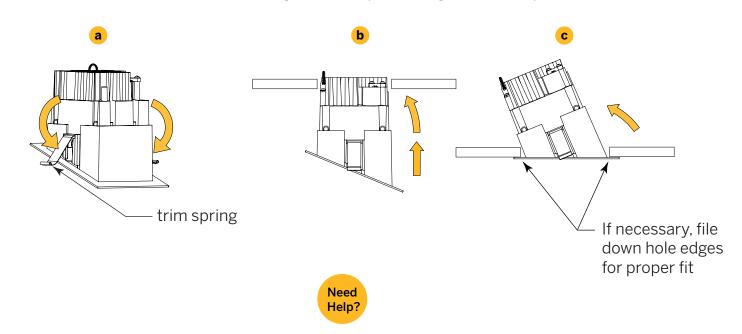



WG-75RPTAWW-RBT WG-75SPTAWW-RBT

Installation Instructions

Downlight


Page 5

Round and Square Accent Wall Wash Recessed Bezel Trim


Step 7 - Installing Lens/Cover

- a Latches are push-to-lock/push-to-release. Check that latches are OPEN (down) to receive Lens/Cover.
- **b** Orient slots in Lens/Cover with latch locations. Push up into Fixture Insert until a click is heard. Release hand and Lens/Cover will be locked in place.

Lens/Cover Latches

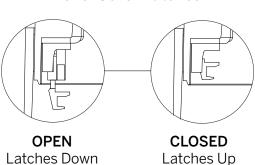

Housings and Fixture Inserts shown upright and out of ceiling for clarity

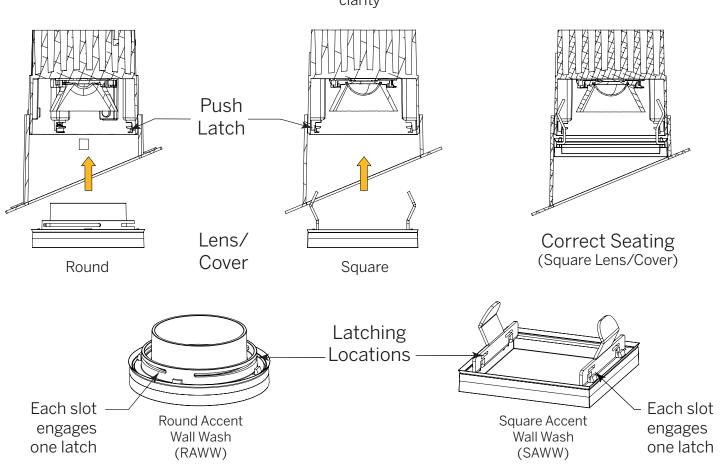





whitegoods