ProTools 3" Downlights

WG-75PTRAWW-RBT / WG-75PTSAWW-SBT

Bezel Trim Accent Wall Wash Installation Instructions

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).




To prevent electrical shock, disconnect electrical supply before installation or servicing.

 
Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 Cut the appropriate size opening in the ceiling and clear any insulation at least 3" from any part of the fixture or driver enclosure.

Note: For Wet Location, strip the paper from the gasket and attach the gasket to the inside trim before installation. For Dry, remove the gasket.

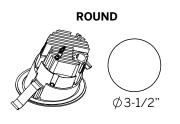







Conduit by others




Step 2 Pull power cable and control cable through the ceiling opening.

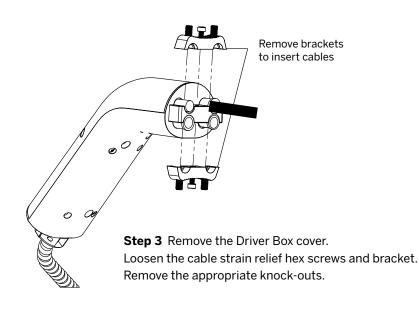

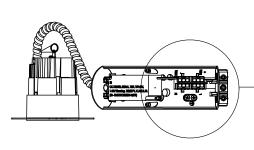

Step 4 Connect the feed cable to the black (L), white (N) and green (Gnd) terminals. Connect the dimming conductors, if applicable.

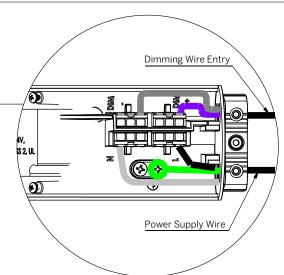

NOTES:

Driver Box allows Through-Wiring of power and control.


Use 7/64" allen key to fix set screws.

 
Fasten set screws provided to secure the cables as shown.

ProTools 3" Downlights WG-75PTRAWW-RBT / WG-75PTSAWW-SBT


Bezel Trim Accent Wall Wash Installation Instructions

Step 5 Add the hanging ceiling wire (by others) looping it through the ring on the Fixture Insert to connect to structure.

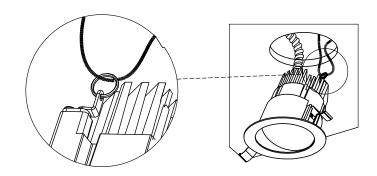




 
Step 6 Push the Housing through the ceiling opening.




Step 7 Push the Mounting Clip through the opening while holding the Housing tight to the ceiling.

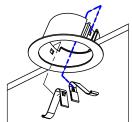


 Step 8 Secure the Mounting Clip by pushing down into the channel and repeat.



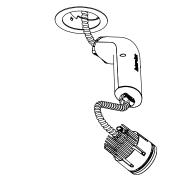

Step 9 Push the Driver Housing through the Housing followed by the Insert. Ensure that the Touch Latch is in the open position, as indicated in the detail below.

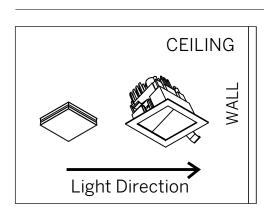

Cover Installation Cover should be inserted by level alignment so the (4) Touch Latches engage and hold the Cover into place. If the Cover does not engage, make sure that the Touch Latches are all OPEN (extended). When the Cover engages the Touch Latches they will be CLOSED (recessed). To remove Cover, push upward evenly and downward to release Touch Latch.

