ProTools 3" Downlights

WG-75PTRA-RPT / WG-75PTSA-SPT

Plaster Trim Adjustable Installation Instructions

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).



To prevent electrical shock, disconnect electrical supply before installation or servicing.

 
Never connect a live fixture!!!

 
Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 Cut the appropriate size opening in the ceiling and clear any insulation at least 3" from any part of the Fixture or Driver Enclosure. Screw the Frame into ceiling blocking or structure and plaster in the Frame.


Note: For Wet Location, strip the paper from the gasket and attach the Gasket to the inside trim before installation. For Dry, remove the Gasket.










Install using 'tape-and-joint' method, or plaster finish. Clean excess plaster while still wet.

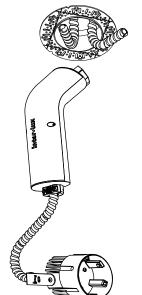


Conduit by others

 

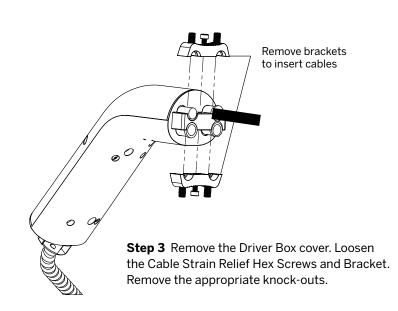

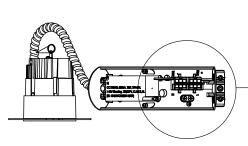

Step 4 Connect the Feed Cable to the Black (L), White (N) and Green (Gnd) Terminals. Connect the Dimming Conductors, if applicable.

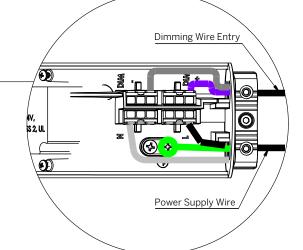

NOTES:

 
Driver Box allows Through-Wiring of power and control.


Use 7/64" allen key to fix set screws.

 
Fasten set screws provided to secure the cables as shown.

ProTools 3" Downlights WG-75PTRA-RPT / WG-75PTSA-SPT


Plaster Trim Adjustable Installation Instructions



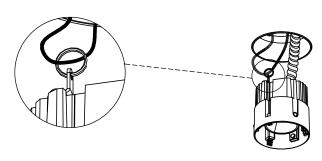




 Step 6 Push the Driver Housing through the Frame followed by the Insert which is held by the Ball Catch Latch. Ensure that it snaps into place and is held securely.




Step 7 Ensure that the Touch Latch is in the open position, as indicated in the detail below. Push the Cover into the Insert and snap into place into the Touch Latch.

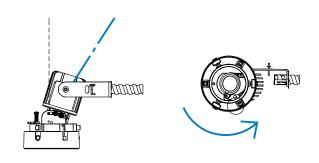

Vertical adjustment Circular adjustment

Step 8 Adjust to desired setting.

Cover Installation Cover should be inserted by level alignment so the (4) Touch Latches engage and hold the Cover into place. If the Cover does not engage, make sure that the Touch Latches are all OPEN (extended). When the Cover engages the Touch Latches they will be CLOSED (recessed). To remove Cover, push upward evenly and downward to release Touch Latch.

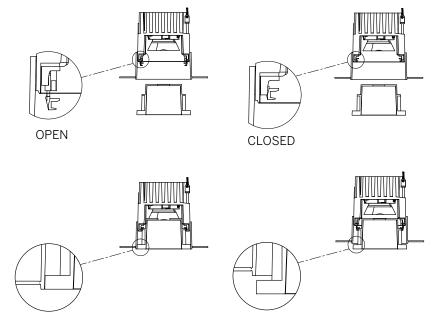



WRONG

CORRECT