ProTools 3" Downlights WG-75PTRDL-RPT / WG-75PTSDL-SPT WG-75PTRDLR-RPT / WG-75PTSDLR-SPT

Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).



To prevent electrical shock, disconnect electrical supply before installation or servicing. Never connect a live fixture!!!

ROUND

Plaster Trim Fixed Downlight Installation Instructions

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 Cut the appropriate size opening in the ceiling and clear any insulation at least 3" from any part of the Fixture or Driver Enclosure. Screw the Frame into ceiling blocking or structure and plaster in the Frame.

Note: For Wet Location, strip the paper from the gasket and attach the Gasket to the inside trim before installation. For Dry, remove the Gasket.







SQUARE



Install using 'tape-and-joint' method, or plaster finish. Clean excess plaster while still wet.





NOTES:

if applicable.

Driver Box allows through-wiring of power and control. Use 7/64" allen key to fix set screws. Fasten set screws provided to secure the cables as shown.

whitegoods

410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.



ProTools 3" Downlights WG-75PTRDL-RPT / WG-75PTSDL-SPT WG-75PTRDLR-RPT / WG-75PTSDLR-SPT

Plaster Trim Fixed Downlight Installation Instructions







Step 6 Push the Driver Housing through the Frame followed by the Insert which is held by the Ball Catch Latch. Ensure that it snaps into place and is held securely.



Step 7 Ensure that the Touch Latch is in the open position, as indicated in the detail below. Push the Cover into the Insert and snap into place into the Touch Latch.

Cover Installation Cover should be inserted by level alignment so the (4) Touch Latches engage and hold the Cover into place. If the Cover does not engage, make sure that the Touch Latches are all OPEN (extended). When the Cover engages the Touch Latches they will be CLOSED (recessed). To remove Cover, push upward evenly and downward to release Touch Latch.







CORRECT