

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.




To prevent electrical shock disconnect electrical supply before installation or servicing.
Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.


Step 1 - Confirm Power Supply is Off!

- a** Detach trim ring from luminaire. To do so, lift trim ring up towards heat sink. Three ball-nose spring plungers that hold luminaire body in place will release with a small tug.

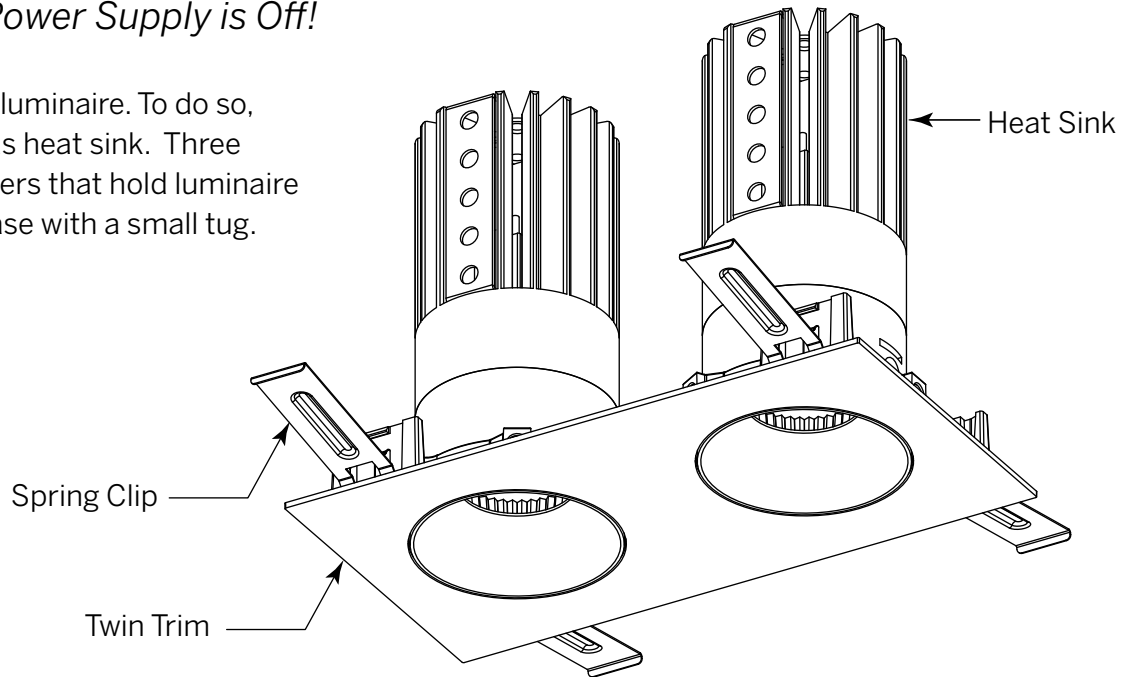

Step 2 - Installing Downlight

- a** Cut 2-3/8" x 4-3/4" (60mm x 120mm) opening
- b** Bend Spring Clips upward and insert fixture into hole
- c** Clips will spring back up above ceiling to secure fixture. Center as necessary.

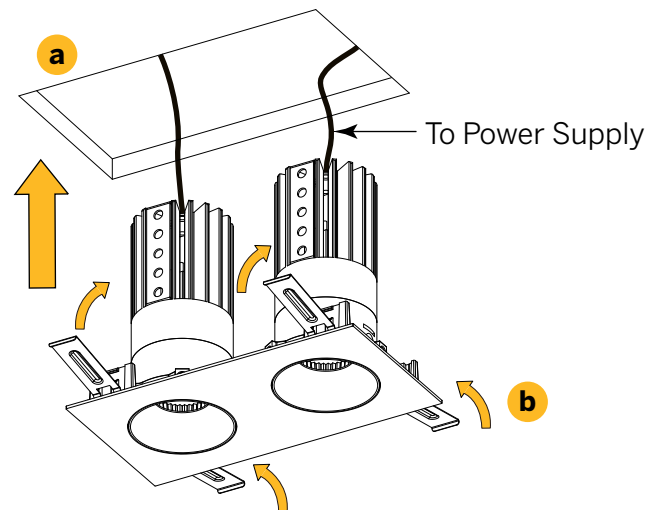

Removal:

Luminaire may be removed by gripping bezel with fingertips and pulling down. Springs will compress allowing for better hold to pull fixture out further .

IMPORTANT: Add a bit of slack to power cords such that there is enough for luminaire to be fully removed without tugging on remote driver.

Need Help?