

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.




To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

For Accessible Ceilings Only*

Remote Driver

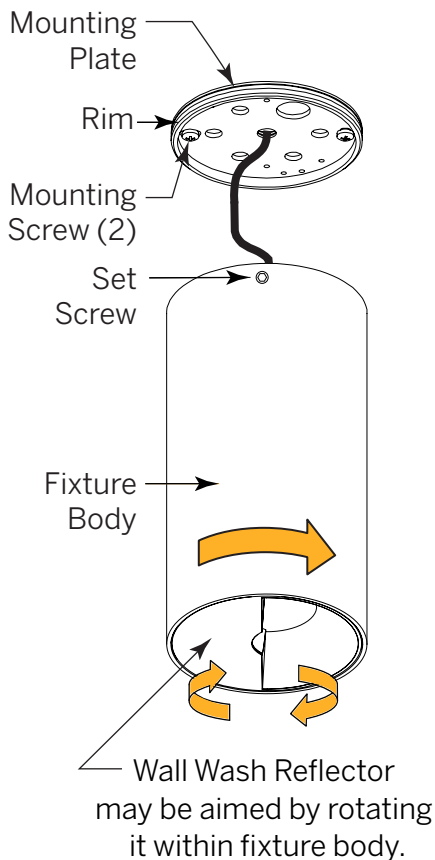

Step 1

Open the Box

Unpack luminaire unit. Remote drivers and housings are supplied by Inter-lux.

Step 2

Ceiling Preparation

Mark location and drill hole for cable pass-through

Step 3

Mount Fixture

- a** Center Mounting Plate around hole. Secure to ceiling with appropriate screws or anchors. Use backing material if necessary.
- b** Feed cable from fixture through center of Mounting Plate and up into hole.
- c** Slip Fixture Body over Rim of Mounting Plate. Secure Luminaire by rotating clockwise. Lock into place with Set Screw.


Step 4

Electrical Connection

Above ceiling, connect power (and control) wire(s) to Remote Driver. Energize!

Included in Box

- (1) Fixture Body with connected cable
- (1) Mounting Plate
- (2) Mounting Screws
- (1) Set Screw

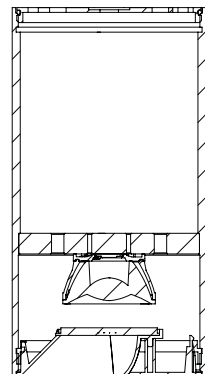

Cross-Section of Fixture

*Alternatively, wire or cable may be fed from an accessible driver to the fixture in a non-accessible ceiling.

Need Help?