

Installation Instructions

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.




To prevent electrical shock disconnect electrical supply before installation or servicing.
Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - **Open the Box**

Unpack luminaire unit. Unit consists of (3) major parts: Housing, Luminaire with Diffuser, and Remote Housing with Driver. Plenum-rated cable with bare leads is also provided. Remote Drivers and Housings are supplied by Inter-lux.

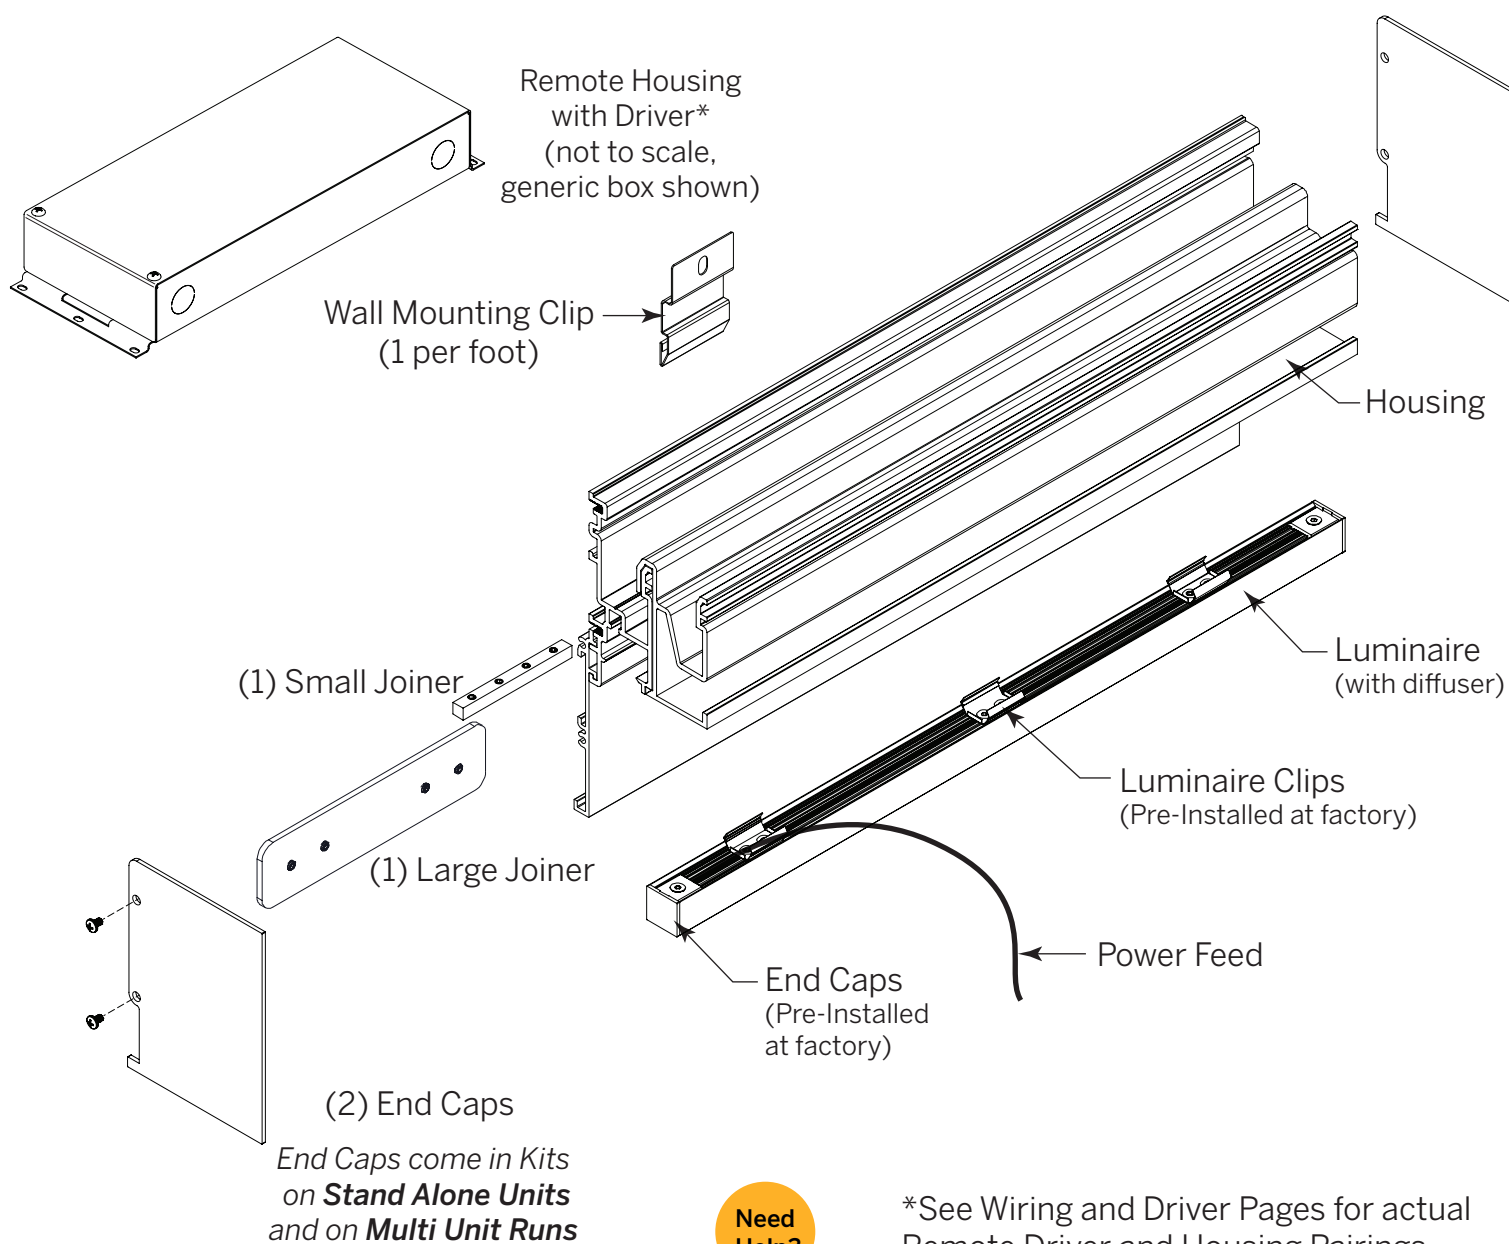

*See Wiring and Driver Pages for actual Remote Driver and Housing Pairings

20 Linear

WG-20LPRSG-RRT

Perimeter Regressed

Recessed Return Trim
Soft Graze


2/6

Step 2 - *Installation Prep*

Cut 2½" opening between Wall and existing Drywall Ceiling or, in the case of new construction, allow 2½" between wall and edge of installed ceiling.


Step 3 - *Install Wall Mounting Clips*

Mark wall 5-3/16" above exposed surface of Drywall Ceiling. Screws and anchors supplied by others. Blocking recommended to support weight of fixture (1½ lbs/ft.). Locate clips no less than 3" from each end of fixture.

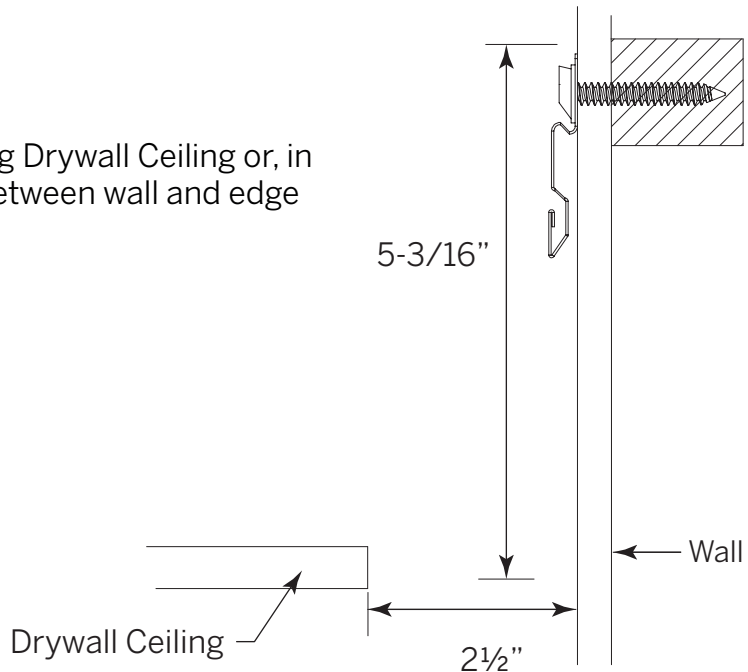

Step 4 - *Drill Power Feed Holes*

- a** Determine on which end of Luminaire Power Feed will enter on Housing and mark location at least 3" from end. Drill ¼" hole at mark on V-Groove.

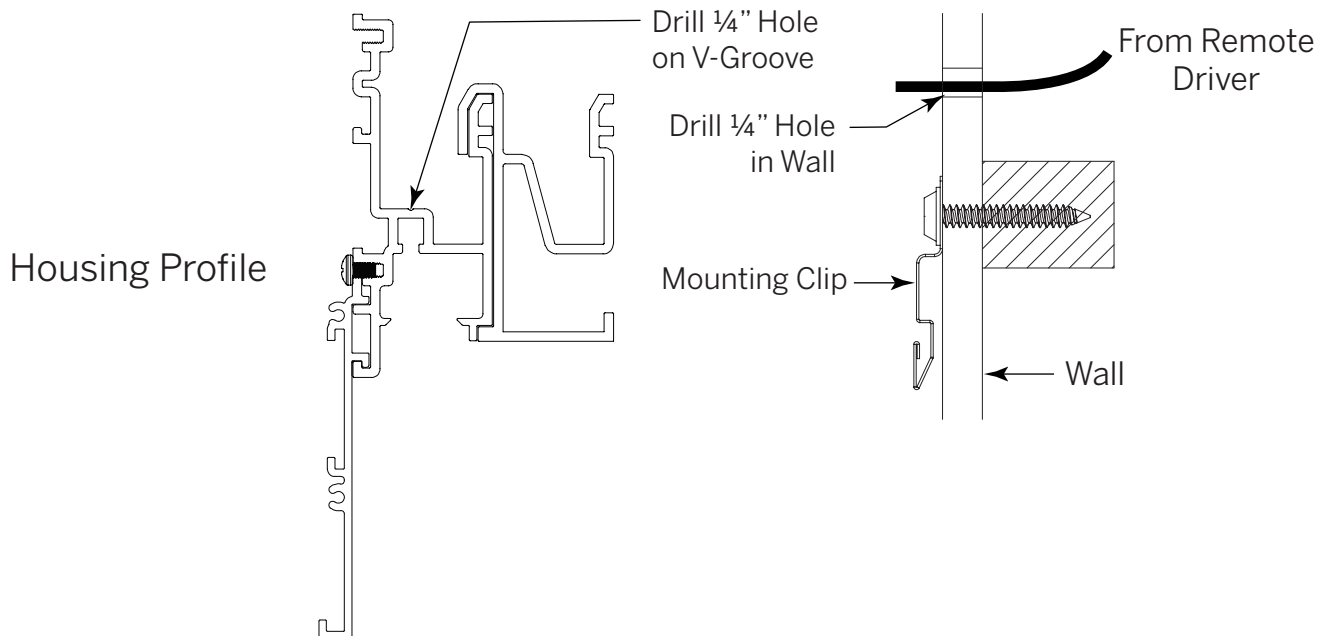

- b** Drill another ¼" hole through Wall above Mounting Clips adjacent to hole in Housing.
- c** Install Remote Drivers and run low voltage wires through drilled hole in Wall.

Need
Help?

20 Linear

WG-20LPRSG-RRT


Perimeter Regressed

Recessed Return Trim
Soft Graze

3/6

Step 5 - *Install Endcaps*

Attach Endcaps to both ends of Stand Alone Housing Units or at beginning and end of Multi Unit Run. Align holes with round channels indicated at right. Fasten with supplied screws.

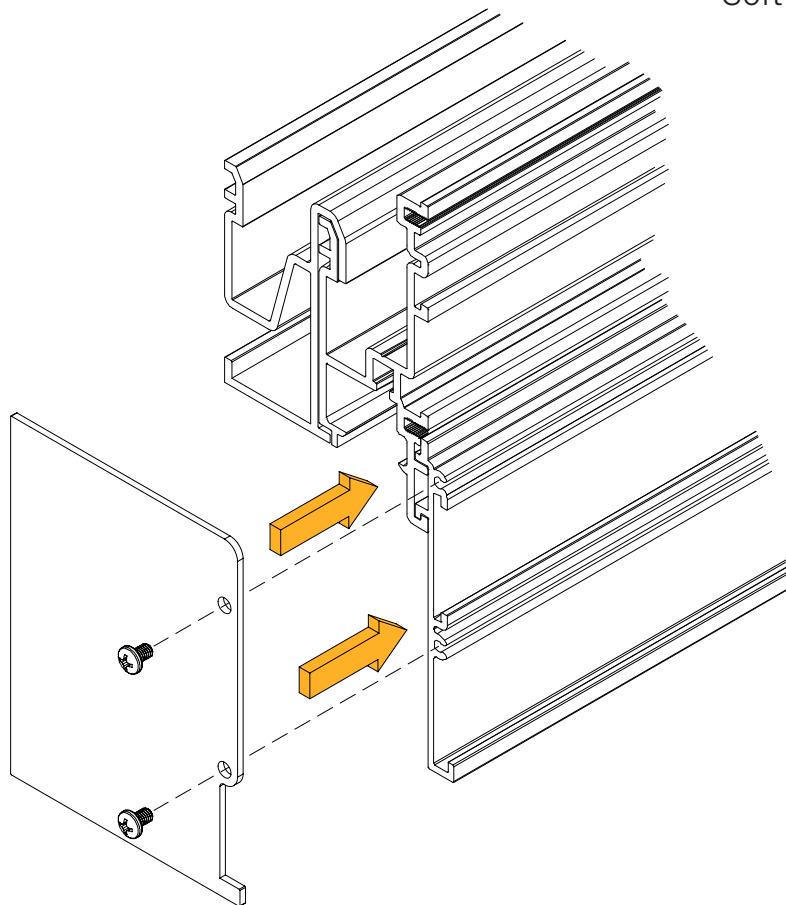


NOTE: End Caps may be omitted from a wall-to-wall installation.

Step 6 - *Install Joiners - Multi Unit Run only*

- a** On the Starting Unit on the open end (opposite End Cap), slide Large Joiner halfway into major channel on outer face of Housing. Fasten with supplied Set Screws.
- b** Slide Small Joiner halfway into center square channel, as shown at right. Fasten from bottom with supplied Set Screws.
- c** Repeat for every middle unit in Run, on the same end as Starting Unit.

NOTE:

Large Joiner uses: (4) M4 x 4mm Set Screws
Small Joiner uses: (4) M3 x 5mm Set Screws

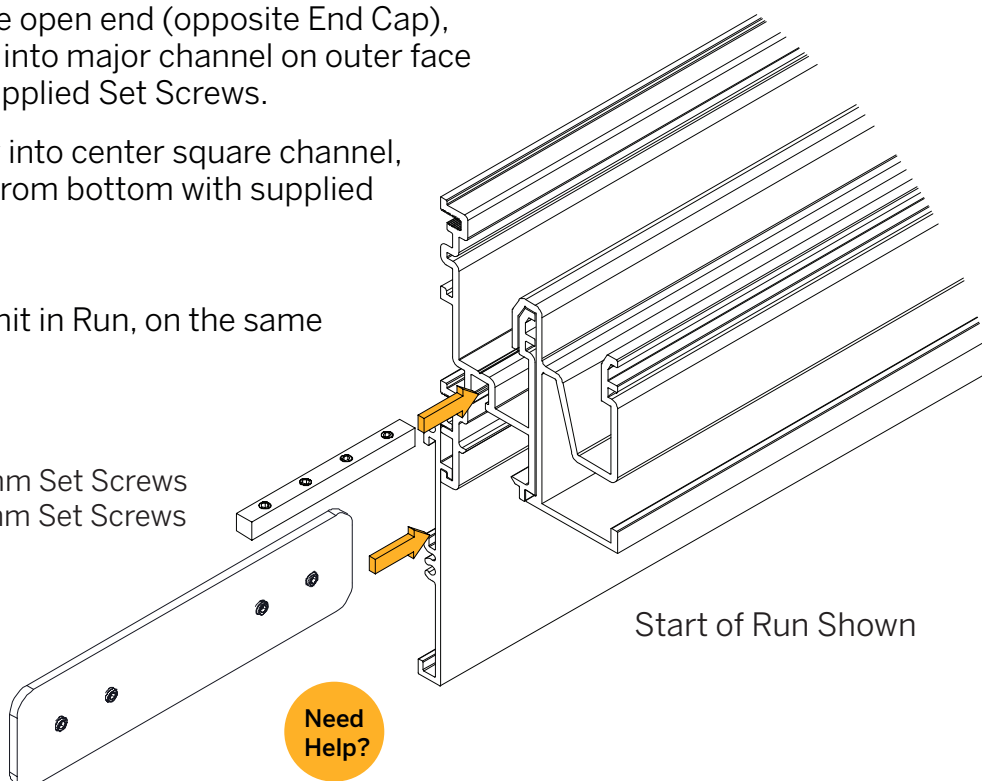

20 Linear

WG-20LPRSG-RRT


Perimeter Regressed

Recessed Return Trim
Soft Graze

4/6


Step 7 - *Install Housing(s)*

- a** Slide Housing upward such that Back Rail slides up and underneath Mounting Clip.
- b** Pull Low Voltage wire from Wall.
- c** For a **Multi Unit Run**, repeat step **a** for each additional unit, then slide unit onto exposed Joiners of installed unit. Long runs may have additional power feeds **b**. Tighten Set Screws to fasten.

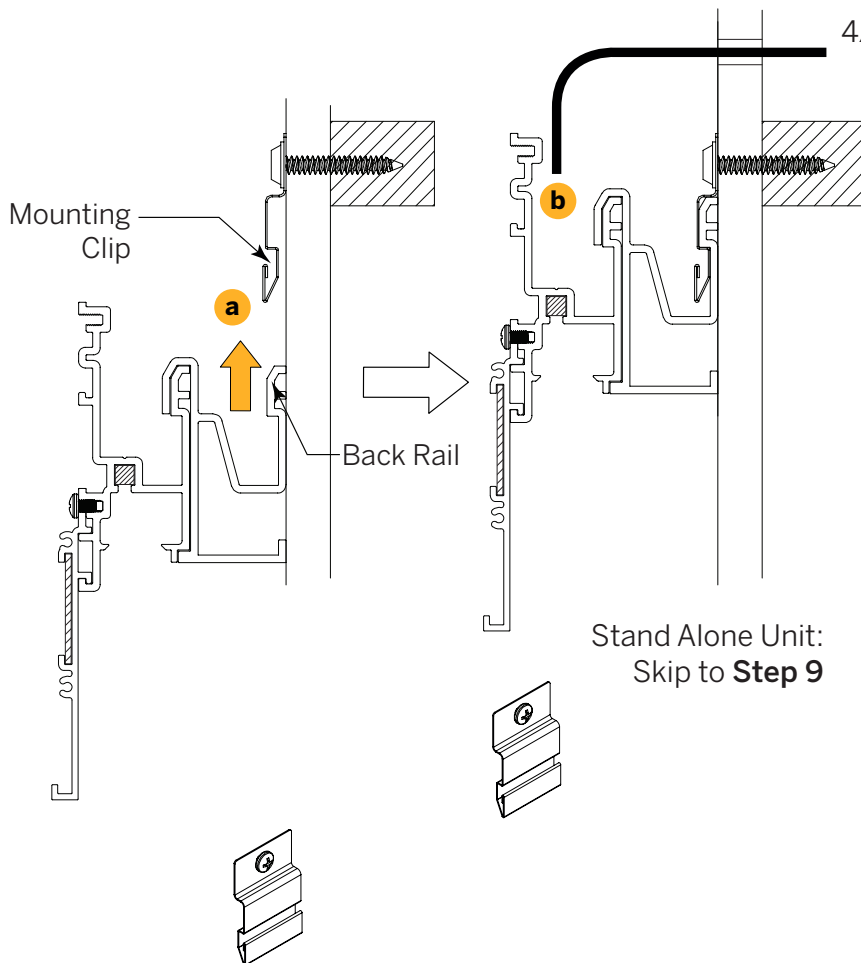

Slide unit upward to engage Mounting Clips...

1

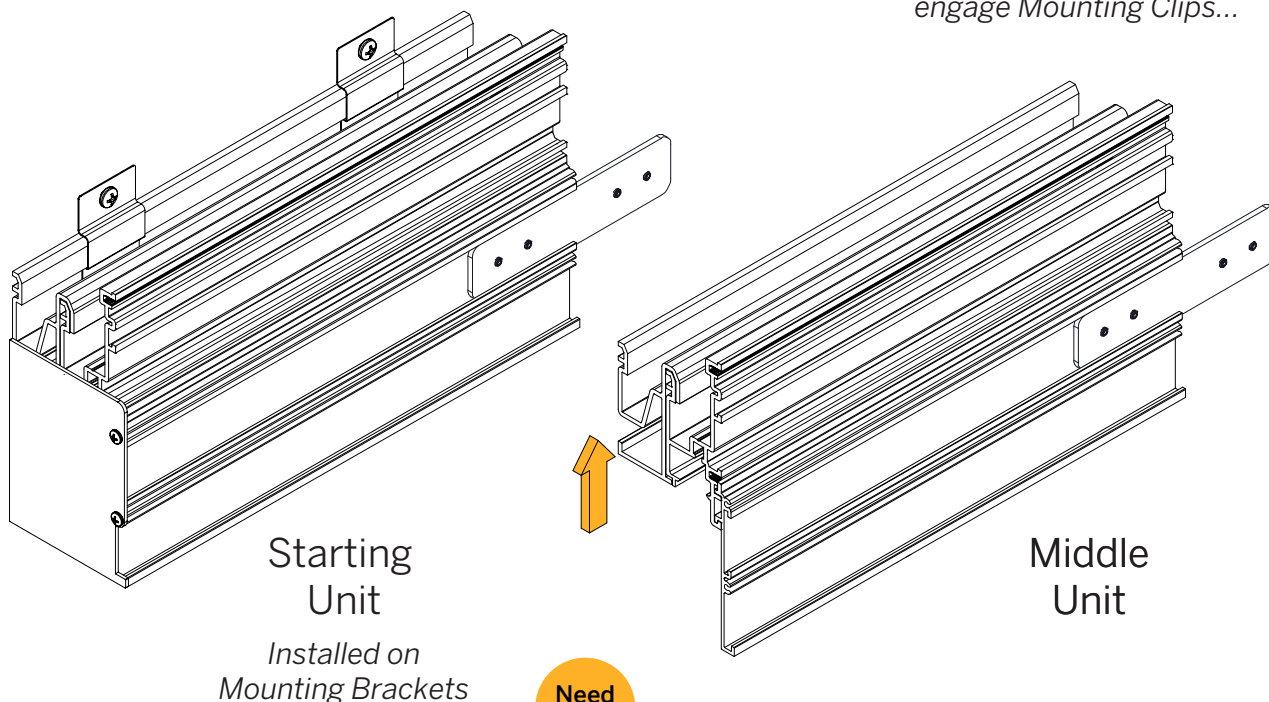


Installed on
Mounting Brackets

Middle
Unit


Need
Help?

Step 7 - **Install Housing(s)** (continued)

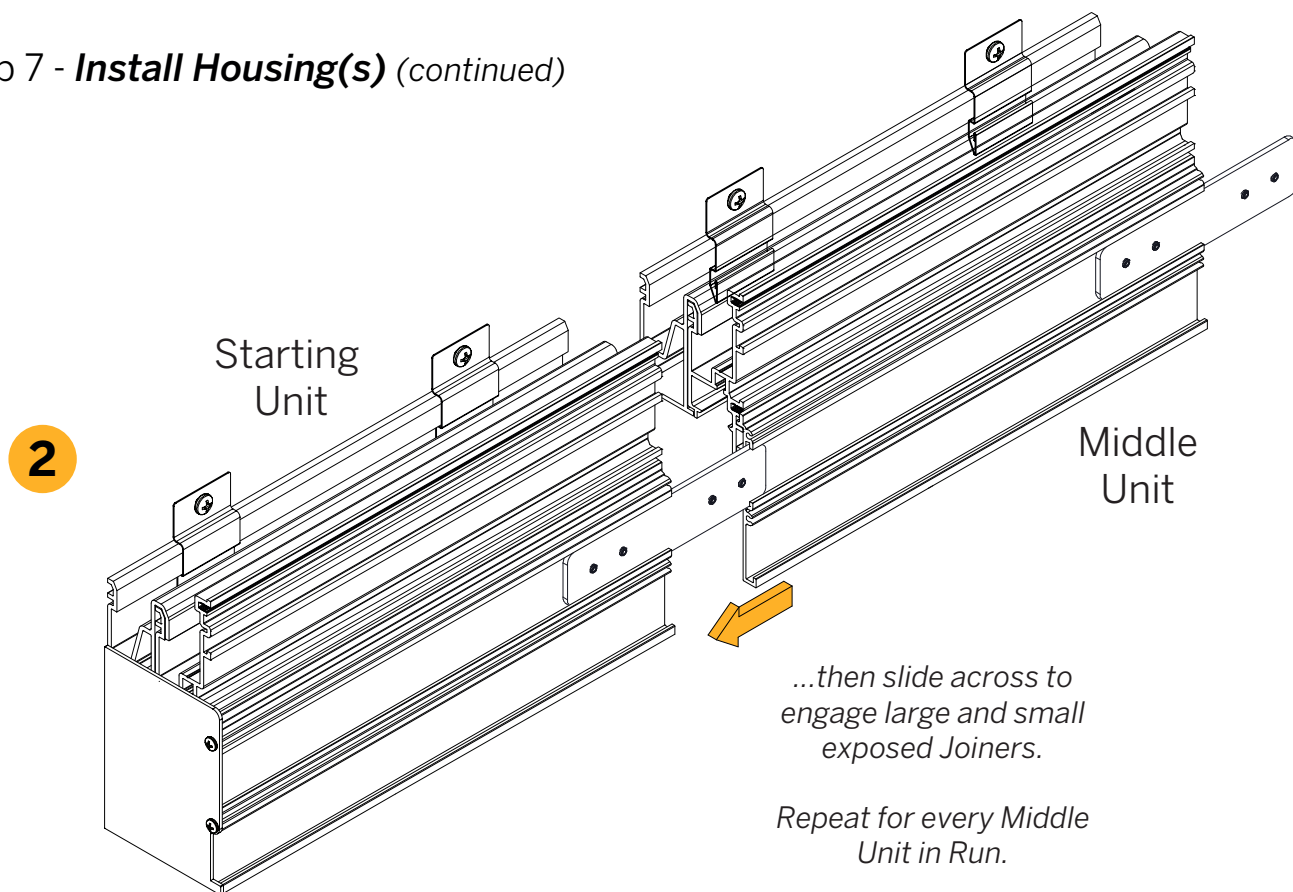


Step 8 - **Corners** - Multi Unit Run only

Pattern Inside (PI) and Pattern Outside (PO) Corners are welded at the factory. Follow **Step 7c** to mount to existing Run. Illustration of light output shows direction only, and is not indicative of color, intensity, or actual spread.

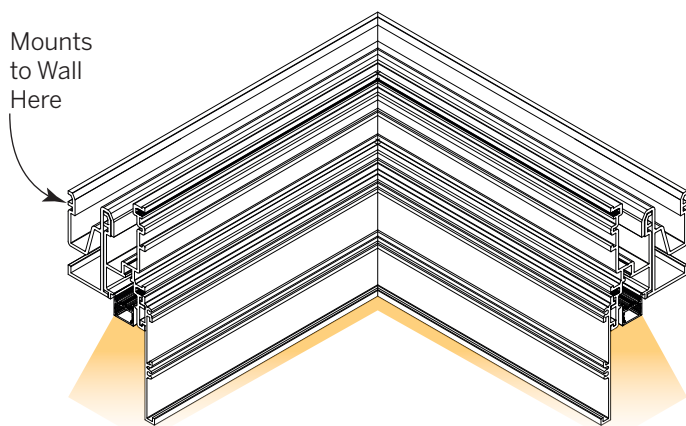

Pattern Inside (PI)

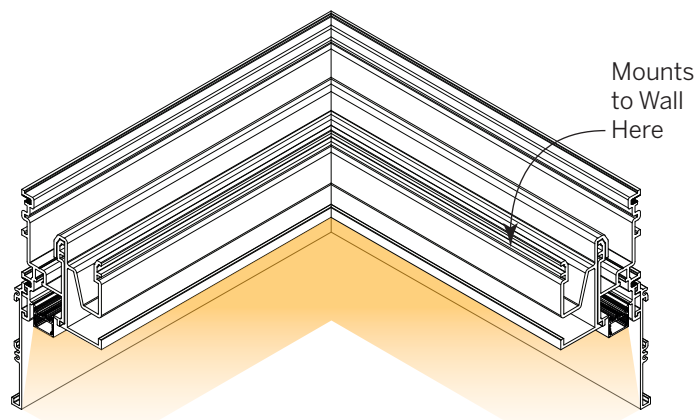

Pattern Outside (PO)

Need
Help?

20 Linear

WG-20LPR-RRT


Perimeter Regressed

Recessed Return Trim
Soft Graze

6/6

Step 9 - ***Install Luminaire(s)***

- a** Raise Luminaire up into Housing. Connect Low Voltage Wires from Luminaire to those coming from Remote Driver using supplied connectors.
- b** Push Luminaire into Housing until Luminaire Clips engage.
- c** Energize!

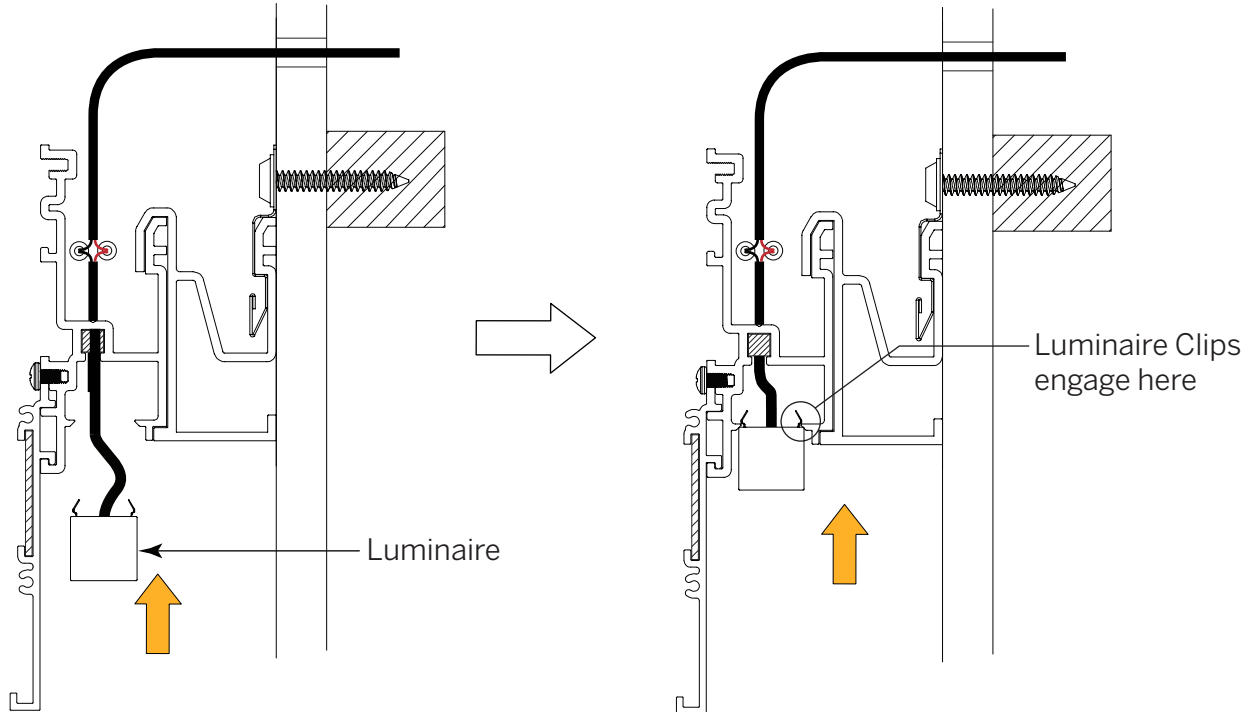

Need
Help?