

20 Linear

WG-20LDI-SW
WG-20LD-SW
WG-20LI-SW

Installation Instructions

Surface Wall

Direct/Indirect,
Direct, or Indirect

Luminaires must be installed
by a qualified electrician
(check with local and national
codes for proper installation).




To prevent electrical shock,
disconnect electrical supply
before installation or servicing.
Never connect a live fixture!!!


Contractor is responsible for
adequately reinforcing walls and/or
ceilings to support fixture weight.
Provide blocking when necessary.

Step 1 - **Open the Box**

Unpack luminaire units. Remote drivers and housings are supplied by Inter-lux. Fixture may be powered by one or two drivers, depending on variant. Drivers and Housings supplied by Inter-lux.

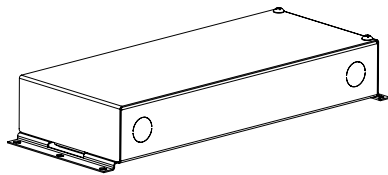

Remote Housing
with Driver*
(not to scale,
generic box shown)

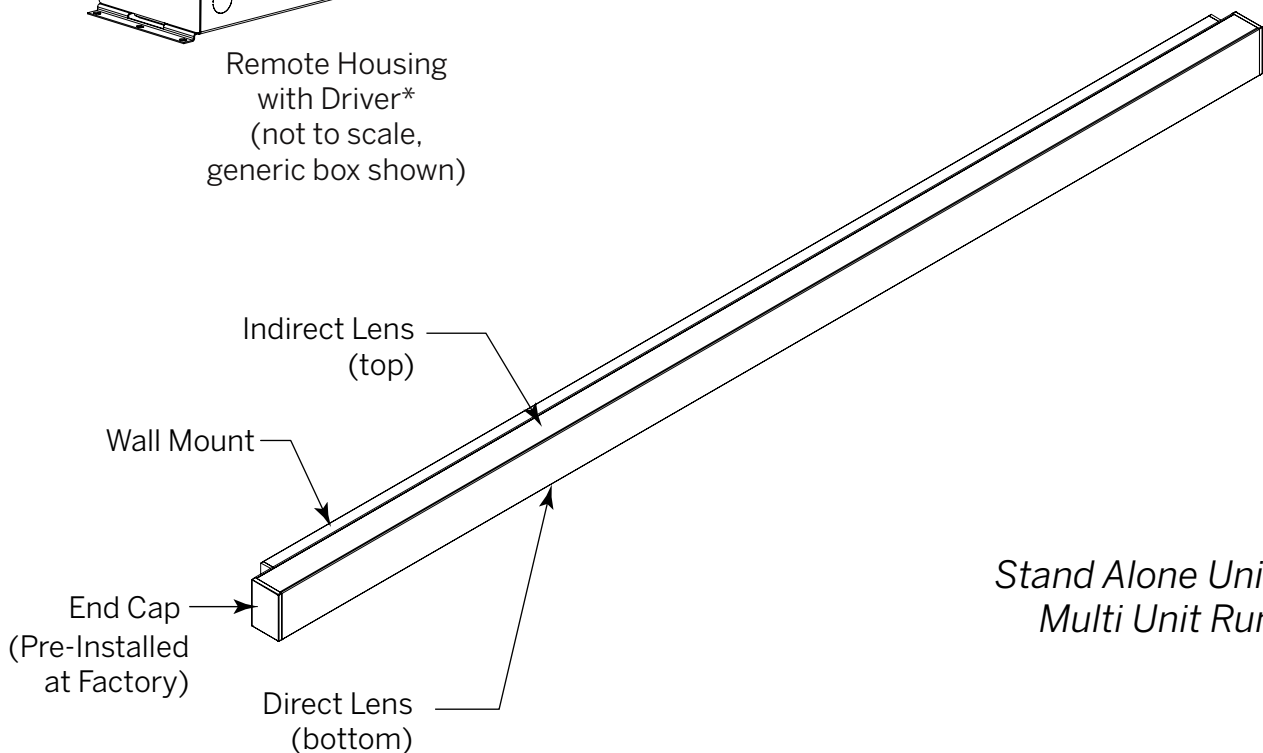

*Stand Alone Unit: **p. 2**
Multi Unit Run: **p. 3***

**Need
Help?**

*See Wiring and Driver Pages for actual
Remote Driver and Housing Pairings

20 Linear

WG-20LDI-SW, WG-20LD-SW, WG-20LI-SW


Surface Wall

Direct/Indirect,
Direct, or Indirect

Step 2 - **Install Wall Mount** - Stand Alone Unit

2/4


- a** Lift Wall Mount off from back of Luminaire. No tools required; Wall Mount held on by Spring Clips.

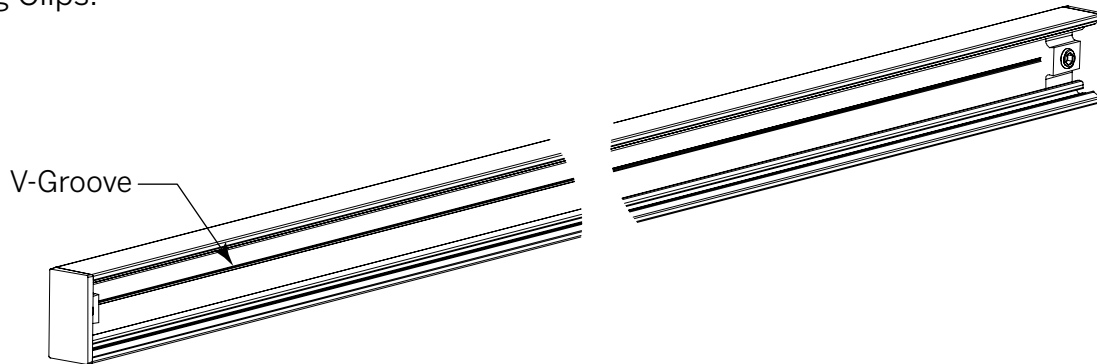

- b** Spaced equally along length, drill $\frac{1}{4}$ " mounting holes along V-Groove, one per foot. Transfer hole locations to Wall.
- c** Drill hole for Power Feed(s) corresponding to slots at back of Luminaire (see below) or in other convenient location along V-Groove. Transfer hole location(s) to Wall.
- d** Fasten Wall Mount to Wall using screws and anchors (supplied by others).

Step 3 - **Fasten Luminaire to Wall Mount** - Stand Alone Unit

- a** Luminaire supplied by factory with Spring Clips, Strain Reliefs, and Poke Connectors pre-installed.
- b** Connect incoming Power Feeds from Remote Drivers to each of the Luminaire Power Feeds via the Poke Connectors. For the 20LDI, the two Power Feeds correspond to the Direct and Indirect lighting. For the 20LD or the 20LI, there will be only one Luminaire Power Feed for the Direct or Indirect lighting, respectively.

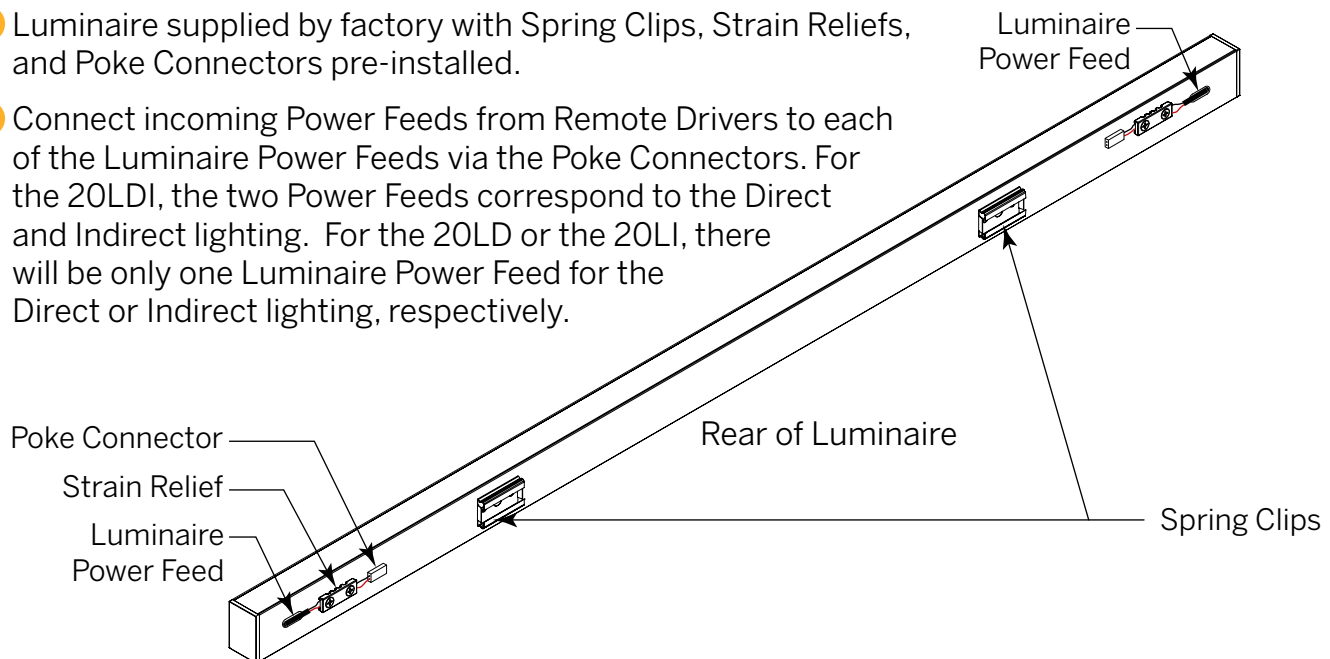

- c** Tuck Power Feeds into Wall Mount. Snap Luminaire onto Wall Mount via Spring Clips. Center as necessary.

Need
Help?

20 Linear

WG-20LDI-SW, WG-20LD-SW, WG-20LI-SW


Surface Wall

Direct/Indirect,
Direct, or Indirect

Step 3 - *Install Starting Unit in Run - Multi Unit Run*

3/4

- a** Mark a level line for the entire length of Run.
- b** Mark location of beginning of Run, then mark 15mm or 19/32" from the first mark in the direction of the Run. That is the start of the Wall Mount.
- c** For the Starting Unit, follow instructions for Stand Alone Unit in **Step 2** and **Step 3**.

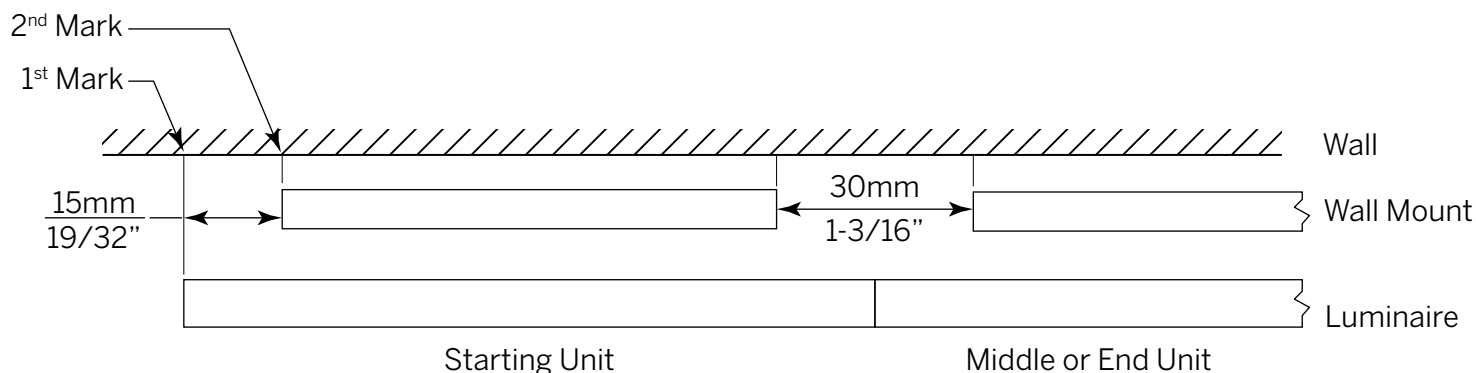


Step 4 - *Install Middle Unit(s) and End Unit in Run - Multi Unit Run*

- a** Mark Location of adjacent Wall Mount 30mm or 1-3/16" from end of previous Wall Mount.
- b** Follow instructions for Installing Stand Alone Unit in **Step 2** and **Step 3**.

Step 5 - *Joining Units in a Multi Unit Run*

Fixtures to be joined have Cross Joiners on end(s) instead of Endcap(s).

- a** Loosen Set Screws on Cross Joiners above Open Holes as shown at right using a 5/64" Allen wrench.
- b** Draw fixtures together. Insert Pin of one joiner into hole of adjacent joiner.
- c** Tighten Set Screws. Screws will lock Detents in place.

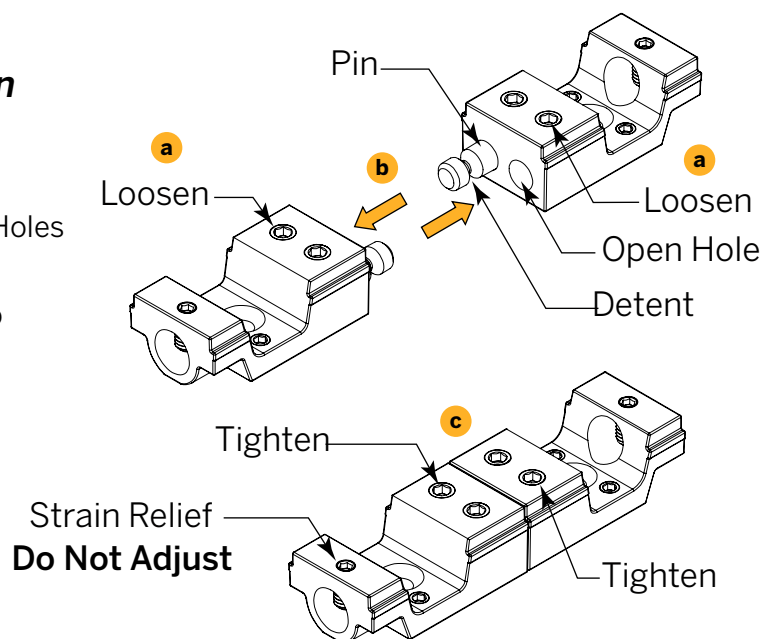

Need
Help?

20 Linear

WG-20LDI-SW, WG-20LD-SW, WG-20LI-SW


Surface Wall

Direct/Indirect,
Direct, or Indirect


Step 6 - **Install Corner** - Multi Unit Run only

4/4

Pattern Inside (PI) and Pattern Outside (PO) Corners are welded at the factory. Illustration of light output shows direction only, and is not indicative of color, intensity, or actual spread. Follow **Steps 2** and **3** to mount and wire. Follow **Step 5** to mount to existing Run.

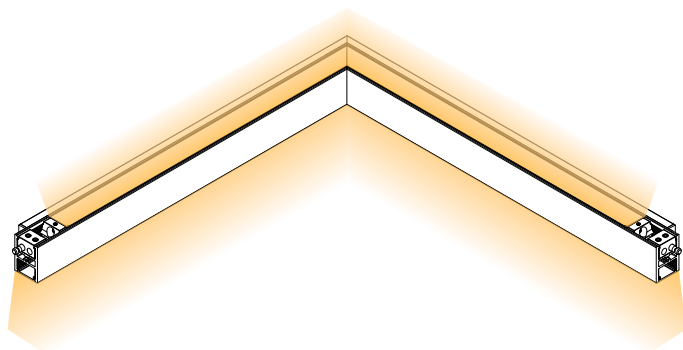

Pattern Inside (PI)

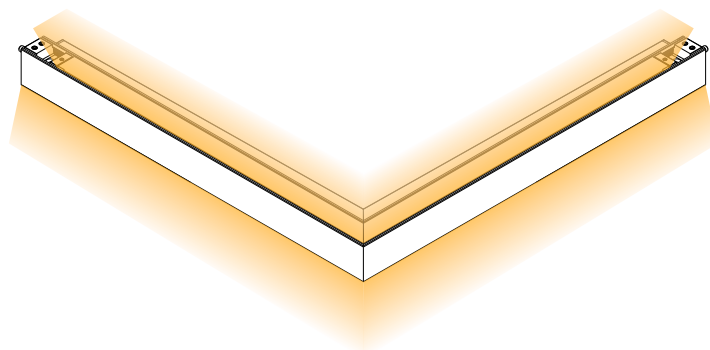

Pattern Outside (PO)

Need
Help?