WG-20LRR-RGT9 WG-20LRR-RGT15

# Installation Instructions

Grid Trim

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.




To prevent electrical shock disconnect electrical supply before installation or servicing

Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

#### Step 1 - Open the Box

Unpack luminaire unit. A Stand-Alone Unit ships in (3)major parts: Housing, Luminaire, and Remote Driver and Box. Luminaire is pre-installed at factory. Endcaps supplied separately. A Multi Unit Run ships with separate Housings and Luminaires, and Endcap and Joiner Kits.

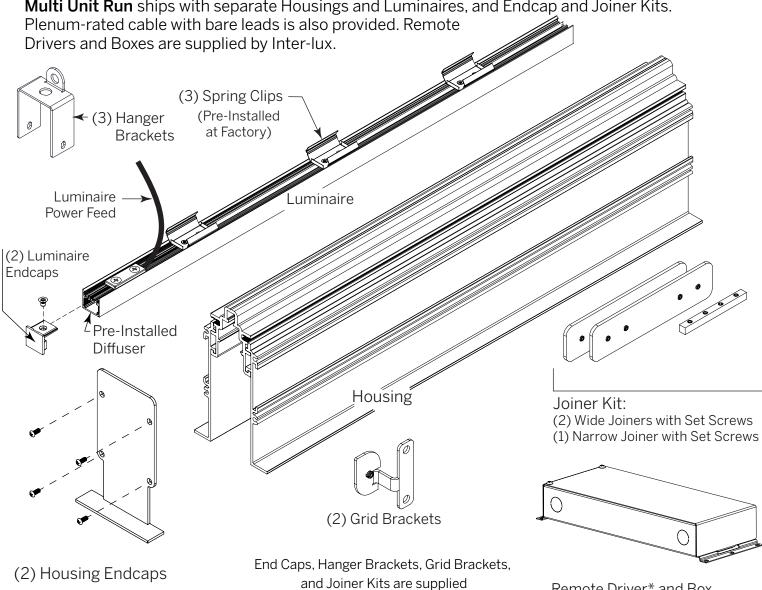

Endcaps supplied in Kits for Stand Alone Units and Multi Unit Runs

> See **Step 7** for Flat **Endcap Option**

with mounting screws.



Remote Driver\* and Box (not to scale. generic box shown)

\*See Wiring and Driver Pages for actual Remote Driver and Housing Pairings



410 381 1497 inter-lux.com answers@inter-lux.com Inter-lux reserves the right to make technical changes without notice.




WG-20LRR-RGT9 WG-20LRR-RGT15 **Grid Trim** 

2/7


#### Step 2 - Confirm Grid Spacing

When installing a T-Grid ceiling, ensure there is a 2½" spacing between T members for the light fixture housing to fit.

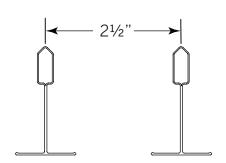


#### Step 3 - **Drill Power Entry Hole**

Units with power feeds need a hole drilled to connect luminaire to their respective drivers. Drill ¼" hole in V-Groove closest to Power Feed source.

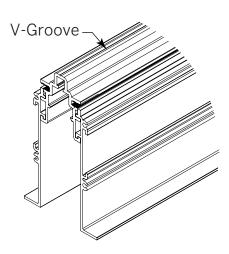

### Step 4 - Install Hanger Brackets

- To install Hanger Brackets, lower onto profile, as shown at right. Insert (2) supplied screws\* into the Screw Channels on right and left sides of Housing.
- **b** Mechanically fasten Hanger Brackets to Structure with Hanging Wire or suspension rods (supplied by others).
  - \*Screw size: M3 x 6mm, Extra Wide Truss Head

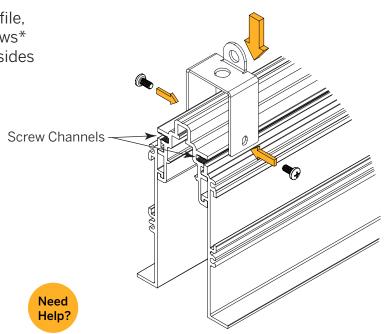




WG-20LRR-RGT9 WG-20LRR-RGT15 **Grid Trim** 

10 111111

## Step 5 - Install Grid Brackets

- a Slide Grid Brackets into slots on right and left outer walls of Housing. If installing a *Multi Unit Run*, slide Brackets at least 3" from end of Unit.
- **b** Secure Bracket in slot using supplied M4 x 4mm, Cup Point Set Screw.


**NOTE:** (2) Grid Mounting Clips are supplied per 2' length

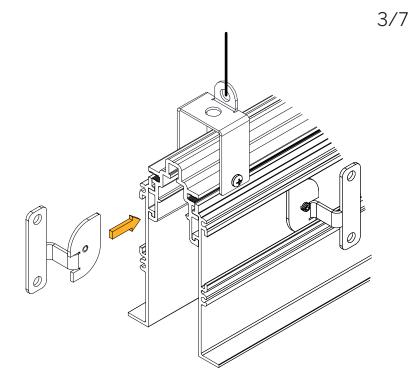

#### Step 6 - **Position Housing**

**a** Lower Housing onto Grid member, such that Bezel Trim rests on flat of "T", as shown at right.

**b** Secure Hanging Wire (supplied by others) to Hanger Bracket. Secure Hanging Wire + Fixture to upper structure.

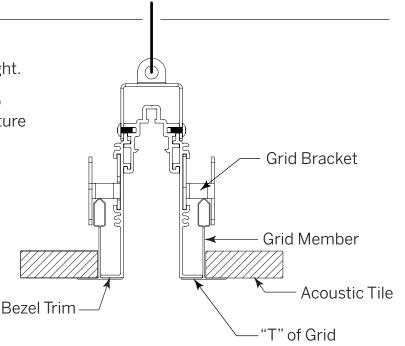





#### 20 Linear


WG-20LRR-RGT9 WG-20LRR-RGT15


#### Step 7 - Install End Caps

- Mount End Cap on first unit in run, as shown at right.
- **b** Repeat for last unit in Run.

Each Endcap Kit supplied with (4) #4-40 x 1/4" screws

A Flat End Cap is available as an option where there is not enough space to house the standard flanged End Cap.

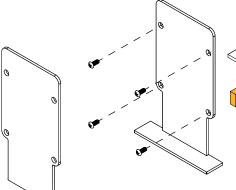

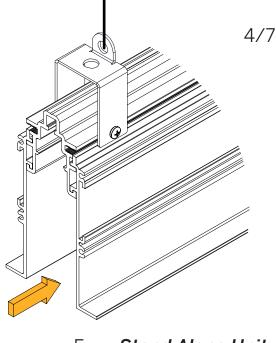

**Recessed Regressed** 

Grid Trim

For a **Stand Alone Unit**, continue with **Step 9** 

#### Step 8 - Install Joiners - Mult Unit Run only


Each pair of adjacent units are joined using a Joiner Kit consisiting of:

- (2) Wide Joiners each supplied with (4) M4 x4mm Set Screws
- (1) *Narrow* Joiner supplied with (4) M3 x 5mm Set Screws
- Slide Wide Joiners into channels on right and left outer walls of Housing.

Slide *Narrow* Joiners into channels on right and left bottom flanges of Housing.

Insert each approximately halfway. See illustration at right.

**b** Tighten corresponding Set Screws. Do not overtighten.

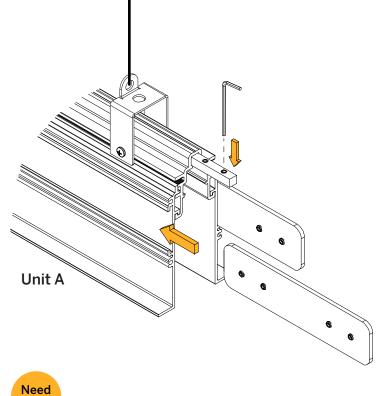






WG-20LRR-RGT9 WG-20LRR-RGT15 **Grid Trim** 

5/7


#### Step 8 - Install Joiners (continued)

- c Insert exposed Joiners on Unit A into mating channels on Unit B.
- d Draw units A and B close and tight. Tighten corresponding pairs of Set Screws. Do not overtighten.

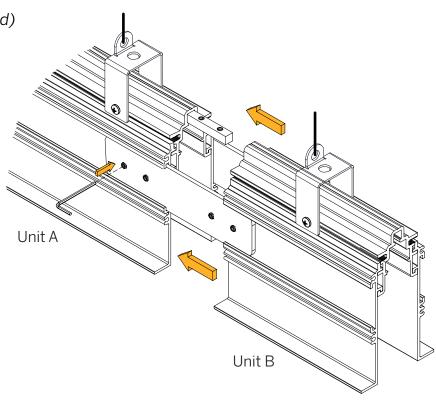

## Step 9 - Install Corners - Multi Unit Run only

The Pattern Corner is welded at the factory. Follow **Step 8** to join to existing Run. Illustration of light output shows direction only, and is not indicative of actual color, intensity, or spread.

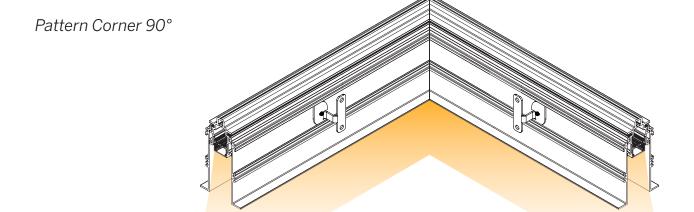

**NOTE:** Grid brackets on back side of Corner not seen in this view.






WG-20LRR-RGT9 WG-20LRR-RGT15 **Grid Trim** 

6/7

#### Step 10 - Install Housing

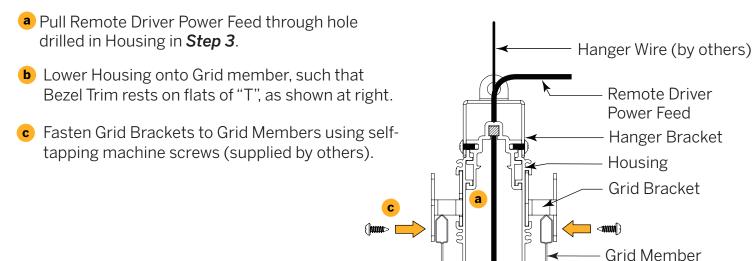


Bezel Trim

For **Stand Alone Unit**, skip to **Step 12** 

Ceiling Tile

#### Step 11 - Assemble Luminaire - Multi Unit Run only -

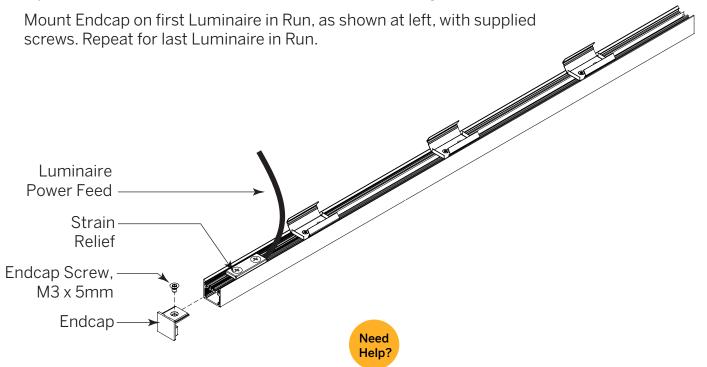

WG-20LRR-RGT9 WG-20LRR-RGT15 **Grid Trim** 

7/7

#### Step 12 - Insert & Wire Luminaire

a Connect Luminaire Power Feed to Remote Driver Power Feed with appropriate connectors (by others).

**b** Press and clip Luminaire into Luminaire Channel.

c Energize!

