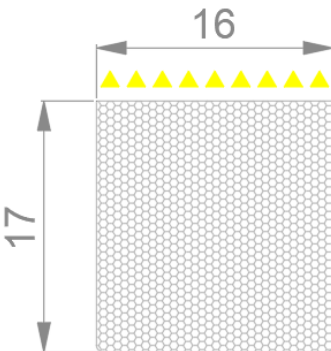


Installation Instructions

inter•lux


Flex HB W16*H17

Specification

| Basic Info | | Cross Section |
|------------|---|--|
| Dimension | W0.63"*H0.67" |  |
| Bending | Horizontal bending ONLY | |
| IP Grade | IP67 | |
| Resistant | UV, Flame, Salt, Chlorine | |
| Input | 24V DC | |
| Power | Refer to datasheet | |
| Max-Load | Refer to datasheet | |
| Cut-Unit | Refer to datasheet Or see cutting mark on neon | |

Safety & Warnings

- Product should be installed in accordance with applicable national, state, and local building and electrical codes.
- It is recommended that luminaries are installed by qualified electrician. Always switch off power supply before installation, fitting or servicing.
- Please confirm polarity(+,-) before feed power. Please use qualified DC PSU.
- Do NOT attach with anything other than associated accessories, and do NOT cover the light or allow the light to be in contact with material such as cloth which may pose a fire hazard.
- No pressing on the Neon during storage, long-term pressing may cause damage.
- Ambient installation temperature and Storage Temperature: -40°F ~ 140°F.
- Ambient working temperature: -40°F ~ 122°F(Power<180W) , -40°F ~131°F (Power<120W) , -40°F ~140°F (Power<60W) .

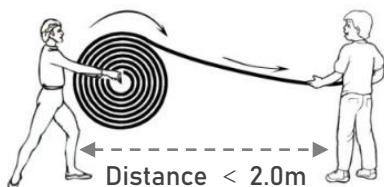

- At least two people to work together when unpacking, installing and etc.



Installation Cautions: Horizontal Bending ONLY

