

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

**Never connect to a live driver!!!**

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.




## Step 1 - Open the Box

Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. Lenses, Louvers, etc.) attached as specified. Remote Drivers and Housings are supplied by Inter-lux.

**IMPORTANT:** Fixture(s) must be wired in series! Refer to driver wiring document


## Step 2 - Install Trim

- Cut 2-1/8" (54mm) diameter hole
- Detach Trim Ring from Luminaire Body. To do so, lift Trim Ring up towards Power Cable. Three ball-nose Spring Plungers hold Luminaire Body in place and release with a small tug.
- Insert Trim Ring into hole. Use three drywall screws (by others) to secure to ceiling.
- Apply Joint Compound over Trim Ring. Do not allow Joint Compound Lip of Ring. Feather edge flush with Lip. Let dry.

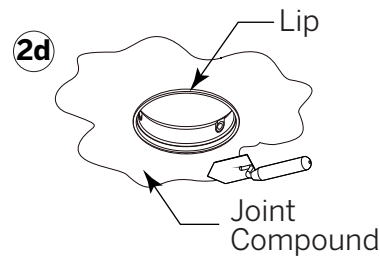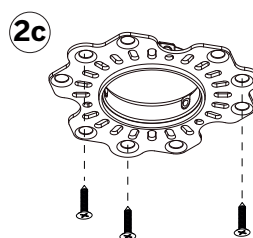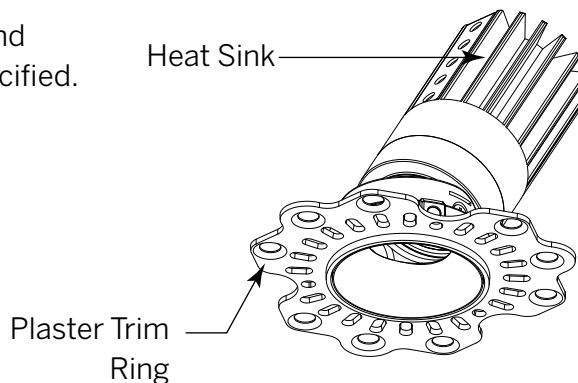

## Step 3 - Wire Luminaire

- Pull Power (and Control) cable from Ceiling.  
**IMPORTANT:** Add a bit of slack to Power Cable such that there is enough for Luminaire to be fully removed without tugging on Remote Driver.
- Connect Cable to Power Feed on Fixture using appropriate connectors (by others).

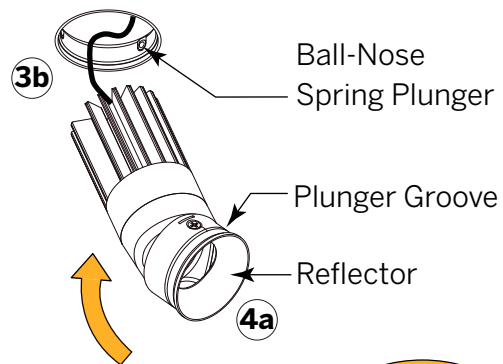

## Step 4 - Mount Luminaire

- Prior to insertion, Reflector may be adjusted up to 30° off center.
- Insert Luminaire into Trim Ring and rotate Luminaire such that Heat Sink Fins slide past Plungers. Luminaire is seated when Plungers "click" into Plunger Groove.
- Rotate Luminaire in Groove as needed to aim light.




Need Help?


## Luminaire Removal Instructions

2/2

- a** Locate Core Removal Tool, pinch legs together.

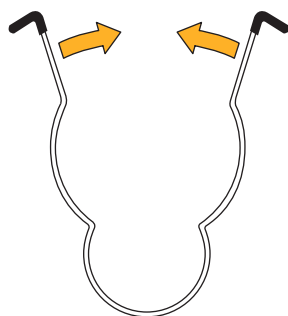


Core Removal Tool

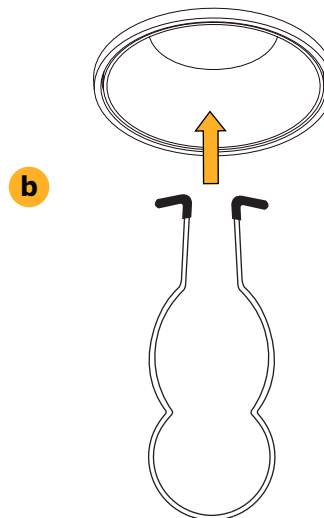

- b** Insert into center of luminaire aperture, and release tool, such that legs hook onto inner reflector.

- c** Pull on finger ring. Luminaire core will dislodge from plungers in trim with a firm tug. Take care to rotate luminaire as it is withdrawn such that heat sink and upper half of unit are not damaged.

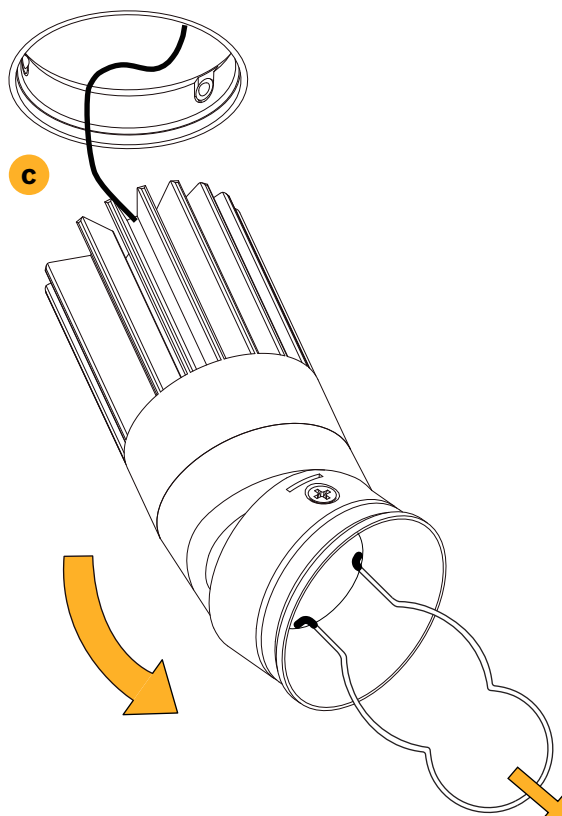

Need  
Help?