

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.




To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect to a live driver!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - Open the Box

Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. lenses, louvers, etc.) attached as specified. Remote Drivers and Housings are supplied by Inter-lux.

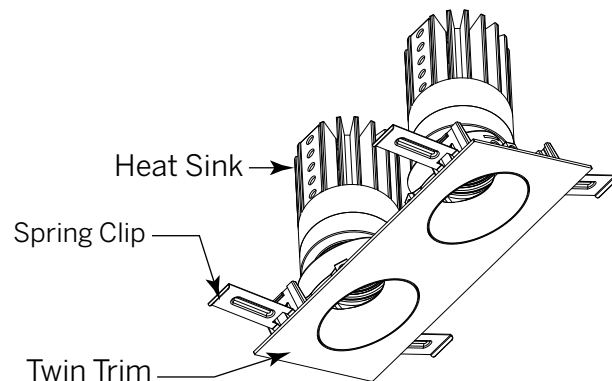

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document

Step 2 - Prep Ceiling


Cut 2-3/8" x 4-3/4" (60mm x 120mm) opening

Step 3 - Wire Luminaire

- a** Pull Power (and Control) cable from Ceiling.


IMPORTANT: Add a bit of slack to Power Cable such that there is enough for luminaire to be fully removed without tugging on remote driver.

- b** Connect Cable to Power Feed on Fixture using appropriate connectors (by others).

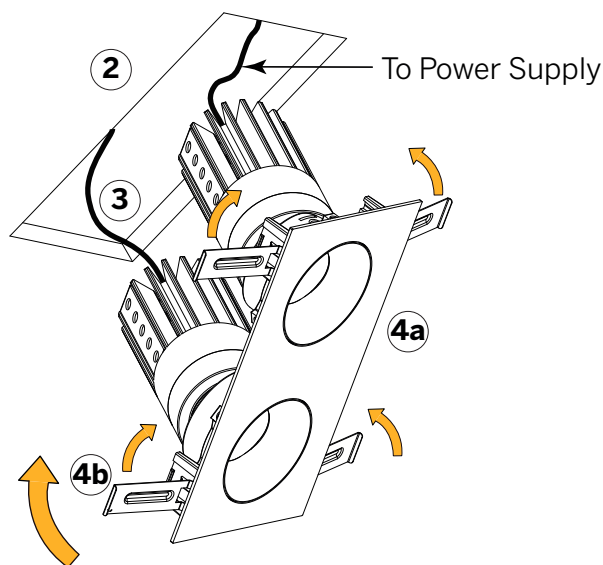

Step 4 - Mount Luminaire

- a** Prior to insertion, Reflectors/Trim may be adjusted up to 30° off center.
- b** Bend Spring Clips upward and insert Fixture into hole. Clips will spring back up above ceiling to secure. Center as necessary.
- c** Rotate Luminaire in Groove as needed to aim light.

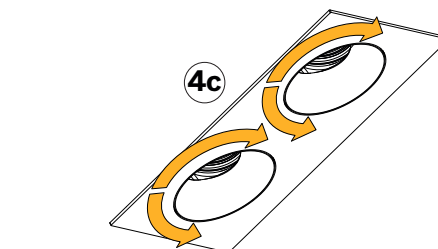

Removal:

Luminaire may be removed by gripping Bezel with fingertips and pulling down. Springs will compress allowing for better hold to pull Fixture out further.

Need
Help?