

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.


**Never connect to a live driver!!!**

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

## Step 1 - Open the Box



Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. Lenses, Louvers, etc.) attached. Remote Drivers and Housings are supplied by Inter-lux.

**IMPORTANT:** Fixture(s) must be wired in series! Refer to driver wiring document

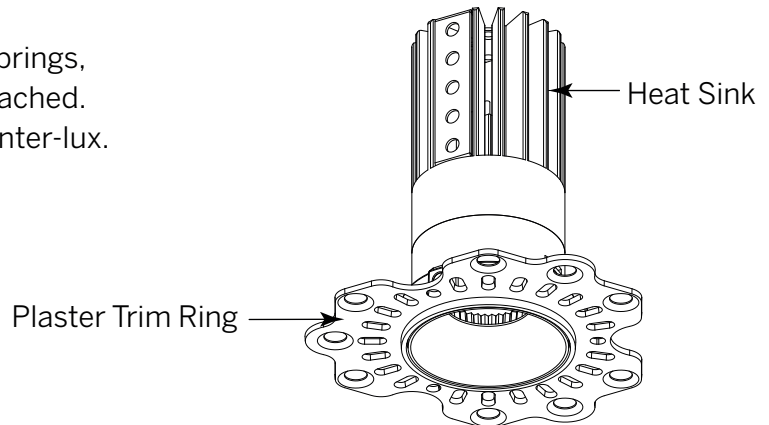


## Step 2 - Install Trim

- Cut 2-1/8" (54mm) diameter hole
- Detach Trim Ring from Luminaire Body. To do so, lift Trim Ring up towards Power Cable. Three ball-nose Spring Plungers hold Luminaire Body in place and release with a small tug.
- Insert Trim Ring into hole. Use three drywall screws (by others) to secure to ceiling.
- Apply Joint Compound over Trim Ring. Do not allow Joint Compound Lip of Ring. Feather edge flush with Lip. Let dry.

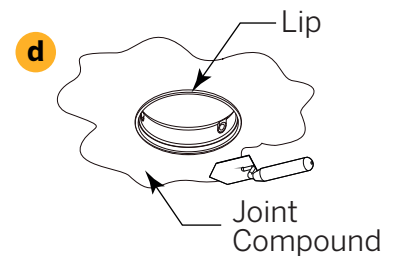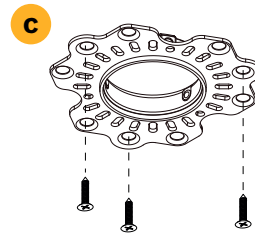

## Step 3 - Wire Luminaire

- Pull Power (and Control) cable from Ceiling.  
**IMPORTANT:** Add a bit of slack to Power Feed such that there is enough for Luminaire to be fully removed without tugging on Remote Driver.
- Connect Cable to Power Feed on Fixture using appropriate connectors (by others).

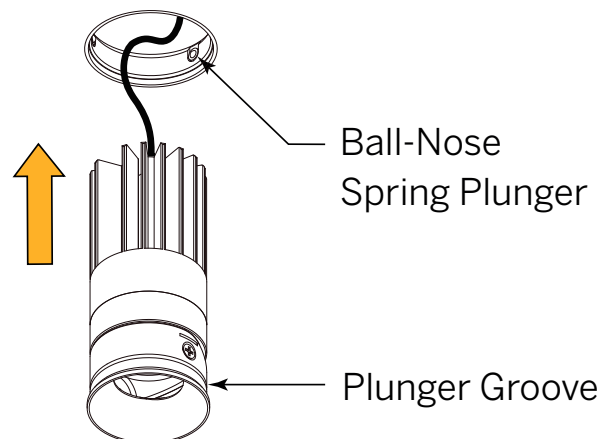

## Step 4 - Mount Luminaire


- Insert Luminaire into Trim Ring and rotate Luminaire such that Heat Sink Fins slide past Plungers.
- Continue to push Luminaire up. Luminaire is seated when Plungers "click" into Plunger Groove.

Need  
Help?

# Luminaire Removal Instructions

2/2


- a** Locate Core Removal Tool, pinch legs together.

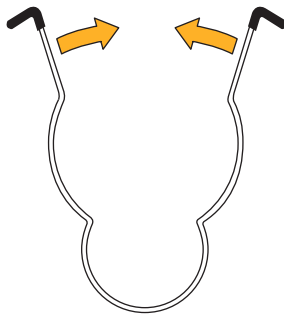

Core Removal Tool


- b** Insert tool into center of luminaire aperture, and release such that legs hook onto inner reflector.

**b**

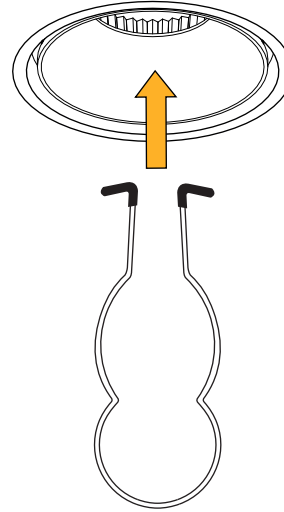

- c** Pull on finger ring. Luminaire core will dislodge from plungers in trim with a firm tug.

**c**

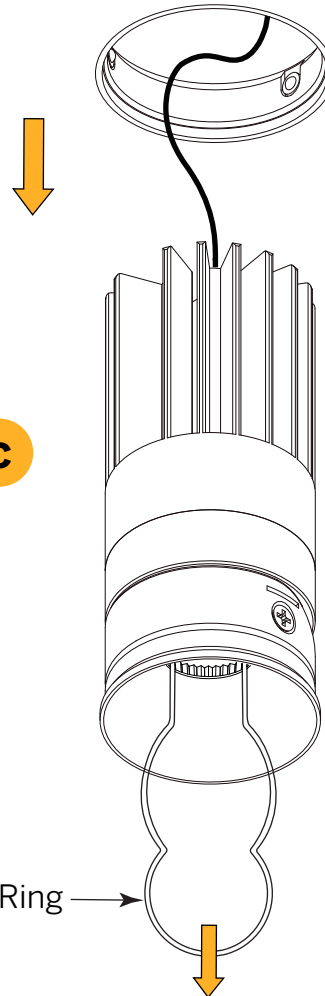

Finger Ring →

**Need  
Help?**