

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.


Never connect to a live driver!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - **Open the Box**

Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. Lenses, Louvers, etc.) attached. Remote Drivers and Housings are supplied by Inter-lux.

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document

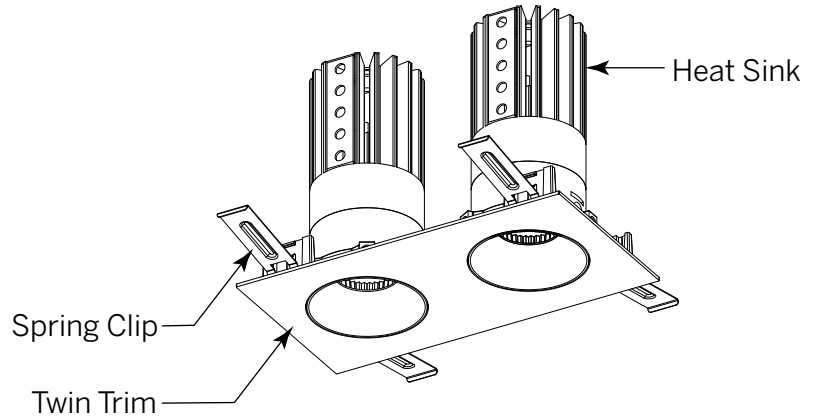

Step 2 - **Prep Ceiling**


Cut 2-3/8" x 4-3/4" (60mm x 120mm) opening

Step 3 - **Wire Luminaire**

- a** Pull Power (and Control) cable from Ceiling.

IMPORTANT: Add a bit of slack to Power Cable such that there is enough for luminaire to be fully removed without tugging on remote driver.

- b** Connect Cable to Power Feed on Fixture using appropriate connectors (by others).

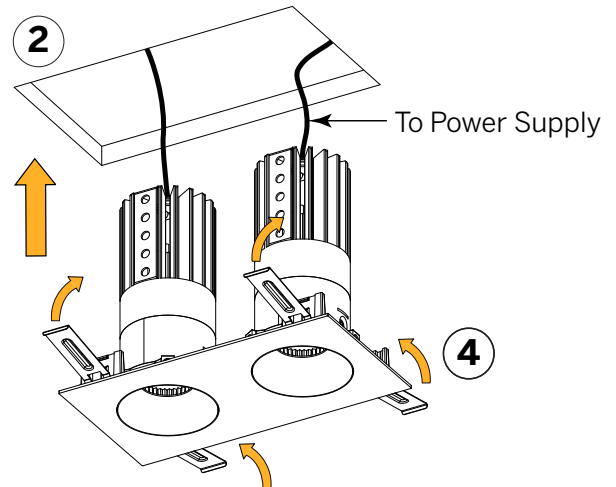

Step 4 - **Mount Luminaire**

Bend Spring Clips upward and insert Fixture into hole. Clips will spring back up above ceiling to secure. Center as necessary.

Removal:

Luminaire may be removed by gripping bezel with fingertips and pulling down. Springs will compress allowing for better hold to pull fixture out further.

Need Help?