

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

**Never connect a fixture to a live driver!!!**


Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

## Step 1 - Open the Box

Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. Lenses, Louvers, etc.) attached as specified. Remote Drivers and Housings are supplied by Inter-lux.


### IMPORTANT:

Fixture(s) must be wired in series!  
Refer to driver wiring document


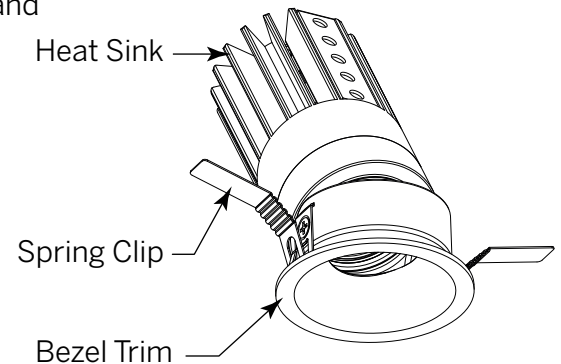


## Step 2 - Prep Ceiling

- a** Cut 1-13/16" (46mm) diameter hole

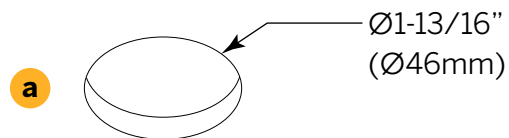

- b** If installing in an insulated ceiling, make sure that there is a minimum 3" insulation clearance all around the fixture.

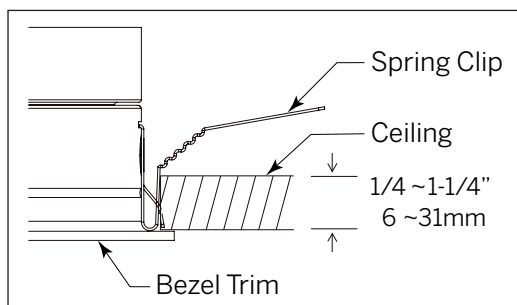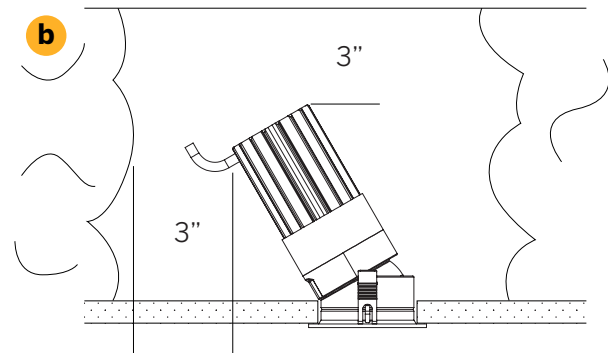

Ceiling Thickness Range

Need Help?

Step 3 - **Wire Luminaire**

2/2


- a** Pull Power (and Control) cable from Ceiling.

**IMPORTANT!** Add a bit of slack to Power Cable such that there is enough for Luminaire to be fully removed without tugging on Remote Driver.

- b** Connect Cable to Power Feed on Fixture using appropriate connectors (by others).

Step 4 - **Mount Luminaire**

- a** Prior to insertion, Reflector may be adjusted up to 30° off center.
- b** Bend Spring Clips upward and insert Fixture into hole.
- c** Fixture is seated when Clips spring back up above ceiling to secure.
- d** Rotate Luminaire in Groove as needed to aim light.

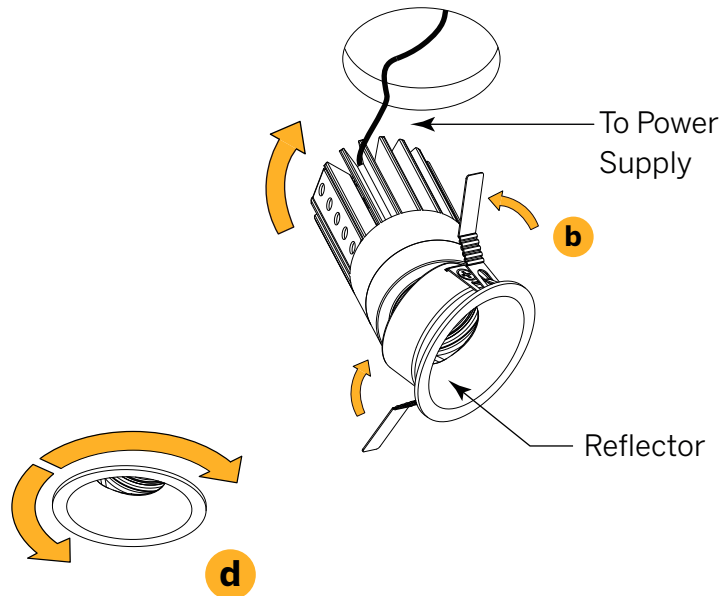**To Remove Luminaire**

Luminaire may be removed by gripping Bezel with fingertips and pulling down. Springs will compress allowing for better hold to pull fixture out further.

Need  
Help?