

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.


Never connect a fixture to a live driver!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - Open the Box

Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. Lenses, Louvers, etc.) attached as specified. Remote Drivers and Housings are supplied by Inter-lux.

IMPORTANT:
Fixture(s) must be
wired in series!
Refer to driver
wiring document

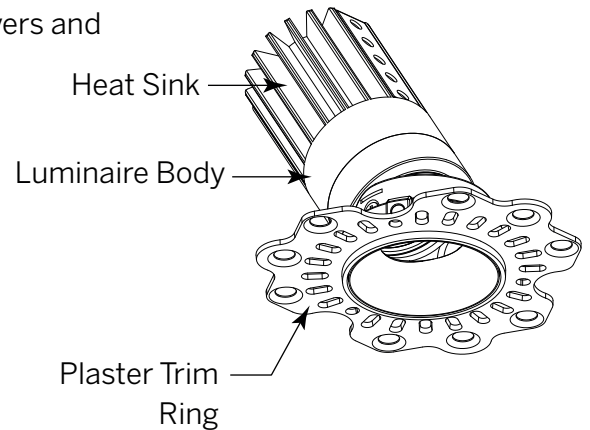

Step 2 - Ceiling Prep


a Cut 2-1/8" (54mm) diameter hole.

a



b If installing in an insulated ceiling, make sure that there is a minimum 3" insulation clearance all around the fixture.


b

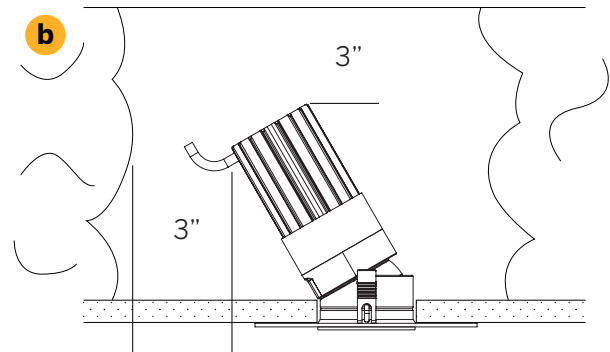


Need
Help?

Step 3 - *Install Trim*

- a** Detach Trim Ring from Luminaire Body. To do so, push Trim Ring up towards Heat Sink. Three ball-nose Spring Plungers hold Luminaire Body in place will dislodge from Plunger Groove (see **Step 5**) on Luminaire Body.

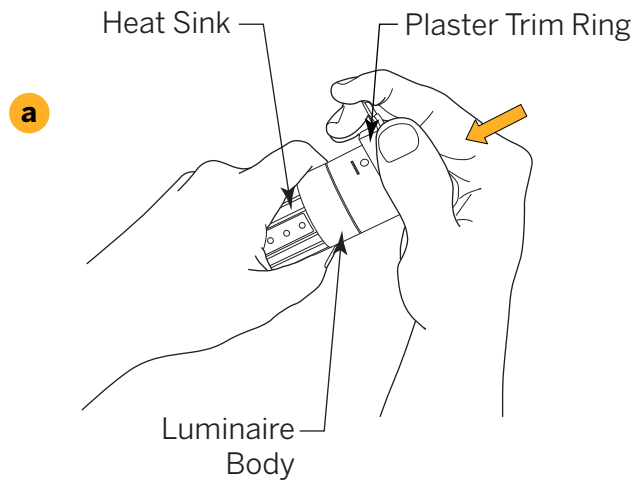

- b** Insert Trim Ring into hole. Use three drywall screws (by others) to secure to ceiling.
- c** Apply Joint Compound over Trim Ring. **Do not** allow Joint Compound on Lip of Ring. Feather edge flush with Lip. Let dry.

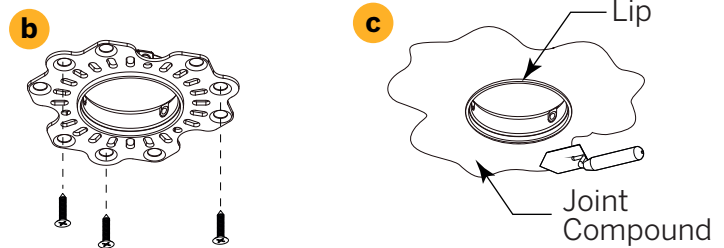

Step 4 - *Wire Luminaire*


- a** Pull Power (and Control) cable from Ceiling.

IMPORTANT: Add a bit of slack to Power Cable such that there is enough for Luminaire to be fully removed without tugging on Remote Driver.

- b** Connect Cable to Power Feed on Fixture using appropriate connectors (by others).

Step 5 - *Mount Luminaire*


- a** Prior to insertion, Reflector may be adjusted up to 30° off center.
- b** Insert Luminaire into Trim Ring and rotate Luminaire such that Heat Sink Fins slide past Plungers. Luminaire is seated when Plungers "click" into Plunger Groove.
- c** Rotate Luminaire in Groove as needed to aim light.

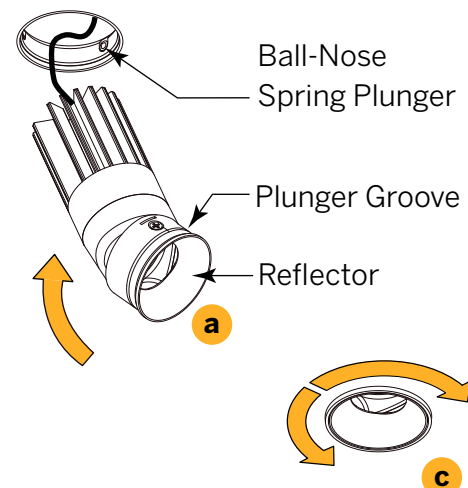

Need
Help?


To Remove Luminaire

3/3

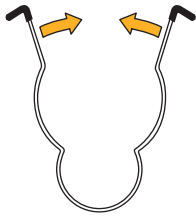


Core Removal Tool

- a** Locate Core Removal Tool, pinch legs together.

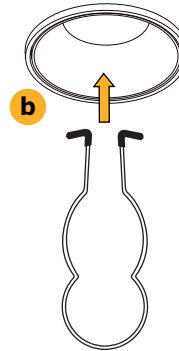

- b** Insert into center of Luminaire aperture, and release, such that legs hook onto inner reflector.

- c** Pull on finger ring. Luminaire core will dislodge from plungers in trim with a firm tug. Take care to rotate luminaire as it is withdrawn such that heat sink and upper half of unit are not damaged.

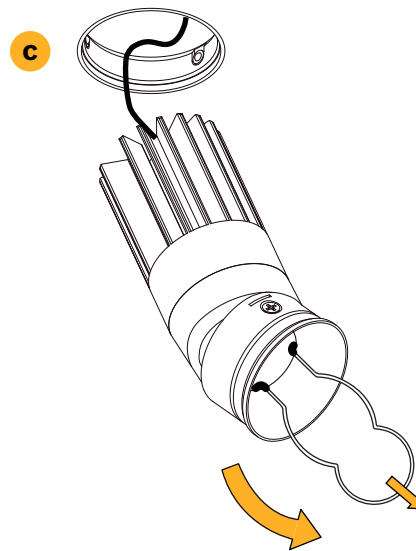

Need
Help?