

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect a fixture to a live driver!!!


Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - Open the Box

Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. lenses, louvers, etc.) attached as specified. Remote Drivers and Housings are supplied by Inter-lux.

IMPORTANT:


Fixture(s) must be wired in series!
Refer to driver wiring document

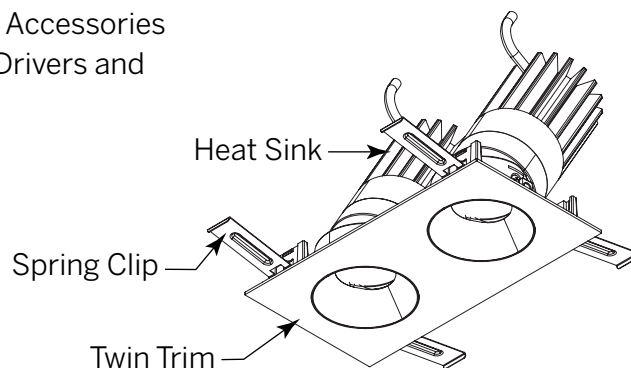

Step 2 - Prep Ceiling



- a** Cut 2-3/8" x 4-3/4" (60mm x 120mm) opening

a

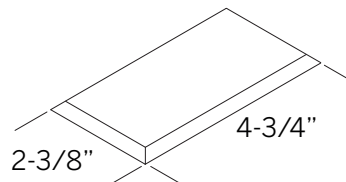

- b** If installing in an insulated ceiling, make sure that there is a minimum 3" insulation clearance all around the fixture.

b

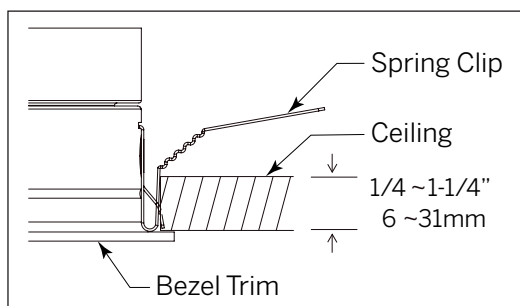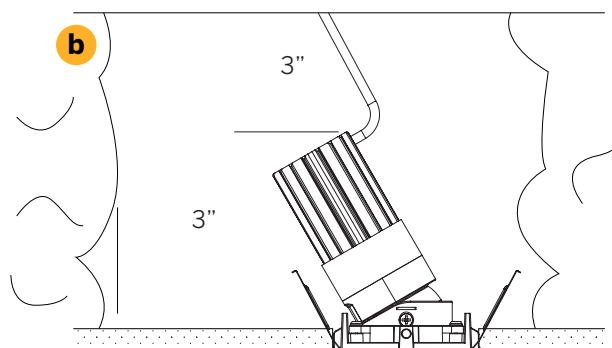

Ceiling Thickness Range

Need
Help?

Step 3 - Wire Luminaire


- a** Pull Power (and Control) cable from Ceiling.

IMPORTANT: Add a bit of slack to Power Cable such that there is enough for Luminaire to be fully removed without tugging on Remote Driver.

- b** Connect Cable to Power Feed on Fixture using appropriate connectors (by others).

Step 4 - Mount Luminaire

- a** Prior to insertion, Reflectors/Trim may be adjusted up to 30° off center.
- b** Bend Spring Clips upward and insert Fixture into hole. Clips will spring back up above ceiling to secure. Center as necessary.
- c** Rotate Luminaires in their respective Grooves as needed to aim light.

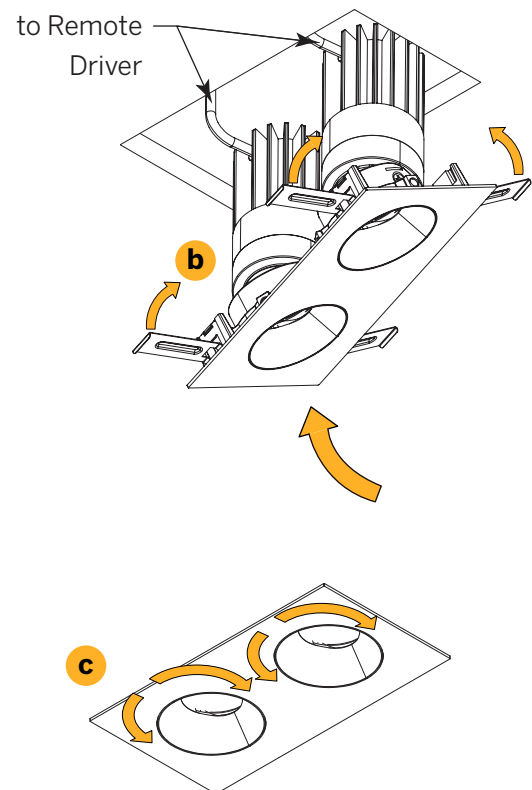**To Remove Luminaire**

Luminaire may be removed by gripping Twin Trim Bezel with fingertips and pulling down. Springs will compress allowing for better hold to pull Fixture out further.

Need
Help?