

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.


Never connect a fixture to a live driver!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - Open the Box


Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. Lenses, Louvers, etc.) attached as specified. Remote Drivers and Housings are supplied by Inter-lux.

IMPORTANT:
Fixture(s) must be wired in series!
Refer to driver wiring document


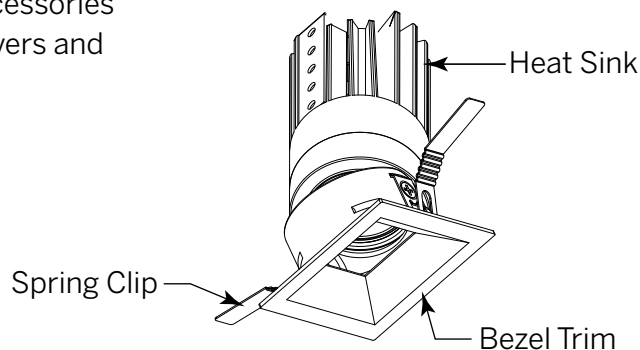


Step 2 - Prep Ceiling

- a** Cut 1-13/16" x 1-13/16" (46mm x 46mm) square hole.

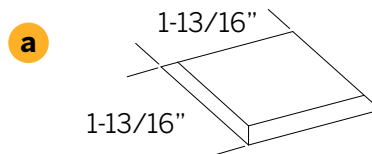

- b** If installing in an insulated ceiling, make sure that there is a minimum 3" insulation clearance all around the fixture.

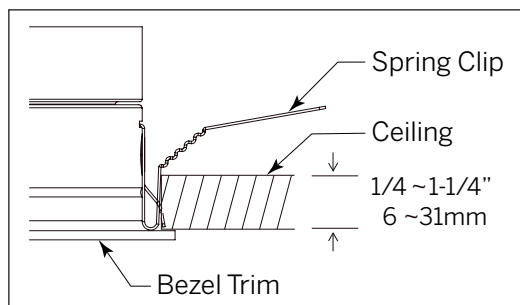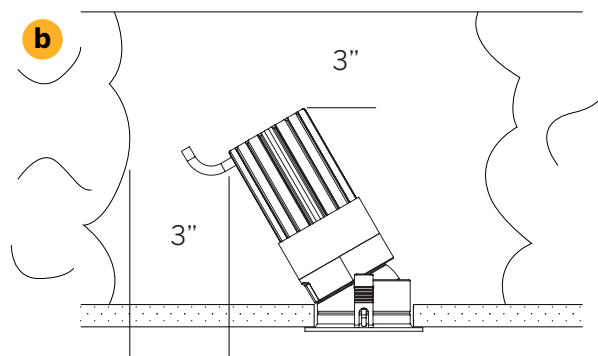

Ceiling Thickness Range

Need Help?

Step 3 - *Wire Luminaire*

2/2


- a** Pull Power (and Control) cable from Ceiling.

IMPORTANT! Add a bit of slack to Power Cable such that there is enough for Luminaire to be fully removed without tugging on Remote Driver.

- b** Connect Cable to Power Feed on Fixture using appropriate connectors (by others).

Step 4 - *Mount Luminaire*

- a** Prior to insertion, Reflector may be adjusted up to 30° off center.
- b** Bend Spring Clips upward and insert Fixture into hole.
- c** Fixture is seated when Clips spring back up above ceiling to secure.

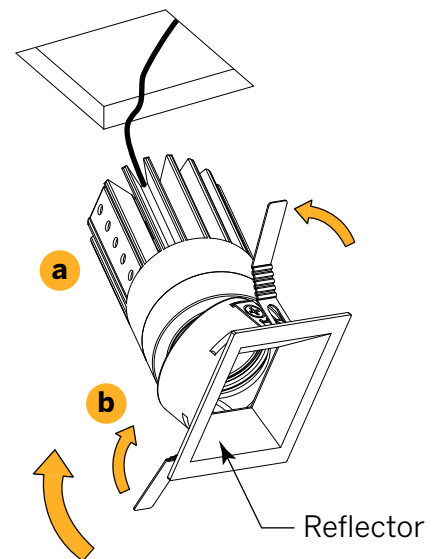

To Remove Luminaire

Luminaire may be removed by gripping Bezel with fingertips and pulling down. Springs will compress allowing for better hold to pull fixture out further.

Need
Help?