

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.


Never connect to a live driver!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - Open the Box


Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. Lenses, Louvers, etc.) attached as specified. Remote Drivers and Housings are supplied by Inter-lux.

IMPORTANT:
Fixture(s) must be wired in series!
Refer to driver wiring document

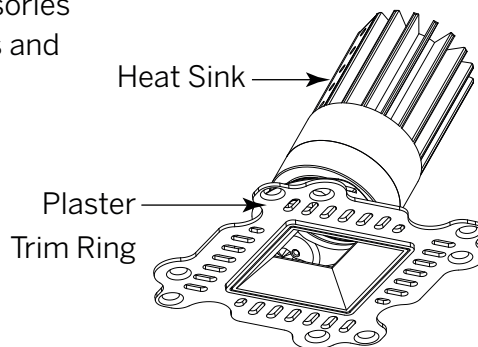


Step 2 - Ceiling Prep

- a** Cut 2-1/8" x 2-1/16" (54mm x 54mm) square hole.

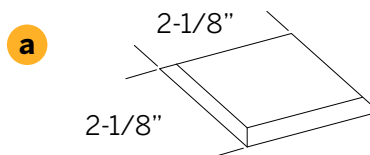


- b** If installing in an insulated ceiling, make sure that there is a minimum 3" insulation clearance all around the fixture.

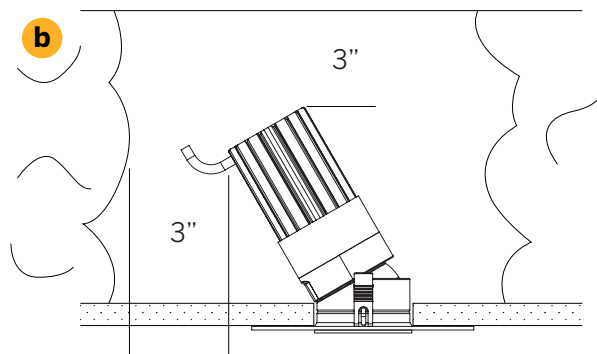

Need Help?

Step 3 - *Install Trim*

- a** Detach Trim Ring from Luminaire Body. To do so, lift Trim Ring up towards Power Cable. Four ball-nose Spring Plungers hold Luminaire Body in place and release with a small tug.
- b** Insert Trim Ring into hole. Use four drywall screws (by others) to secure to ceiling.
- c** Apply Joint Compound over Trim Ring. Do not allow Joint Compound Lip of Ring. Feather edge flush with Lip. Let dry.

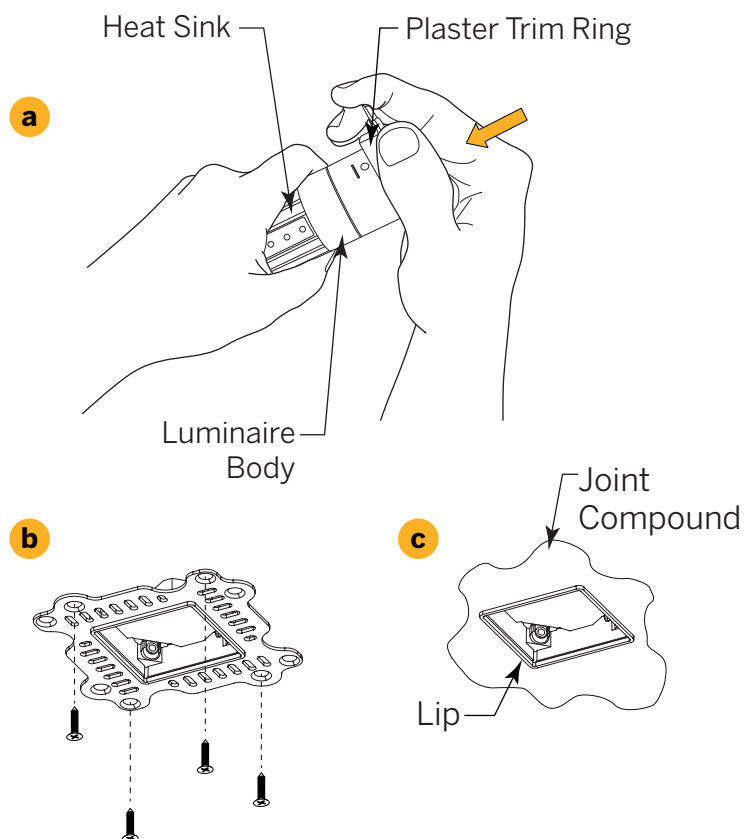


Step 4 - *Wire Luminaire*

- a** Pull Power (and Control) cable from Ceiling.
IMPORTANT: Add a bit of slack to Power Cable such that there is enough for Luminaire to be fully removed without tugging on Remote Driver.
- b** Connect Cable to Power Feed on Fixture using appropriate connectors (by others).


Step 5 - *Mount Luminaire*

- a** Prior to insertion, Reflector may be adjusted up to 30° off center.
- b** Insert Luminaire into Trim Ring and rotate Luminaire such that Heat Sink Fins slide past Plungers. Luminaire is seated when Plungers "click" into Plunger Groove.

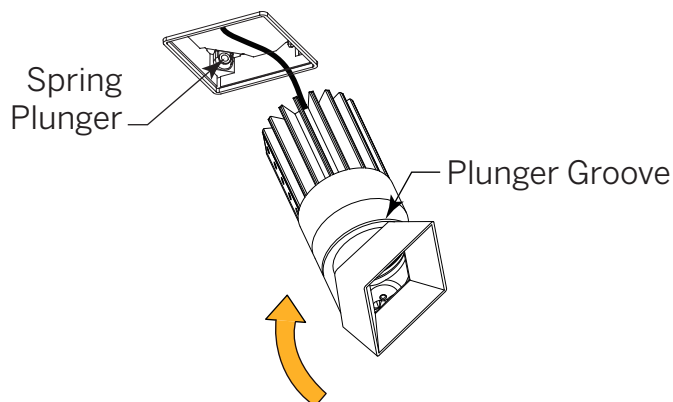


Need
Help?

To Remove Luminaire

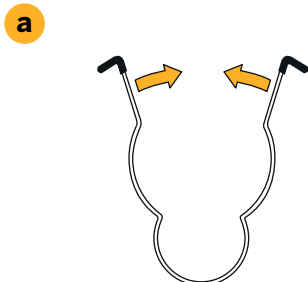


Core Removal Tool

- a** Locate Core Removal Tool, pinch legs together.

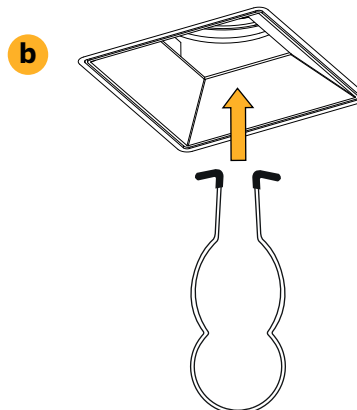

- b** Insert tool into center of luminaire aperture, and release such that legs hook onto inner reflector.

- c** Pull on finger ring. Luminaire core will dislodge from plungers in trim with a firm tug. Take care to rotate luminaire as it is withdrawn such that heat sink and upper half of unit are not damaged.

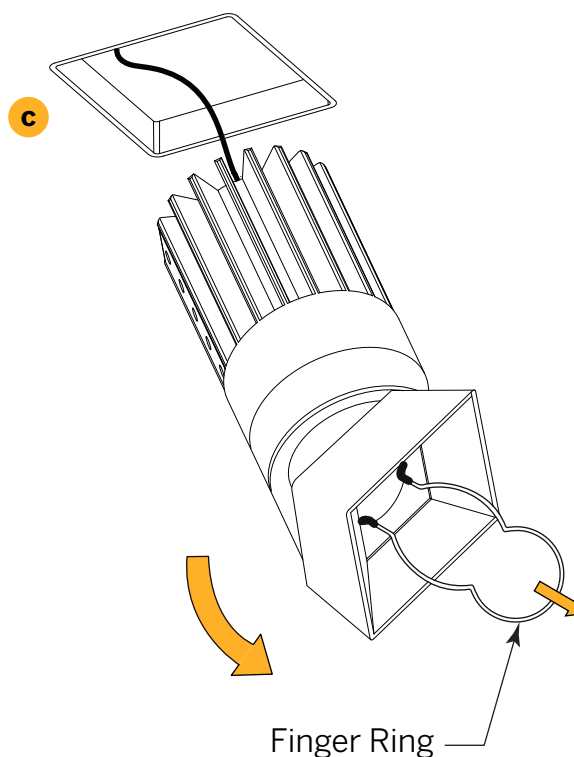

Finger Ring

Need
Help?