

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.


Never connect a fixture to a live driver!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - **Open the Box**


Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. lenses, louvers, etc.) attached, as specified. Remote Drivers and Housings are supplied by Inter-lux.

IMPORTANT:
Fixture(s) must be
wired in series!
Refer to driver
wiring document


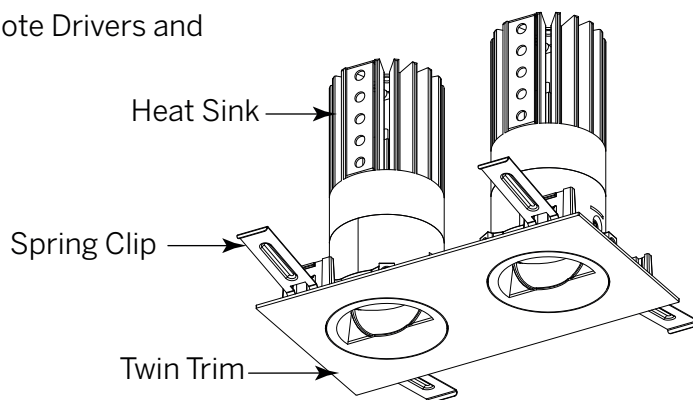


Step 2 - **Prep Ceiling**

 - a** Cut 2-3/8" x 4-3/4" (60mm x 120mm) opening



- b** If installing in an insulated ceiling, make sure that there is a minimum 3" insulation clearance all around the fixture.

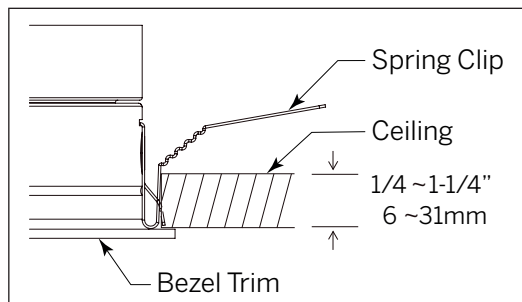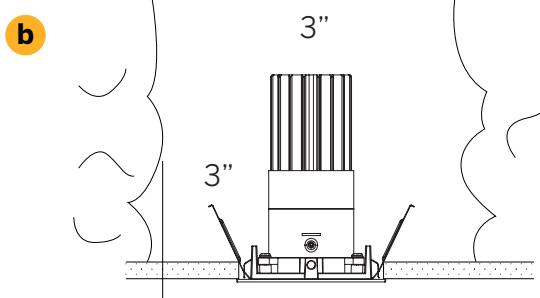

Ceiling Thickness Range

**Need
Help?**

Step 3 - **Wire Luminaire**


- a** Pull Power (and Control) cable from Ceiling.

IMPORTANT: Add a bit of slack to Power Cable such that there is enough for Luminaire to be fully removed without tugging on Remote Driver.

- b** Connect Cable to Power Feed on Fixture using appropriate connectors (by others).

Step 4 - **Mount Luminaire**

- a** Bend Spring Clips upward and insert Fixture into hole. Clips will spring back up above ceiling to secure. Center as necessary.
- b** Rotate Luminaires inside Trim such that Rear Edges of Wall Wash Openings are parallel with Wall.

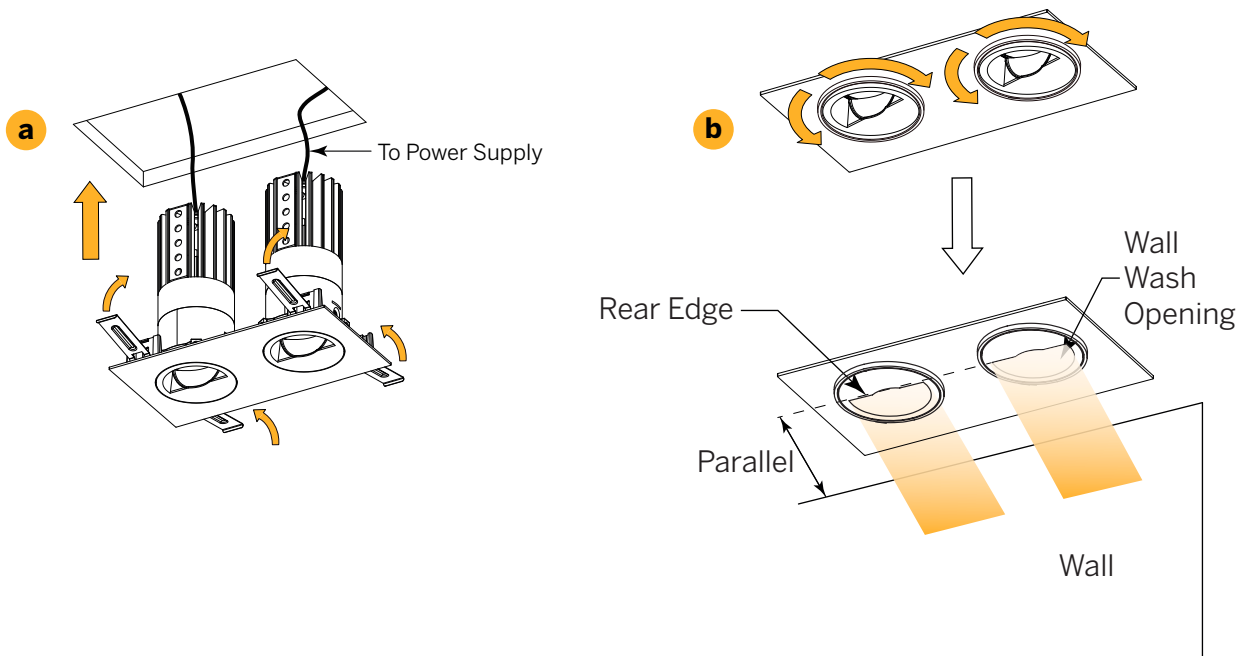

To Remove Luminaire

Luminaire may be removed by gripping Bezel Trim with fingertips and pulling down. Springs will compress allowing for better hold to pull fixture out further.

