

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect to a live driver!!!


Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - Open the Box

Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. Lenses, Louvers, etc.) attached as specified. Remote Drivers and Housings are supplied by Inter-lux.


IMPORTANT:

Fixture(s) must be wired in series!
Refer to driver wiring document

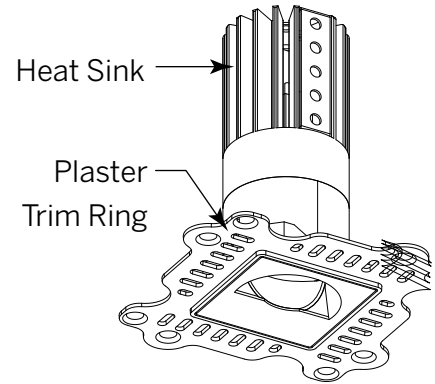


Step 2 - Install Trim

- a** Cut 2-1/8" x 2-1/16" (54mm x 54mm) square hole.

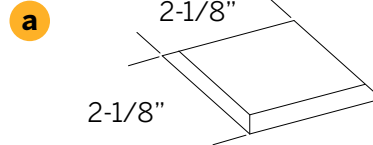


- b** If installing in an insulated ceiling, make sure that there is a minimum 3" insulation clearance all around the fixture.

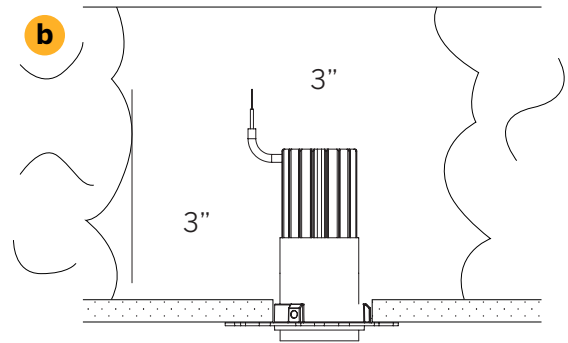



Need
Help?

Step 3 - *Install Trim*

- a** Detach Trim Ring from Luminaire Body. To do so, lift Trim Ring up towards Power Cable. Four ball-nose Spring Plungers hold Luminaire Body in place and release with a small tug.

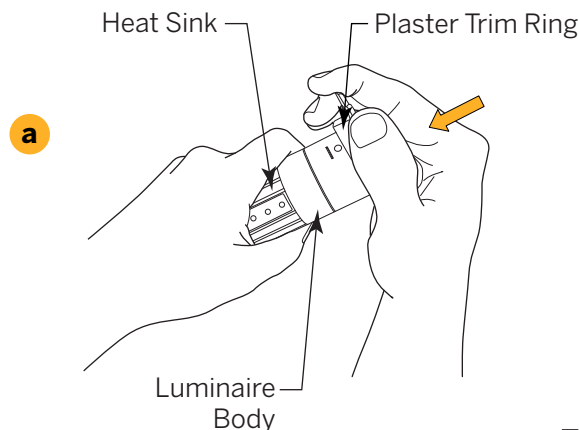

- b** Insert Trim Ring into hole. Use four drywall screws (by others) to secure to ceiling.
- c** Apply Joint Compound over Trim Ring. Do not allow Joint Compound Lip of Ring. Feather edge flush with Lip. Let dry.

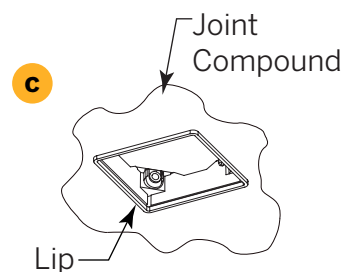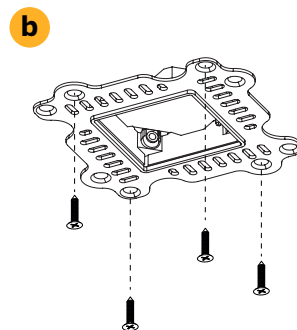


Step 4 - *Wire Luminaire*

- a** Pull Power (and Control) cable from Ceiling.
IMPORTANT: Add a bit of slack to Power Feed such that there is enough for Luminaire to be fully removed without tugging on Remote Driver.
- b** Connect Cable to Power Feed on Fixture using appropriate connectors (by others).


Step 5 - *Mount Luminaire*

- a** Insert Luminaire into Trim Ring and rotate Luminaire such that Heat Sink Fins slide past Plungers.
- b** Rotate Luminaire again such that Wall Wash opening is parallel to Wall.
- c** Continue to push Luminaire up. Luminaire is seated when Plungers "click" into Plunger Groove.

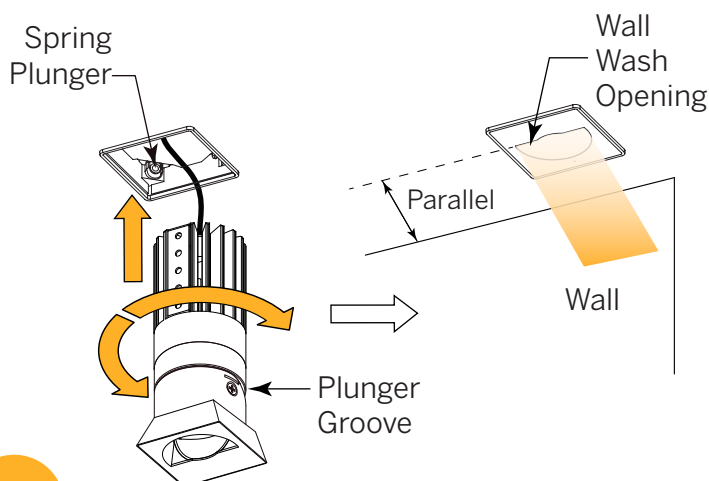


Need
Help?

To Remove Luminaire

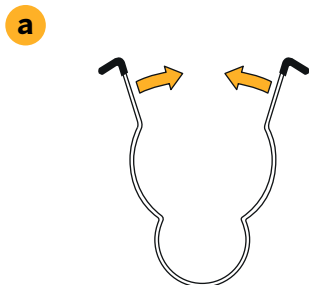


Core Removal Tool

- a** Locate Core Removal Tool, pinch legs together.

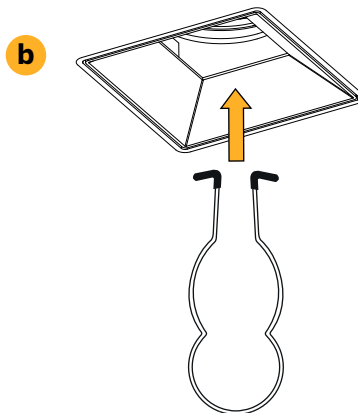

- b** Insert tool into center of luminaire aperture, and release such that legs hook onto inner reflector.

- c** Pull on finger ring. Luminaire core will dislodge from plungers in trim with a firm tug.

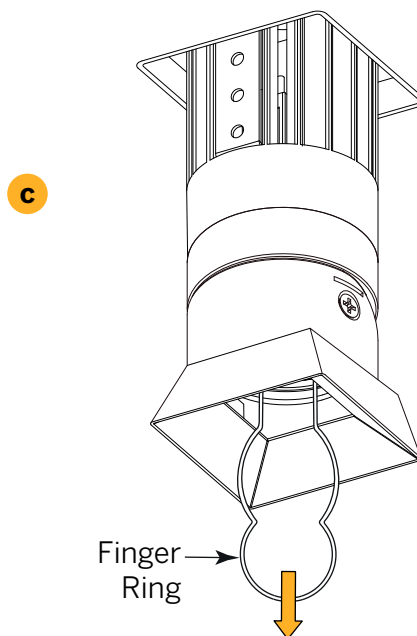

Need
Help?