

3" ProTools

WG-75RPTAWW-RBT
WG-75SPTAWW-RBT

Installation Instructions

Accent Wall Wash

Round and Square
Recessed Bezel Trim

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document


Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect a fixture to a live driver!!!


Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

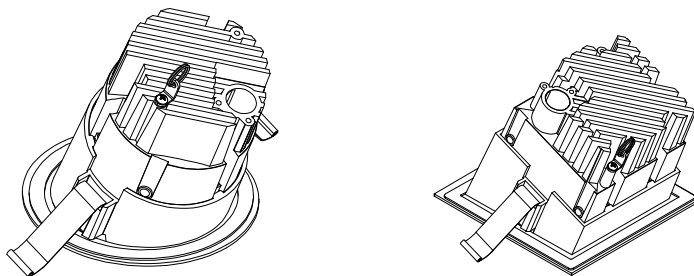

Step 1 - Open the Box


Unpack Luminaire unit. Unit ships in **three** major parts: Fixture Insert, Driver Box, and Cover/Lens. Remote drivers and housings are supplied by Inter-lux. If Drivers are not supplied, then Plenum-rated cable with bare leads is provided.

1

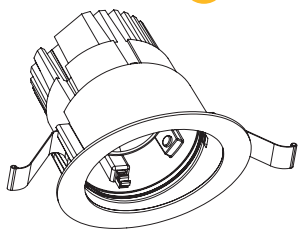


Fixture Insert

2


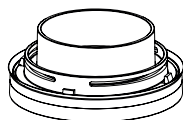


Cover Lens

3

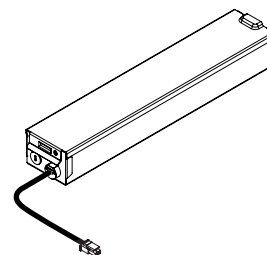

Driver Box

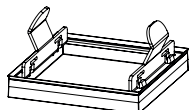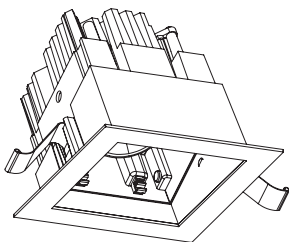

NOTE: Safety Cable not supplied with fixture.

Need Help?

3" ProTools

WG-75RPTAWW-RBT
WG-75SPTAWW-RBT

Accent Wall Wash

Round and Square
Recessed Bezel Trim

2/4


Step 2 - Ceiling Prep

- a** Cut appropriate size opening in the ceiling as shown at right.


Ceiling Thickness

Minimum: 0.05"
Maximum: 1.00"

- b** Clear any insulation at least 3" from any part of the Fixture or Driver Enclosure.

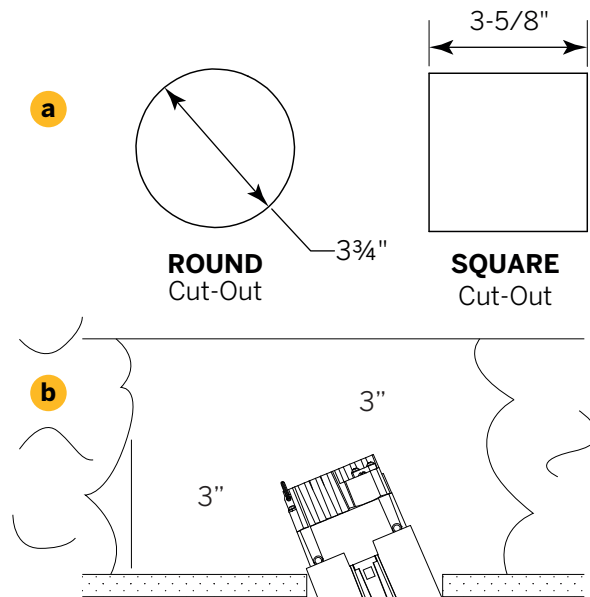


- c** Before Installation in dry location, remove supplied Gasket. For wet location, remove Paper Backing from Gasket, expose adhesive and apply Gasket to Inside Trim.

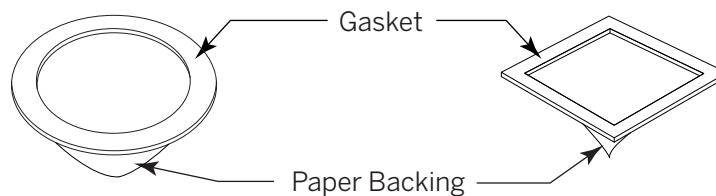

Step 3 - Wire Driver Box to Incoming Power and to Fixture Insert

NOTE: Conduit for Illustration only.
Conduit not supplied.

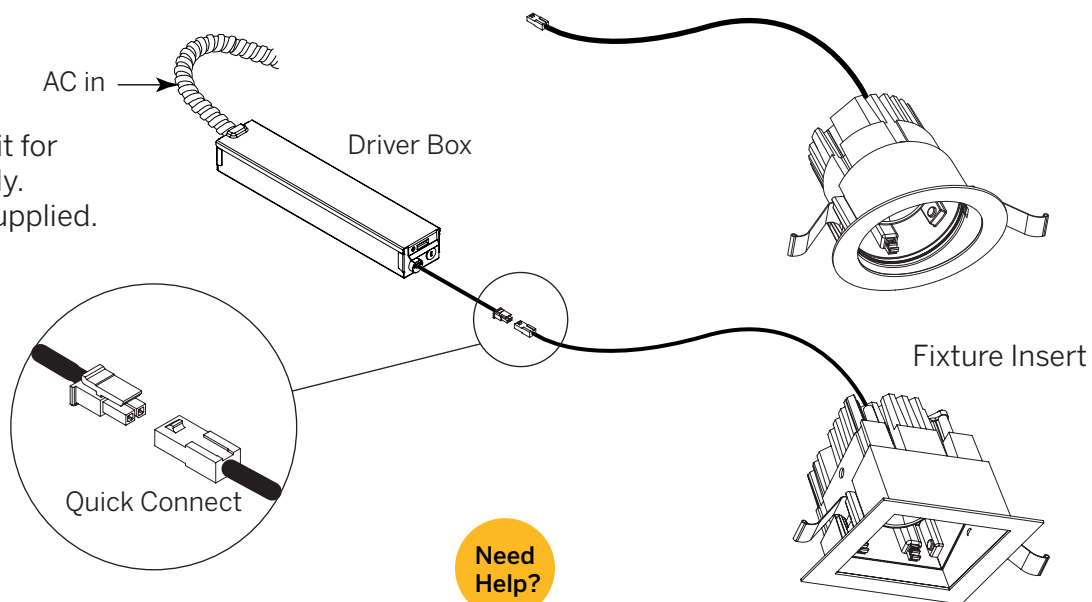

3" ProTools

WG-75RPTAWW-RBT
WG-75SPTAWW-RBT


Accent Wall Wash

Round and Square
Recessed Bezel Trim

3/4

Step 5 - **Orient Fixture**


Orient Fixture Insert such that Wall Wash Lens/Cover faces opposite wall surface.

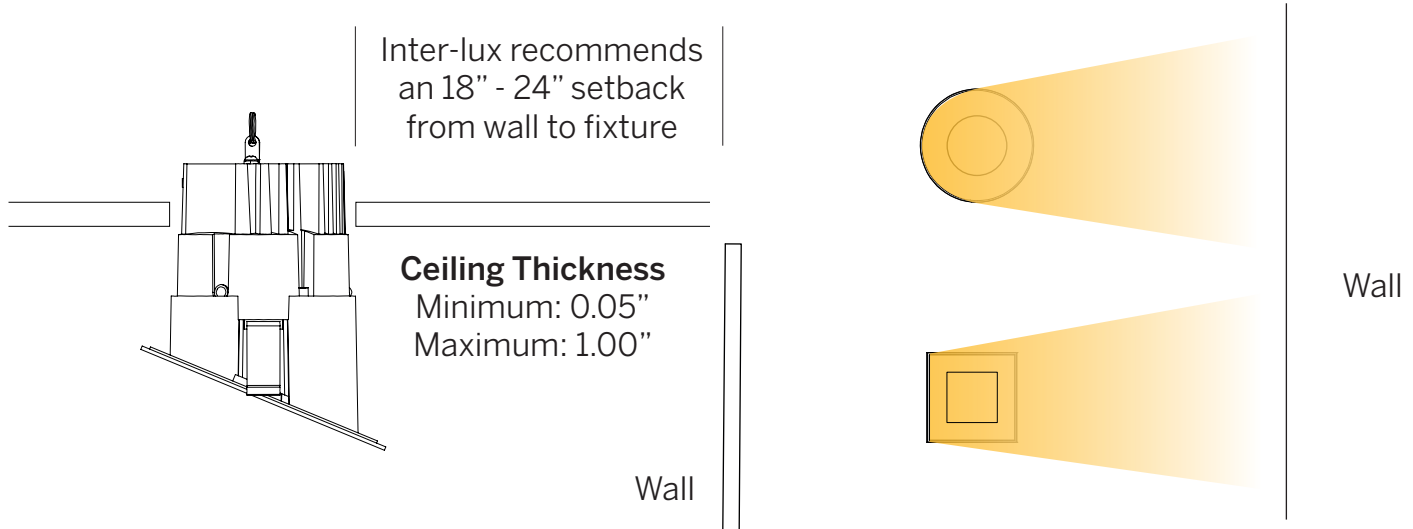

Step 6 - **Mount Fixture**

- a** Compress Springs against housing
- b** Push Fixture Insert though ceiling hole.
- c** Once through hole, release Springs and adjust Insert such that Bezel is flat on ceiling.

IMPORTANT: Be careful not to damage LED or Optic during installation process.

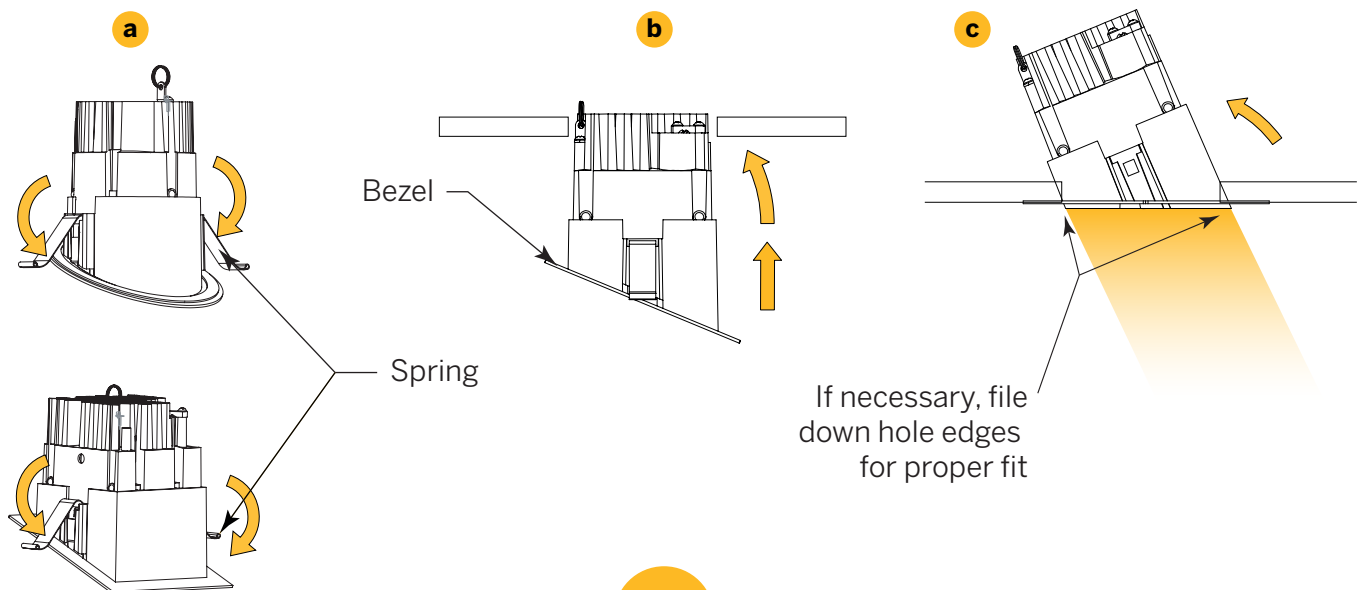

Need
Help?

3" ProTools

WG-75RPTAWW-RBT
WG-75SPTAWW-RBT

Accent Wall Wash

Round and Square
Recessed Bezel Trim


4/4

Step 7 - *Install Cover/Lens*

- a** Latches are push-to-lock/push-to-release. Check that latches are **OPEN** (down) to receive Cover/Lens.
- b** Orient slots in Cover/Lens with Latch locations. Push up into Fixture Insert until a click is heard. Release, and Cover/Lens will be locked in place.

NOTE: Round Insert has (3) Latches.
Square Insert has (4) Latches.



Cover/Lens Latches

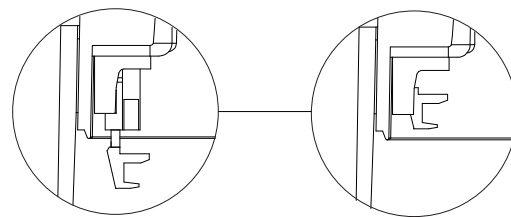

OPEN
Latches Down

CLOSED
Latches Up

Housings and Fixture
Inserts shown upright
and out of ceiling for
clarity

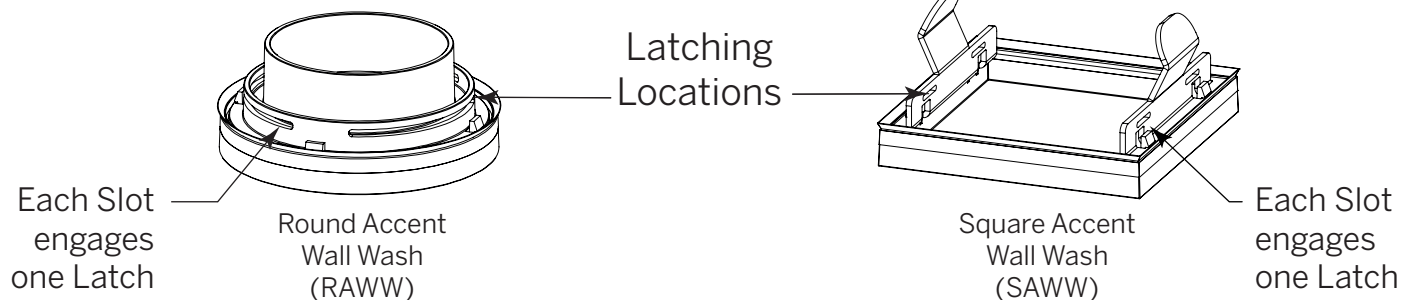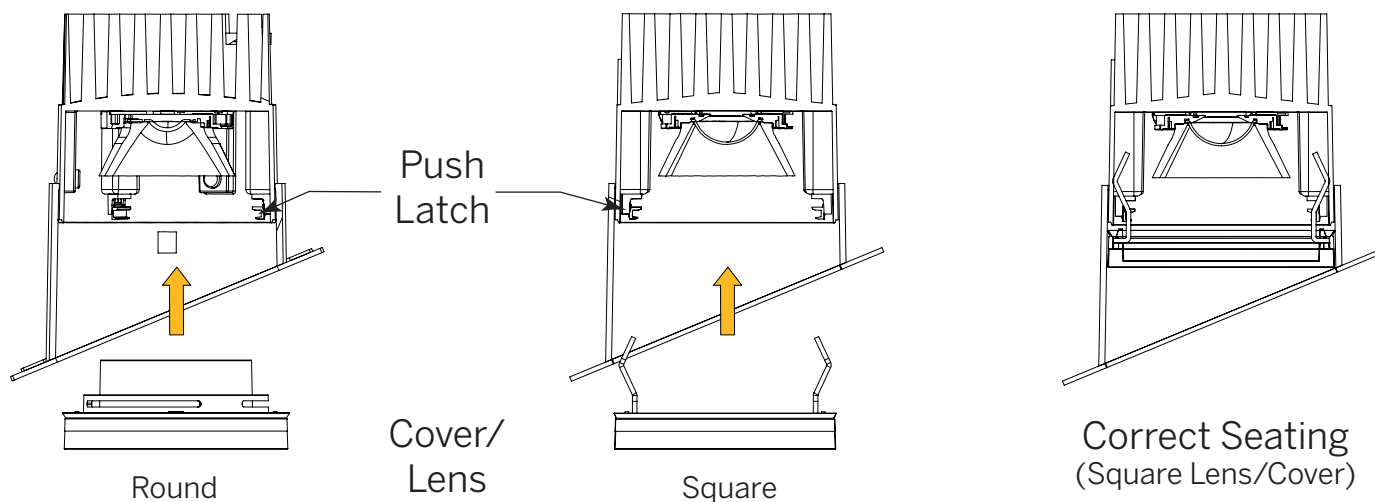

**Need
Help?**