

3" ProTools

WG-75RPTWW-RBT
WG-75SPTWW-RBT

Installation Instructions

Wall Wash

Round and Square
Recessed Bezel Trim

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document


Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect a fixture to a live driver!!!


Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

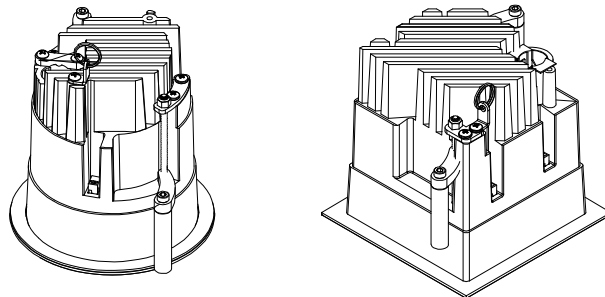

Step 1 - *Open the Box*


Unpack Luminaire unit. Unit ships in **three** major parts: Fixture Insert, Driver Box, and Lens/Cover. Remote drivers and housings are supplied by Inter-lux. If Drivers are not supplied, then Plenum-rated cable with bare leads is provided.

1

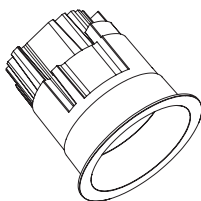


Fixture Insert

2


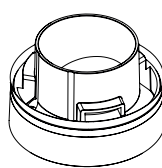


Lens/Cover

3

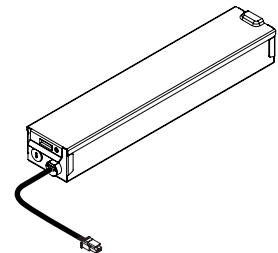

Driver Box

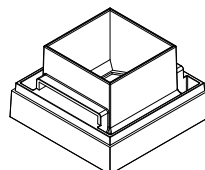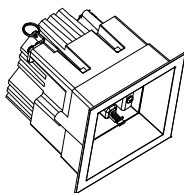

NOTE: Safety Cable not supplied with fixture.

Need
Help?

3" ProTools

WG-75RPTWW-RBT
WG-75SPTWW-RBT

Wall Wash


Round and Square
Recessed Bezel Trim

Step 2 - Ceiling Preparation

- a Cut appropriate size opening in the ceiling as shown at right.


Ceiling Thickness

Minimum: 0.05"
Maximum: 1.00"

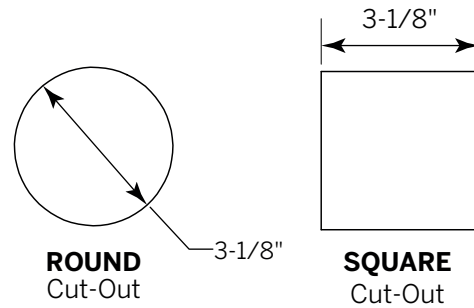


2/5

- b Clear any insulation at least 3" from any part of the Fixture or Driver Box.

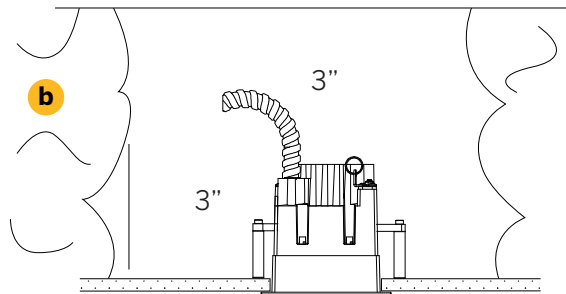


- c Before Installation in dry location, remove supplied Gasket. For wet location, remove Paper Backing from Gasket and adhere Gasket to inside trim.

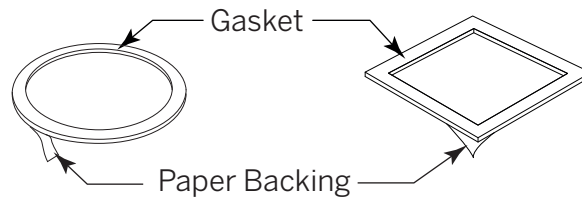

Step 3 - Wire Driver Box to Incoming Power and to Fixture Insert

NOTE: Conduit for Illustration only.
Conduit not supplied.

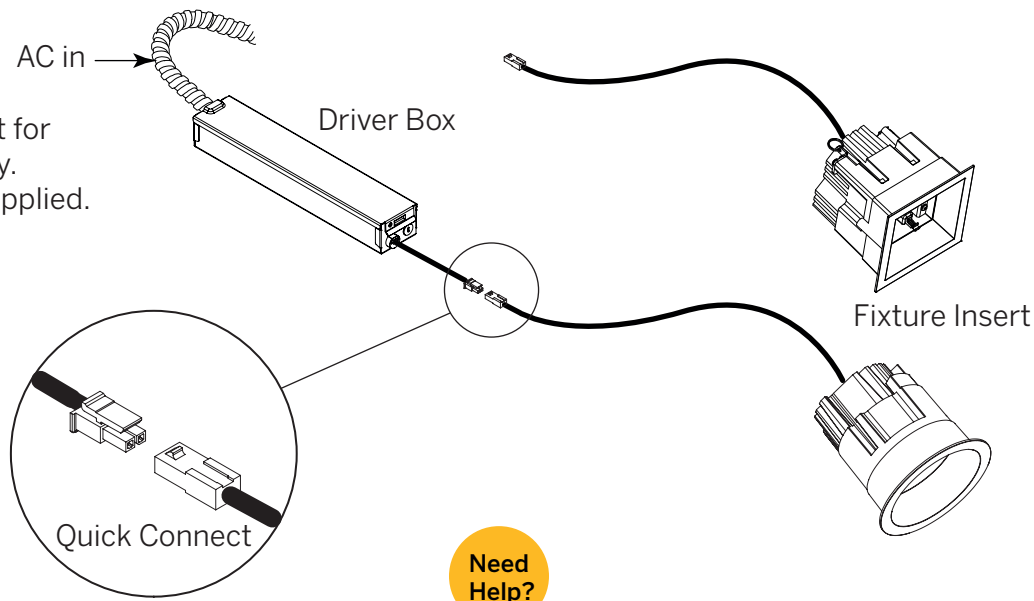

3" ProTools


WG-75RPTWW-RBT

WG-75SPTWW-RBT


Wall Wash

Round and Square
Recessed Bezel Trim

Step 4 - *Fixture Orientation*

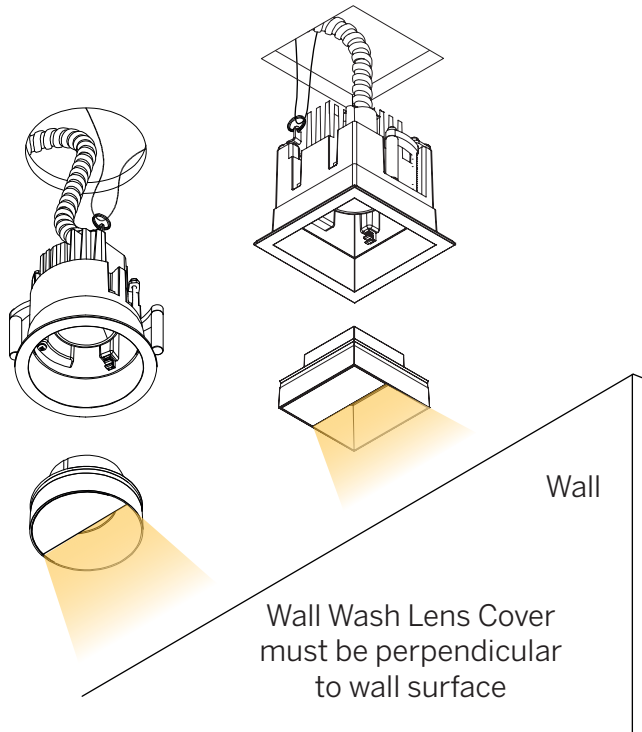


Note orientation of Latches

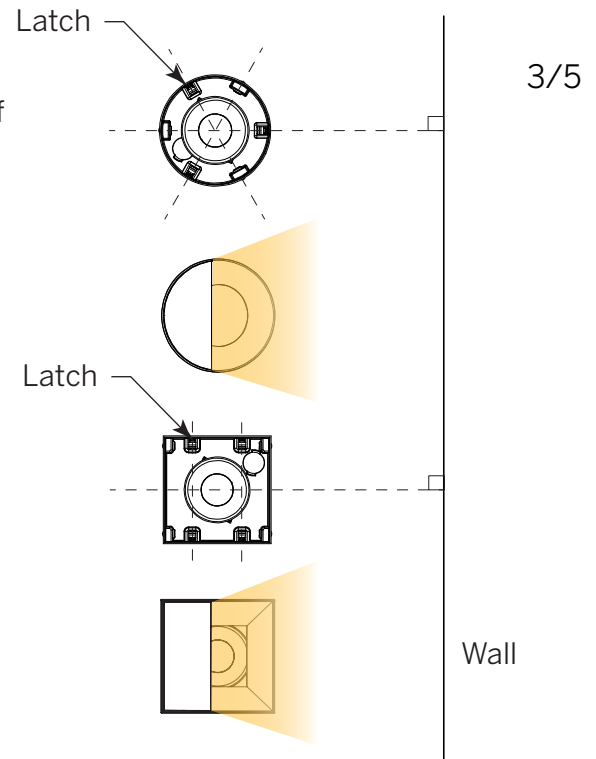


Step 5 - *Mounting Fixture*


- a** Ensure that Wings are close to body
- b** Push Fixture Insert into hole.

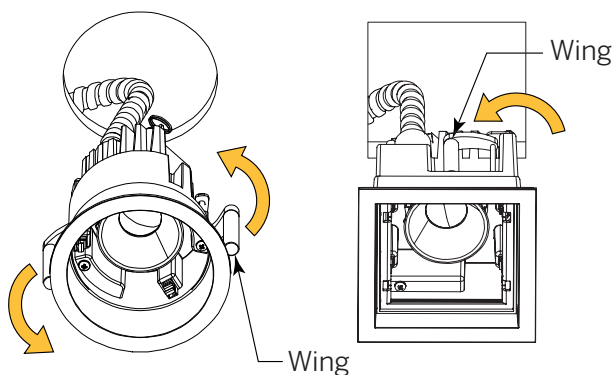

Ensure Wings are pressed close to fixture body as it passes through hole

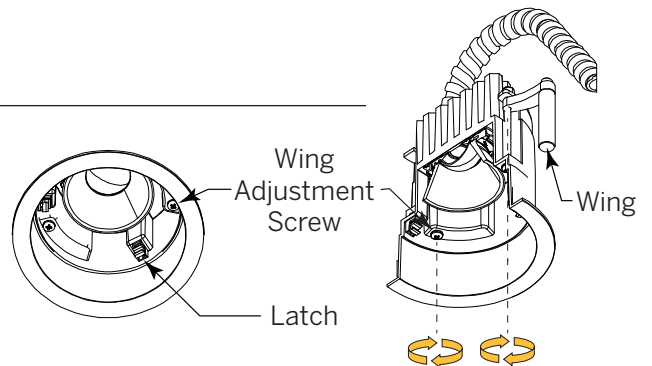

Fully inserted into ceiling

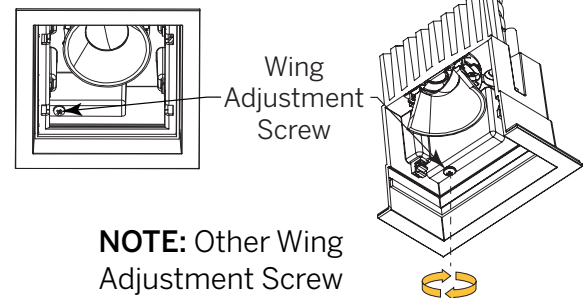

NOTE: Other Wing Adjustment Screw not visible in these views

Need Help?

3" ProTools


WG-75RPTWW-RBT
WG-75SPTWW-RBT

Wall Wash

Round and Square
Recessed Bezel Trim

Step 5 - **Mounting Fixture** (continued)

4/5


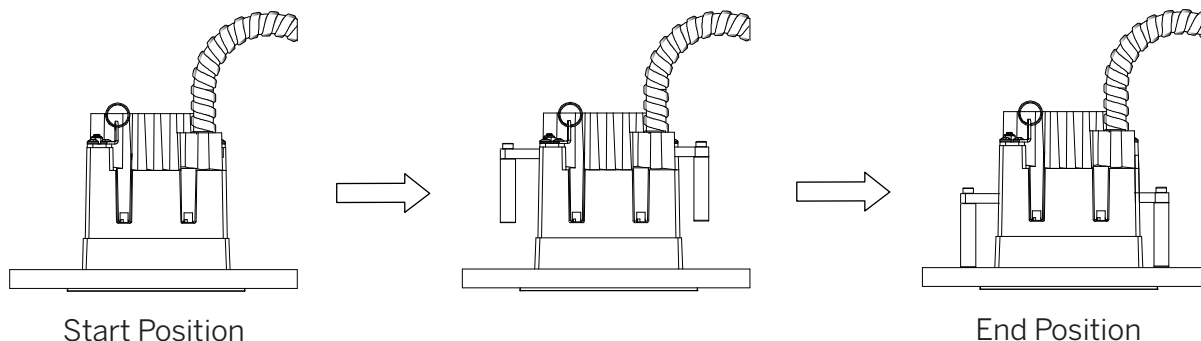


Turn Wing Adjustment Screws **clockwise** from below. Initial position shown at left. Wings are close to fixture body and raised to full height. As screws are turned, Wings swing out, lower, and clamp Fixture Insert to inside of ceiling, as shown at right.



IMPORTANT: Be careful not to damage LED or Optic during installation process.

Step 6 - **Latch Cover/Lens into Fixture Insert**

- a** Check to ensure **all** push latches are **OPEN** before inserting
- b** Orient slots in Cover/Lens with latch locations, Push up into Fixture Insert until a click is heard. Release, and Cover/Lens will be locked in place.

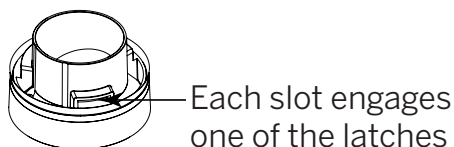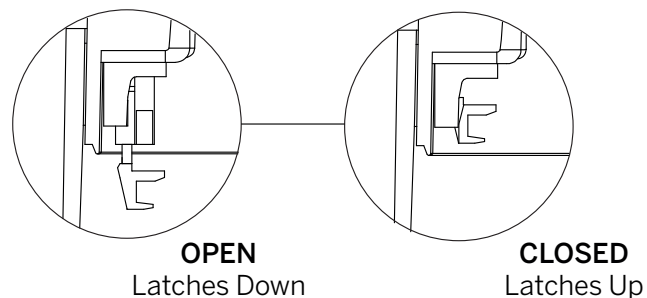

Round Wall Wash
(RWW)

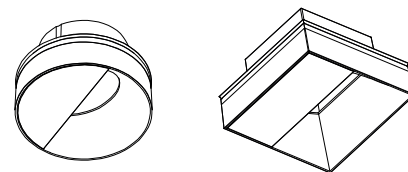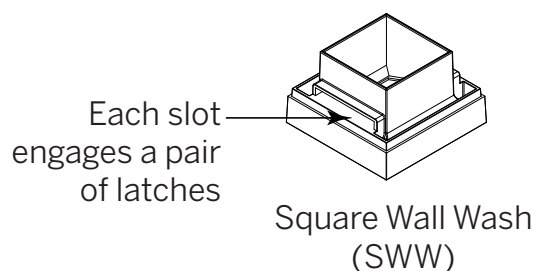

Bottom Views

Need
Help?

3" ProTools


WG-75RPTWW-RBT
WG-75SPTWW-RBT

Wall Wash


Round and Square
Recessed Bezel Trim

5/5

Correct Seating for Round and Square Wall Wash Cover/Lenses

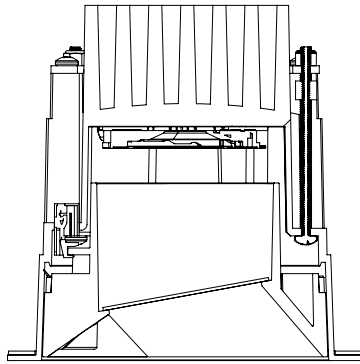

Round Wall Wash
(RWW)

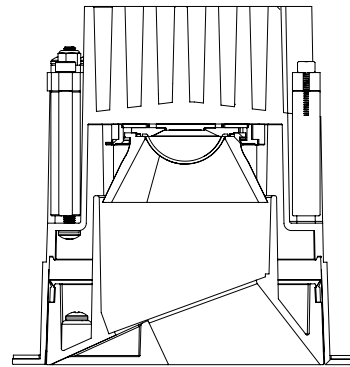

Square Wall Wash
(SWW)

Need
Help?