

Installation Instructions

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.




To prevent electrical shock disconnect electrical supply before installation or servicing.
Never connect a Fixture to a Live Driver!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - Open the Box

Unpack luminaire unit(s). The Flex family of luminaires require special handling. They are supplied in lengths specified at the time of order, and are delivered on a reel enclosed in a large anti-static bag. Remote Drivers and Boxes may be ordered from Inter-lux separately.

24VDC Constant Voltage

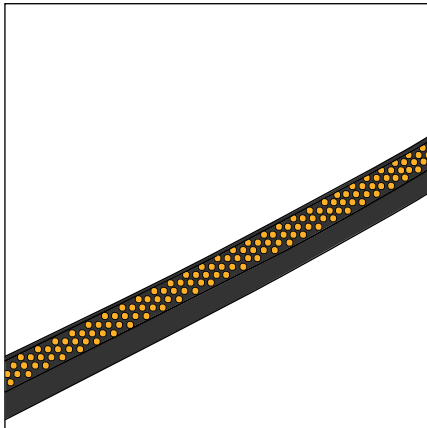

10 x 10 Vertical Honeycomb

Static White
Static White High Output
Static White Free Cut
Tunable White
Warm Dim

Minimum Vertical Bend


$\varnothing \geq 3.9" / 100\text{mm}$

Working Temperature Range

-40° to 130°




Do not attempt to bend this Luminaire in the horizontal plane!

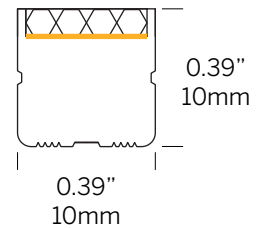

NOTE: Yellow (or light gray in B/W) indicates a lit surface.

Step 2 - Handling the Luminaire

- a** The delicate nature of the Flex Vertical Honeycomb Luminaire necessitates that unpacking, handling, and installing this fixture be done by **at least** two people.

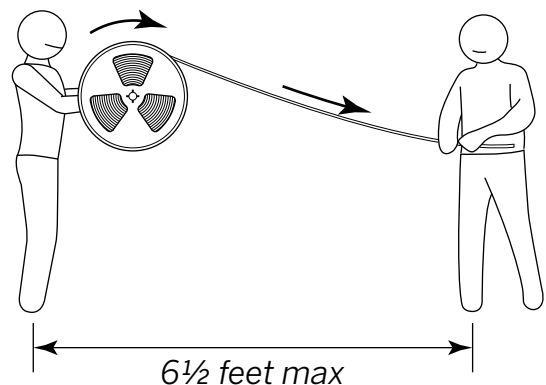

Need Help?

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 10.2026

Step 2 - *Handling the Luminaire* (continued)

- b** The Flex 10 x 10 Vertical Honeycomb Luminaire may be represented by the illustration at right. All Vertical luminaires bend in the **vertical plane only** - Up or Down.

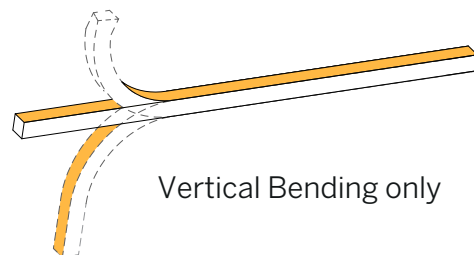


- c** Observe the following cautions during installation:

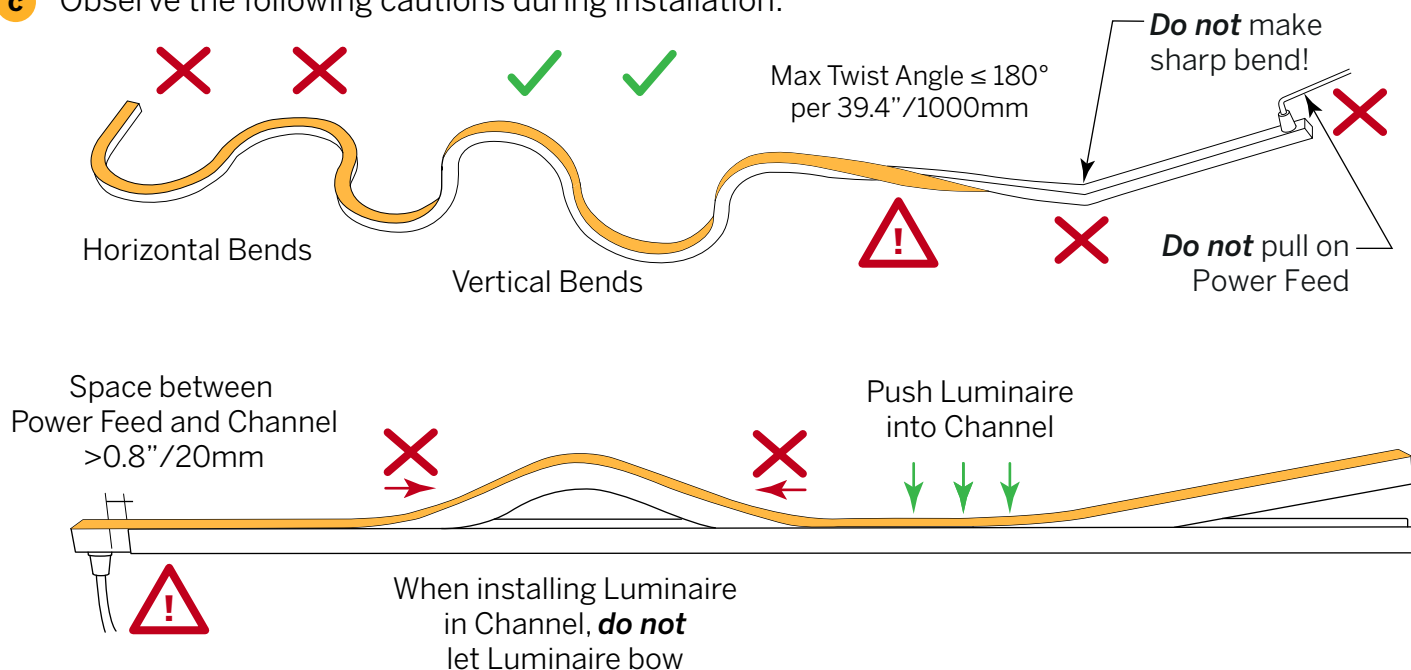

Step 3 - *Accessories*


Aluminum Clip/Profile

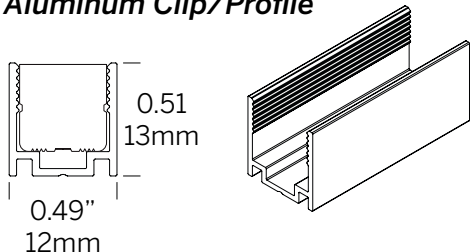

Available in:

1.18"/30mm Silver^{1,2}
1.18"/30mm Black^{1,2}
39.37"/1000mm Silver^{1,3}
39.37"/1000mm Black^{1,3}
78.74"/2000mm Silver^{1,3}

Stainless Mounting Clip

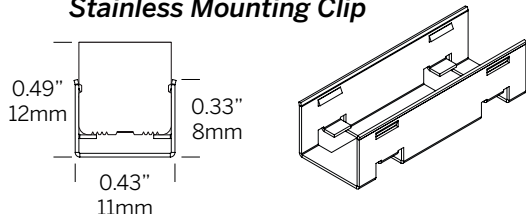

Available in:

1.18"/30mm Silver^{1,2}
1.18"/30mm Black^{1,2}

Need
Help?

Powered by

I B L



410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026

Step 3 - **Accessories** (continued)

Stainless Bendable Profile

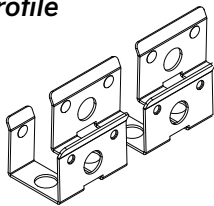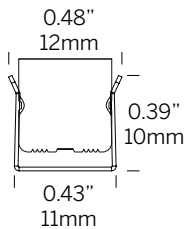

Available in:
39.37"/1000mm Silver^{1,4}
39.37"/1000mm Black^{1,4}

NOTES:

- 1 Mounting screws and anchors supplied by others.
- 2 All clip-length profiles are pre-drilled for mounting.
- 3 Full-length profiles are pre-drilled with (3) holes per 39.37"/1000mm. Additional holes may be drilled, as needed.
- 4 Flexible Profiles have pre-drilled holes in each segment for easy positioning.


Step 4 - **How to Field Cut the Flex Luminaire**

(Skip to **Step 5** if not applicable)

All versions of the Flex 10 x 10 Vertical Honeycomb Luminaire (except the *Free Cut*) have a narrow transparent window on the bottom or side with Cut Lines that look like one of those shown at right.

The ovals represent copper pads. It is imperative to cut on these lines to maintain a fully lit luminaire. If Flex is not cut on these lines, there is a risk that a portion of the luminaire near the cut will not power on.

The *Free Cut* version may be cut anywhere without concern that some LED's will go dark.

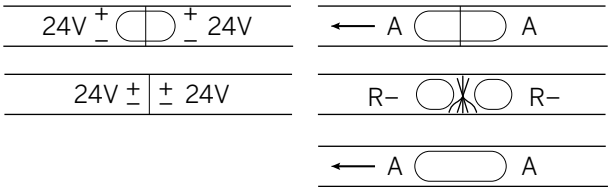

Cut Intervals

Static White

- LED Type S05 - 2"/50mm
- LED Type S10 - 2"/50mm
- LED Type L05 - 2"/50mm
- LED Type L10 - 2"/50mm

Static White High Output

- LED Type S10 - 2.5"/63mm

Static White Free Cut

- LED Type SF05 - n/a
- LED Type SF10 - n/a

Tunable White

- LED Type CT08 - 2.5"/63mm

Warm Dim

- LED Type 10R - 3.3"/83mm

IMPORTANT! All cuts are to be taken from the non-powered end!




Powered by



Step 4 - **How to Field Cut the Flex Luminaire** (continued)


- a** When cutting the Luminaire in the field, it is important to cut as perpendicular as possible. One way to do this is to use a pair of Miter Shears that has a fence 90° to the cut.

Generic Luminaire Shown

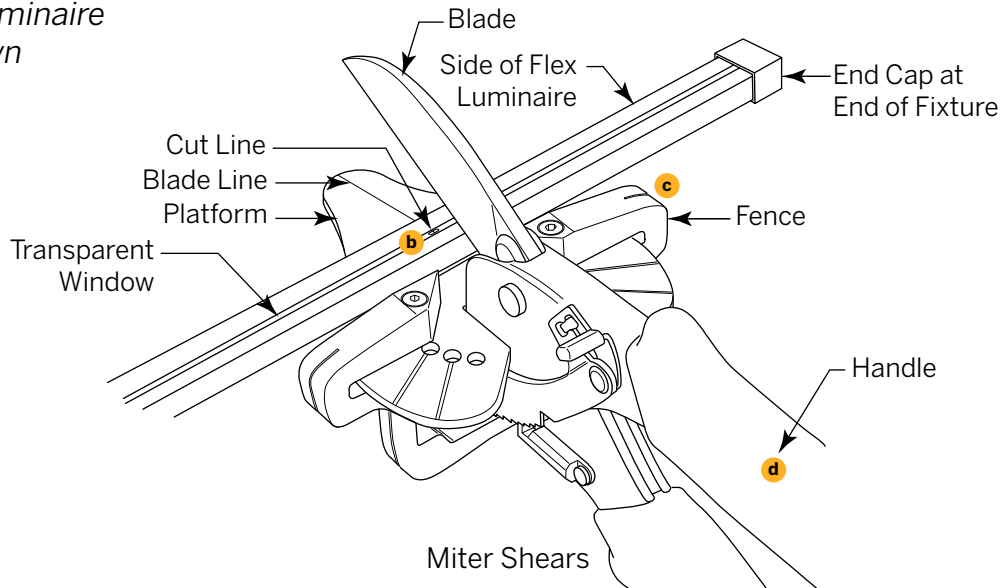

- b** Place Luminaire on Tool Platform with Transparent Window facing up as shown above. Line up Cut Line with Blade Line.
- c** Make sure Fence is at 0°, perpendicular to Blade.
- d** Squeeze Handles firmly to cut.

Whether one uses Miter Shears or not, it is important that Flex be cut at 90° across the fixture and not at an angle.

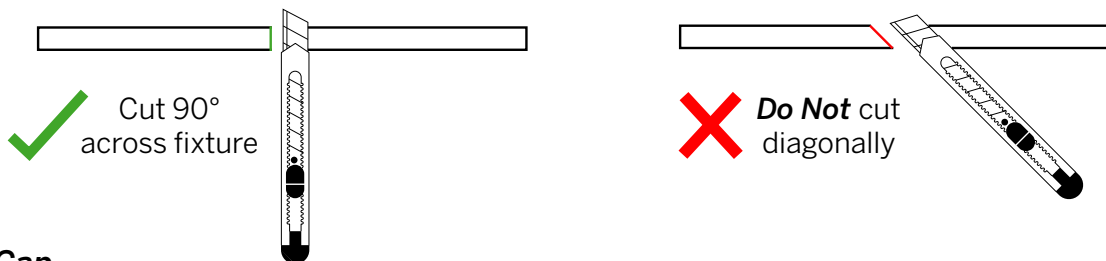

Apply End Cap

With this new cut, an End Cap needs to be applied. (1) End Cap is supplied with each length of Flex. For example, if 300 feet was purchased in a single length, one End Cap is supplied. But if three 100 foot lengths were purchased, three End Caps would be supplied. Additional End Caps are available, if needed.

Need Help?

Powered by


I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 10.2026


Step 4 - *How to Field Cut the Flex Luminaire* (continued)

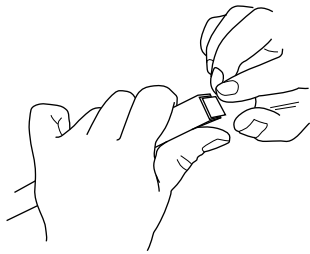


- a** Place Silicone Square at freshly cut end. Orient Square such that it lays entirely within confines of end shape.

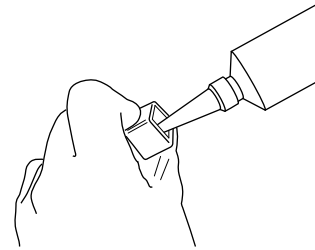


- b** Fill interior bottom and sides of End Cap with supplied silicone* sealant. Set aside.

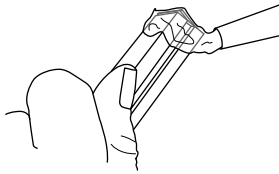

- c** Squeeze silicone sealant all around the last 1/2" of the newly cut end.

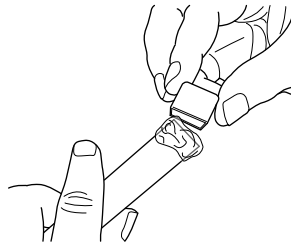

- d** Mount End Cap.

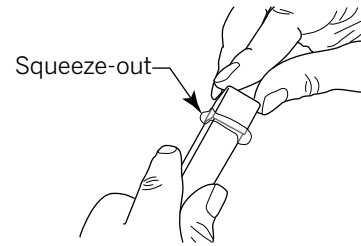

- e** Push End Cap onto Luminaire End. Wipe squeeze-out off and set aside to dry for 30-60 minutes.


**Supplied silicone sealant is proprietary and specially formulated.*

Step 5 - *Install Luminaire*

The Flex 10 x 10 Vertical Honeycomb sits in the Aluminum Clip or Profile via a friction fit. The Luminaire is retained in the Stainless Clip via small linear barbs that catch ribs on each side of the Luminaire. Similarly, The Luminaire is held in the Flexible Profile via small nubs that snap into grooves on each side of Fixture.

When using Profiles, the Feed Cable end must sit *outside* of Profile. The distance between the Power Feed - whether on the Side Left, Side Right, Bottom or End - and the beginning of the the Profile should be at least 0.8" (20mm). See illustrations at right and next page.

- a** Drill mounting holes in Aluminum Clip or Profile as needed, at least one every 12" on the Profile. The Stainless Mounting Clip and Flexible Profile are predrilled.

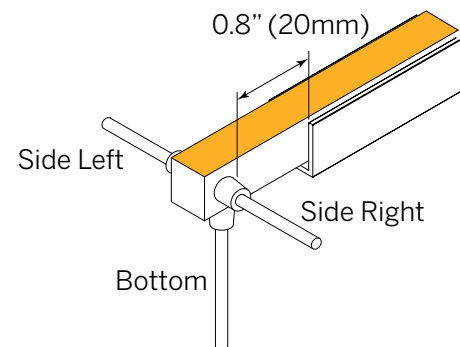

Generic Luminaire Shown

Need
Help?

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026

Step 5 - **Install Luminaire** (continued)

- b** Fasten the Aluminum Clip or Profile, or Stainless Mounting Clip or Flexible Profile to surface with appropriate screws (by others).
- c** Space Clips no more than 12 inches (300mm) apart and within 2 inches (50mm) of each bend.
- d** Press Luminaire into Clips or Profiles firmly.
- e** Wire Luminaire according to Driver specified. See Illustrations in **Step 6**, pages 6-9.
- f** Energize!

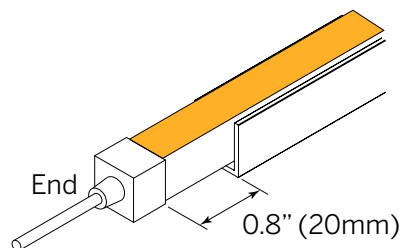


Generic Luminaire Shown

Step 6- **Wire Luminaire**

The following wiring diagrams for Constant Voltage remote drivers are included here for reference. For additional details, such as Maximum Wiring Distance, compatible dimmers, and driver box dimensions, please refer to the Driver Information Guide on our website.


D010 = eldoLED, Non-Dim or 10% 0-10V dimming (120-277V)

Non-Dimming

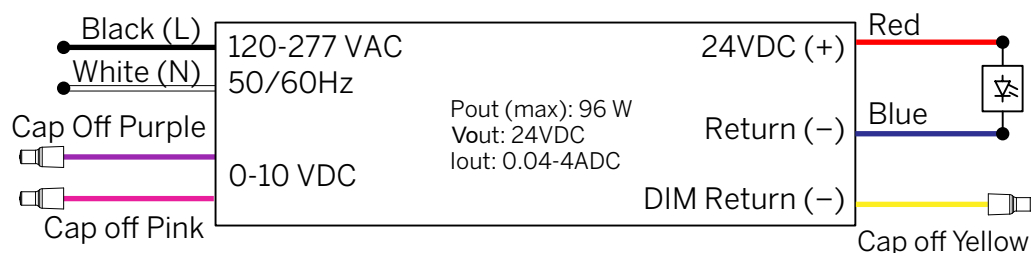

For:
Static White
Static White High Output
Static White Free Cut

Dimming

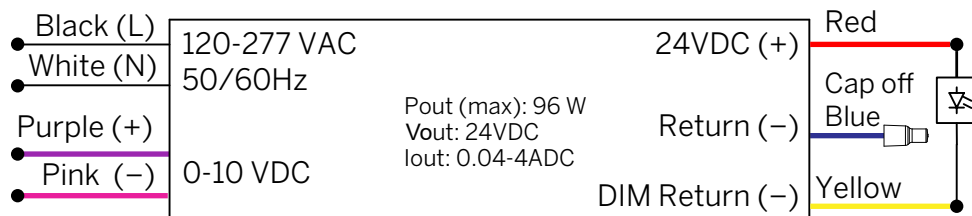

WARNING: If not connected to a 0-10V dimmer, driver MUST be wired as Non-dim. Not doing so can cause the driver and the fixtures to fail prematurely.

Need
Help?

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 10.2026

Step 6 - **Wire Luminaire** (continued)

EL96 = eldoLED 0-10V, 0.1% dimming (120-277V)

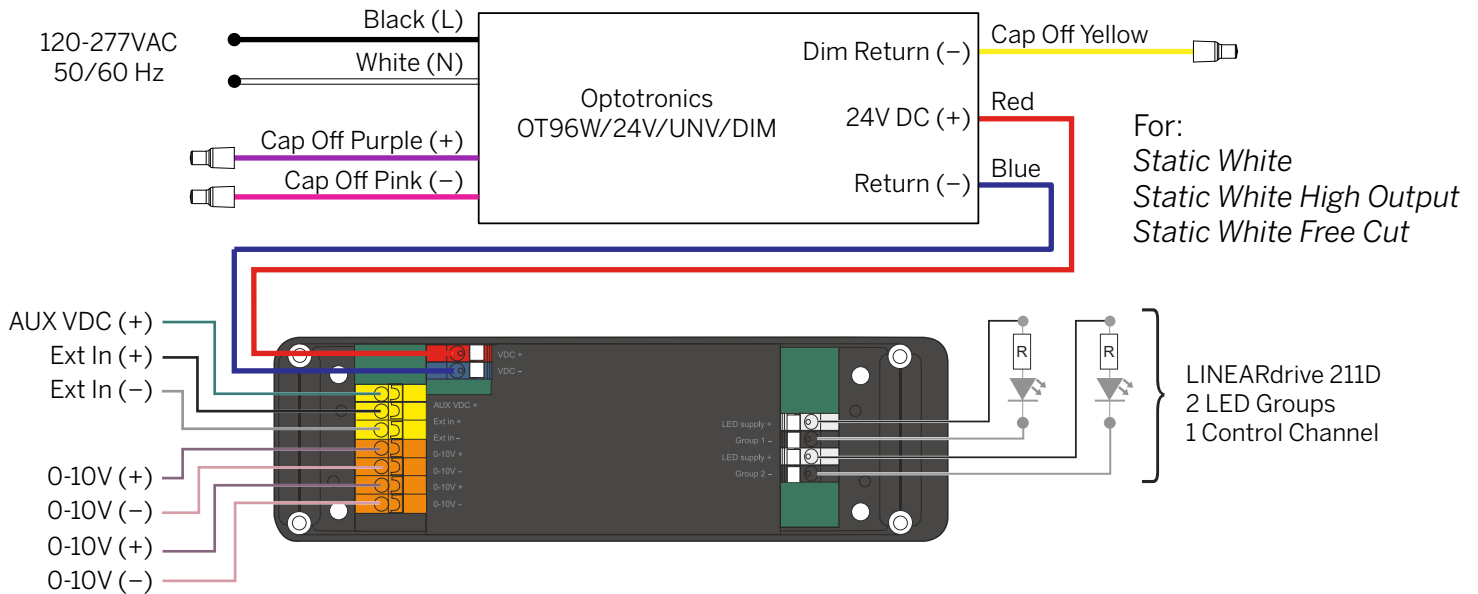


DPH = Phase Dimming, 1% dimming (120V only)

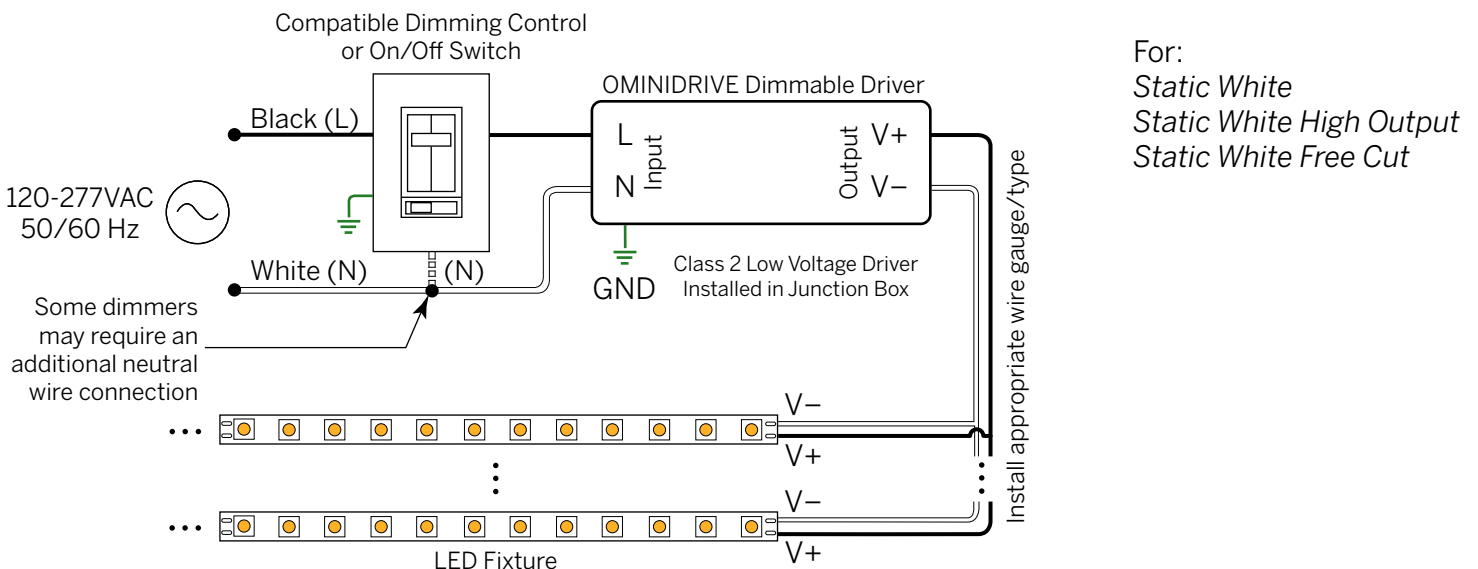

**Need
Help?**


Step 6 - **Wire Luminaire** (continued)

L3D0E = Lutron Hi-lume Premier 0.1% EcoSystem (120-277V)

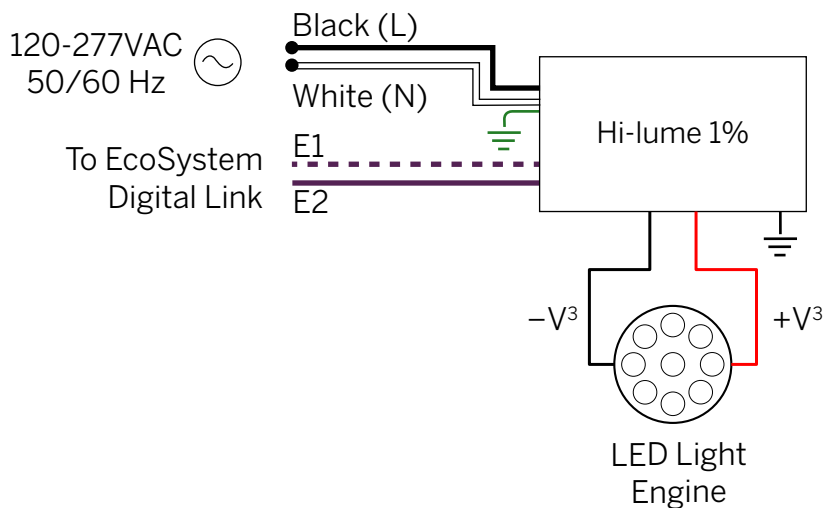

For:
Static White
Static White High Output
Static White Free Cut

UNV96-WL = 0-10V/Phase Dim 96W Wet Location, 1% dimming (120-277V)

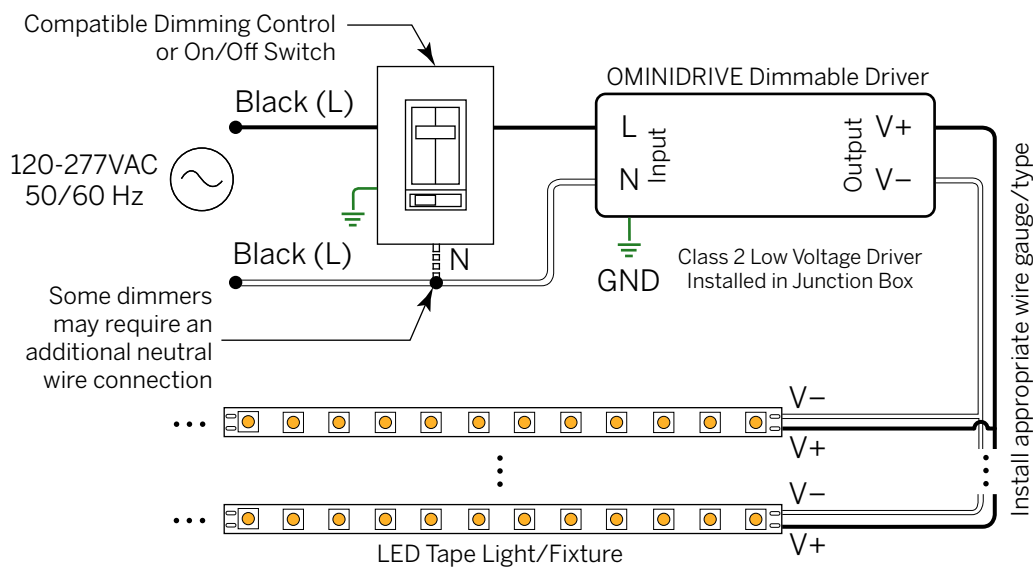

For:
Static White
Static White High Output
Static White Free Cut

**Need
Help?**

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026


Step 6 - **Wire Luminaire** (continued)

UNV384-WL = 0-10V/Phase Dim 384W Wet Location, 1% dimming (120-277V)

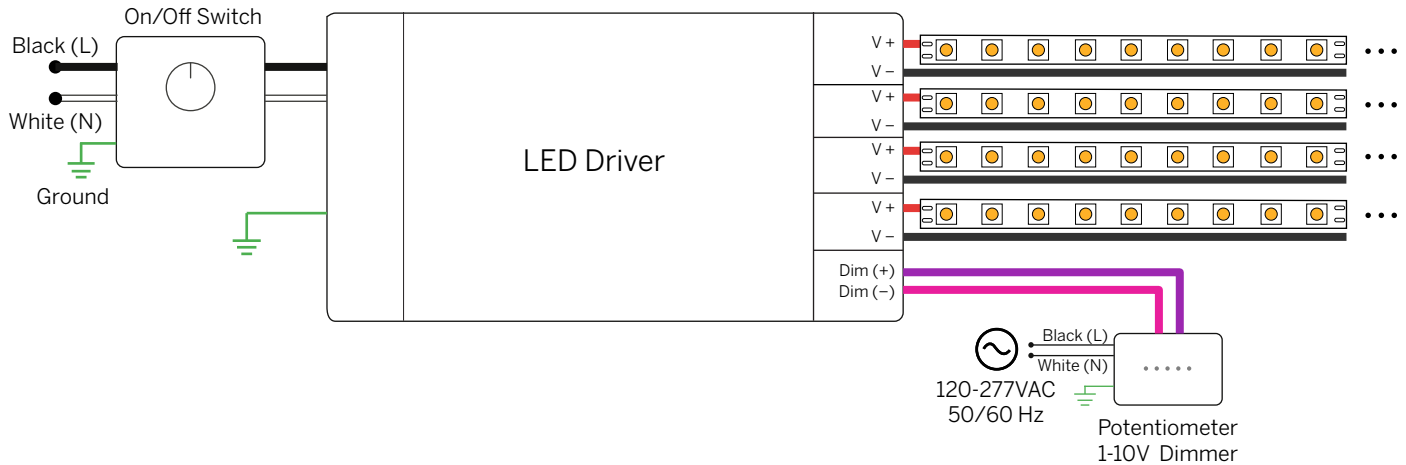

For:
Static White
Static White High Output
Static White Free Cut

DALI-DT6 = eIdoLED DALI-2 (DT6), 0.1% dimming (120-277V)

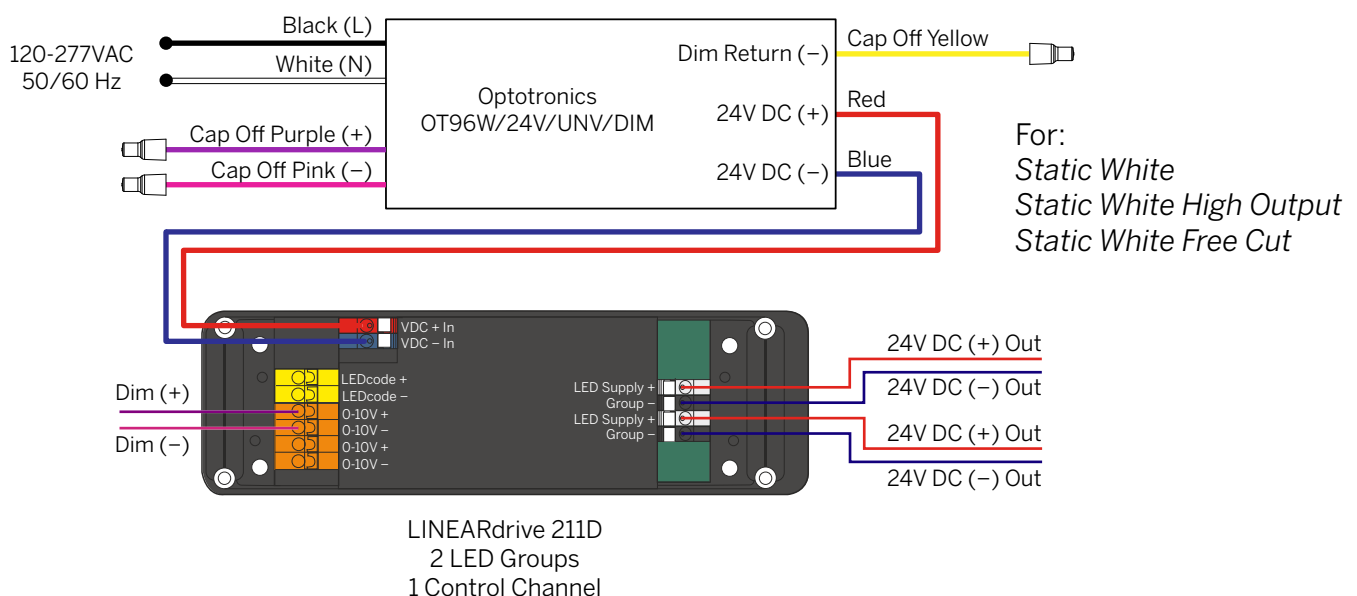

**Need
Help?**

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026