

Installation Instructions

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.
Never connect a Fixture to a Live Driver!!!


Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - Open the Box

Unpack luminaire unit(s). The Flex family of luminaires require special handling. They are supplied in lengths specified at the time of order, and are delivered on a reel enclosed in a large anti-static bag. Remote Drivers and Boxes may be ordered from Inter-lux separately.



24VDC Constant Voltage

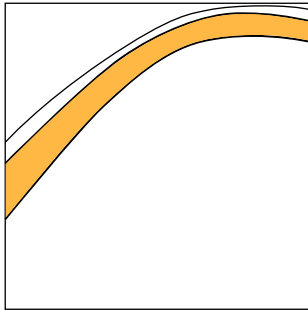


50 x 30 Multi

Static White High Output

Minimum Horizontal and Vertical Bend $\varnothing \geq 31.5''/800\text{mm}$


Working Temperature Range
-40° to 130°

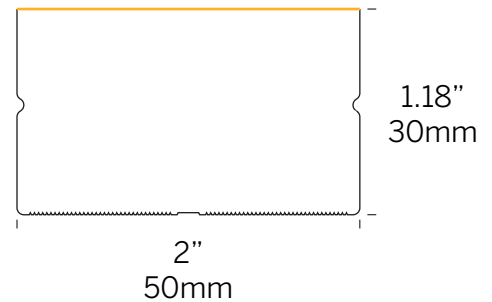

NOTE: Yellow (or light gray in B/W) indicates a lit surface.

Step 2 - Handling the Luminaire

- a** The delicate nature of the Flex Multi Luminaire necessitates that unpacking, handling, and installing this fixture be done by **at least** two people.

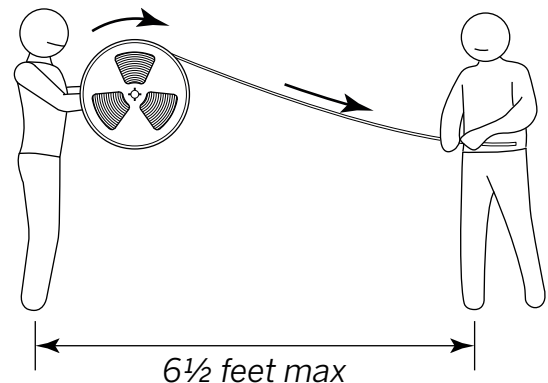

Need Help?

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 10.2026

Step 2 - *Handling the Luminaire* (continued)

- b** The Flex 50 x 30 Multi Luminaire may be represented by the illustration at right. *All* Multi Luminaires bend in both the **horizontal and vertical planes** - Up, Down, Left, and Right.


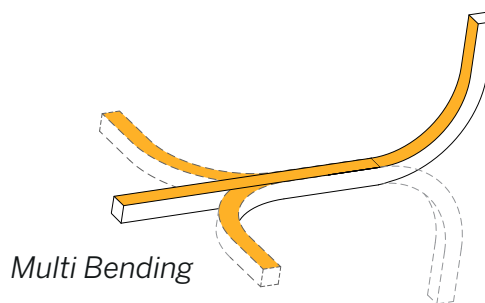


- c** Observe the following cautions during installation:

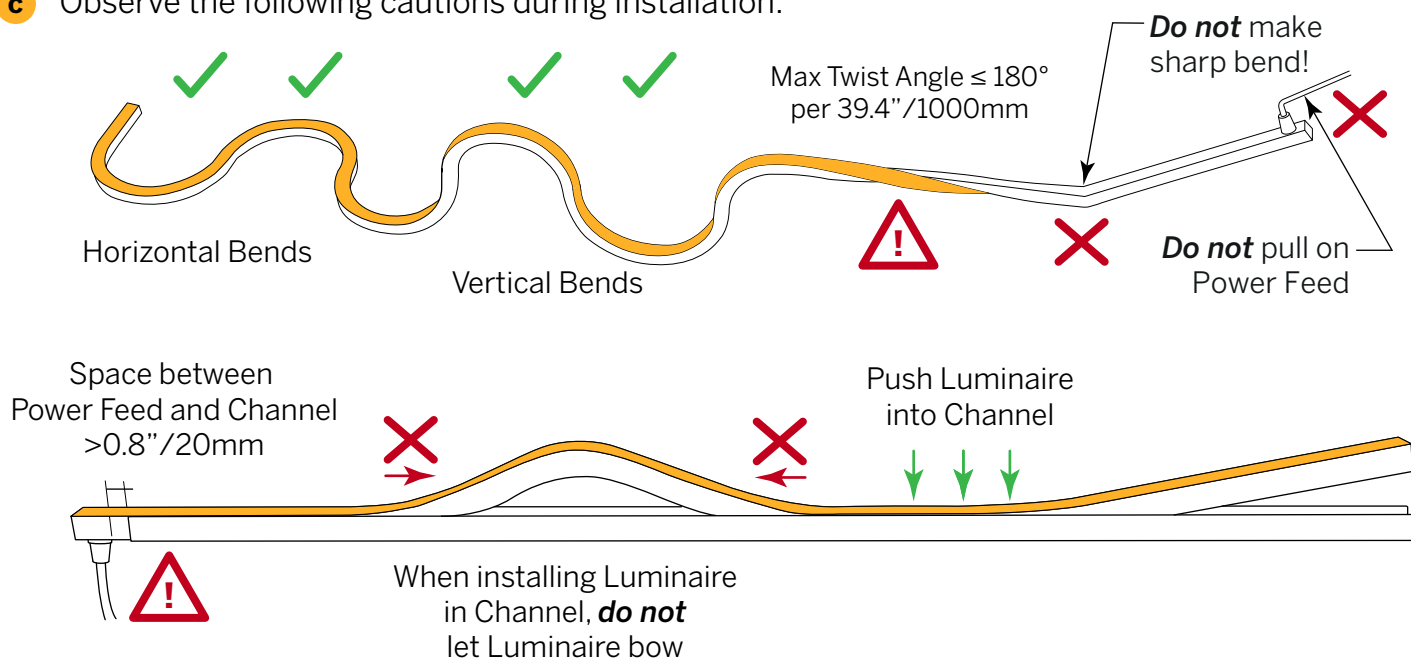



Step 3 - *Accessories*

Aluminum Clip/Profile

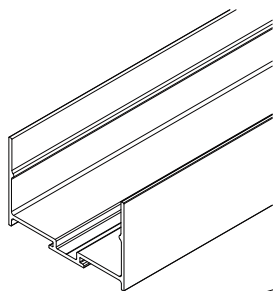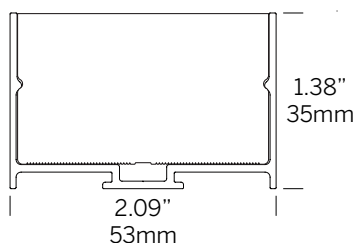

Available in:
1.18"/30mm Silver^{1,2}
39.37"/1000mm Silver^{1,3}

Aluminum Bendable Profile

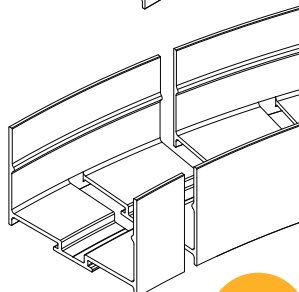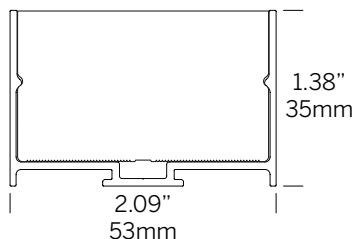

Available in:
39.37"/1000mm Silver^{1,4}

Need Help?

Powered by

I B L



410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026

Step 3 - **Accessories** (continued)

Stainless Bendable Profile

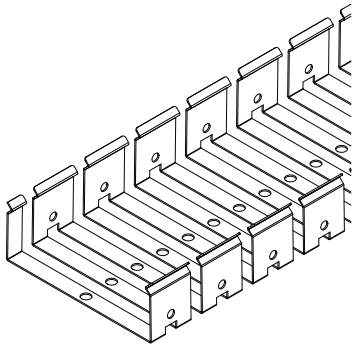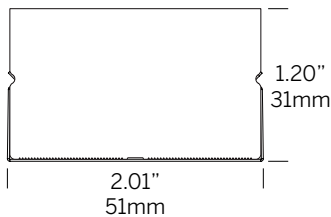

Available in:
39.37"/1000mm Silver^{1,4}

NOTES:


- 1 Mounting screws and anchors supplied by others.
- 2 All clip-length profiles are pre-drilled for mounting.
- 3 Full-length profiles are pre-drilled with (3) holes per 39.37"/1000mm. Additional holes may be drilled, as needed.
- 4 Flexible Profiles have pre-drilled holes in each segment for easy positioning.

Step 4 - **How to Field Cut the Flex Luminaire**

(Skip to **Step 5** if not applicable)

The Flex 50 x 30 Multi Luminaire has a narrow transparent window on the bottom or side with Cut Lines that look like one of those shown at right.

The ovals represent copper pads. It is imperative to cut on these lines to maintain a fully lit luminaire. If Flex is not cut on these lines, there is a risk that a portion of the luminaire near the cut will not power on.

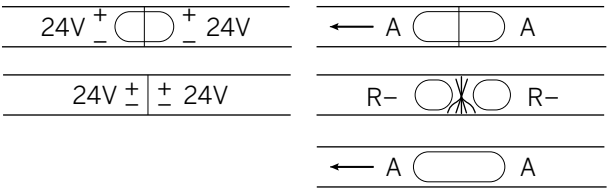

Cut Interval

Static White High Output
LED Type S15 - 2.8"/72mm

IMPORTANT! All cuts are to be taken from the non-powered end!



Powered by

I B L



410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026


Step 4 - **How to Field Cut the Flex Luminaire** (continued)

It is important that Flex be cut at 90° across the fixture and not at an angle.

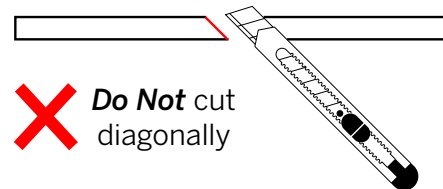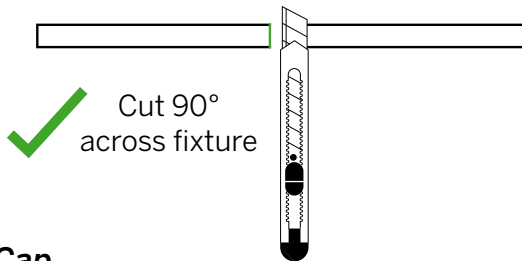


Apply End Cap


With this new cut, an End Cap needs to be applied. (1) End Cap is supplied with each length of Flex. For example, if 300 feet was purchased in a single length, one End Cap is supplied. But if three 100 foot lengths were purchased, three End Caps would be supplied. Additional End Caps are available, if needed.

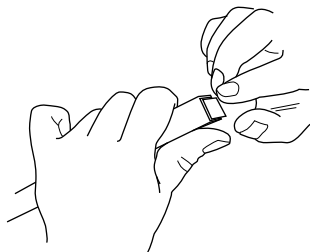


- a** Place Silicone Square at freshly cut end. Orient Square such that it lays entirely within confines of end shape.

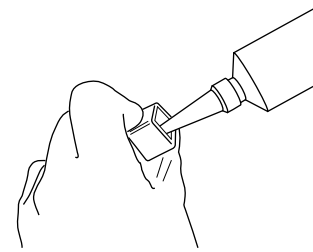


- b** Fill interior bottom and sides of End Cap with supplied silicone* sealant. Set aside.

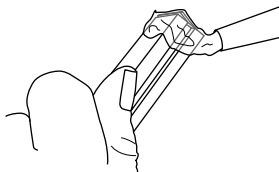

- c** Squeeze silicone sealant all around the last ½" of the newly cut end.

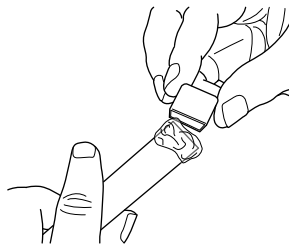

- d** Mount End Cap.

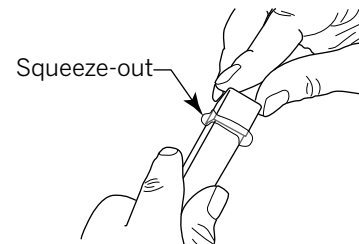

- e** Push End Cap onto Luminaire End. Wipe squeeze-out off and set aside to dry for 30-60 minutes.

**Supplied silicone sealant is proprietary and specially formulated.*

Need
Help?

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.





updated 10.2026

Step 5 - *Install Luminaire*

The Flex 50 x 30 Multi sits in the Aluminum Profile via a friction fit.

When using Profiles, the Feed Cable end must sit *outside* of Profile. The distance between the Power Feed - whether on the Side Left, Side Right, Bottom or End - and the beginning of the the Profile should be at least 0.8" (20mm). See illustrations at right.

- a** Drill mounting holes in Aluminum Profile as needed, at least one every 12". Stainless Flexible Profile is predrilled.
- b** Fasten the Aluminum Profile(s) or Stainless Mounting Clips/Profile(s) to surface with appropriate screws (by others).
- c** Space Clips no more than 12 inches (300mm) apart and within 2 inches (50mm) of each bend.
- d** Press Luminaire into Clips or Profiles firmly.
- e** Wire Luminaire according to Driver specified. See Illustrations in **Step 6**, pages 6-9.
- f** *Energize!*

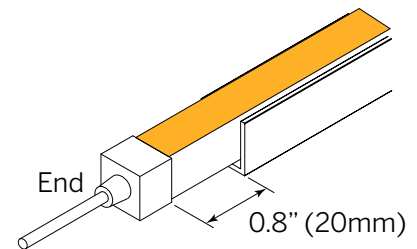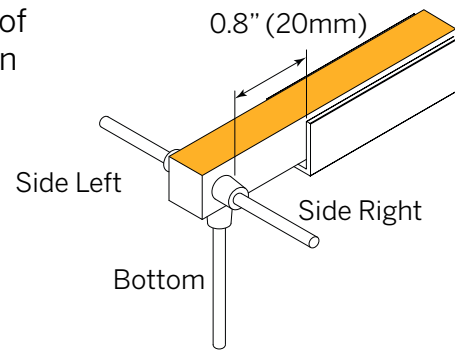

Generic Luminaires Shown

This space intentionally left blank.

Need
Help?

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026


Step 6 - *Wire Luminaire*

The following wiring diagrams for Constant Voltage remote drivers are included here for reference. For additional details, such as Maximum Wiring Distance, compatible dimmers, and driver box dimensions, please refer to the Driver Information Guide on our website.


D010 = eldoLED, Non-Dim or 10% 0-10V dimming (120-277V)

For:
Static White High Output

Non-Dimming

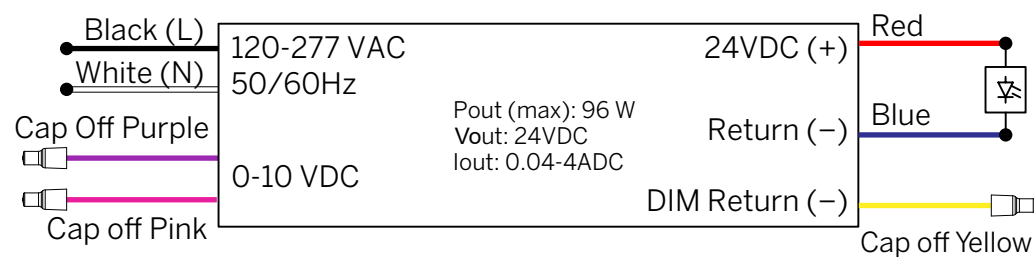

Dimming

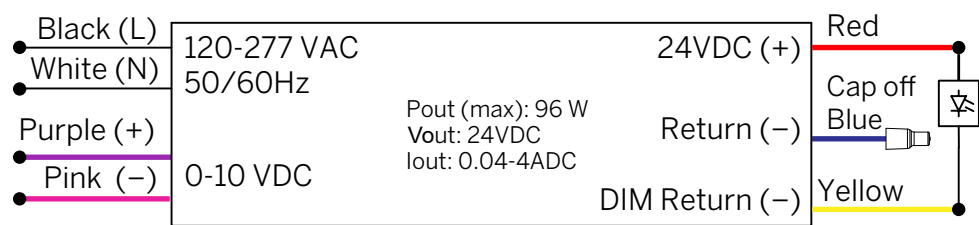


WARNING: If not connected to a 0-10V dimmer, driver **MUST** be wired as Non-dim. Not doing so can cause the driver and the fixtures to fail prematurely.

This space intentionally left blank.




Step 6 - *Wire Luminaire* (continued)

EL96 = eldoLED 0-10V, 0.1% dimming (120-277V)

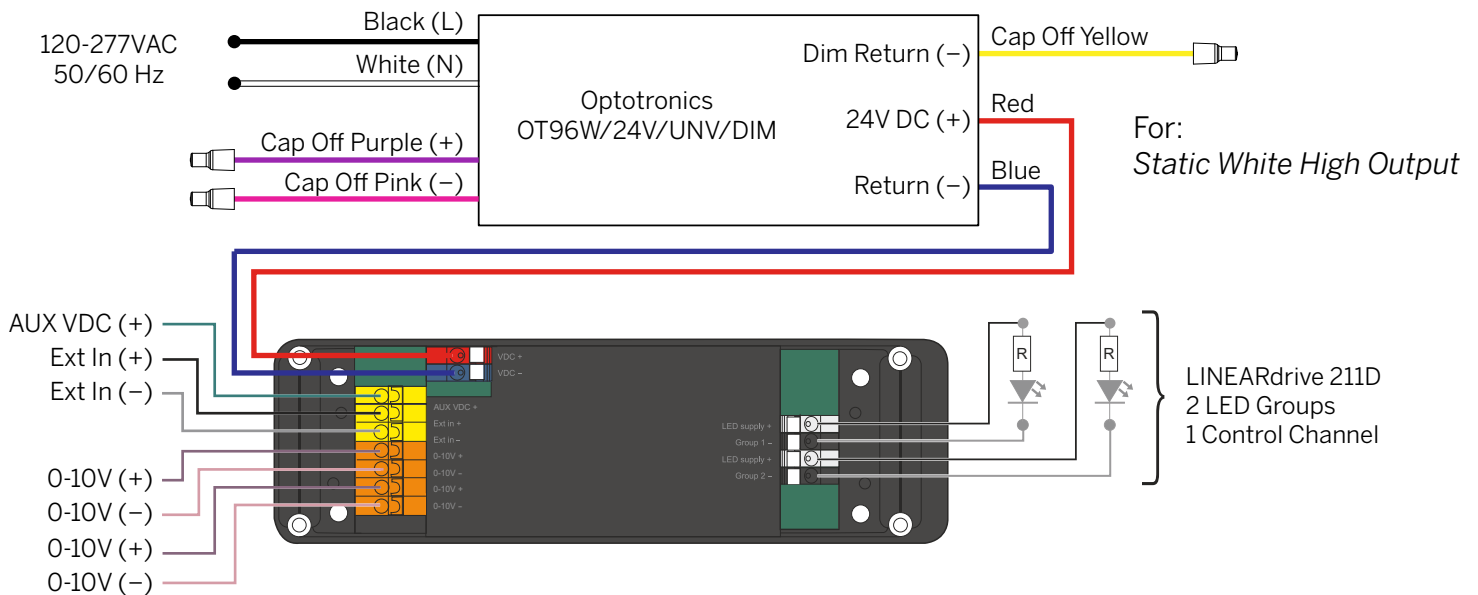

DPH = Phase Dimming, 1% dimming (120V only)

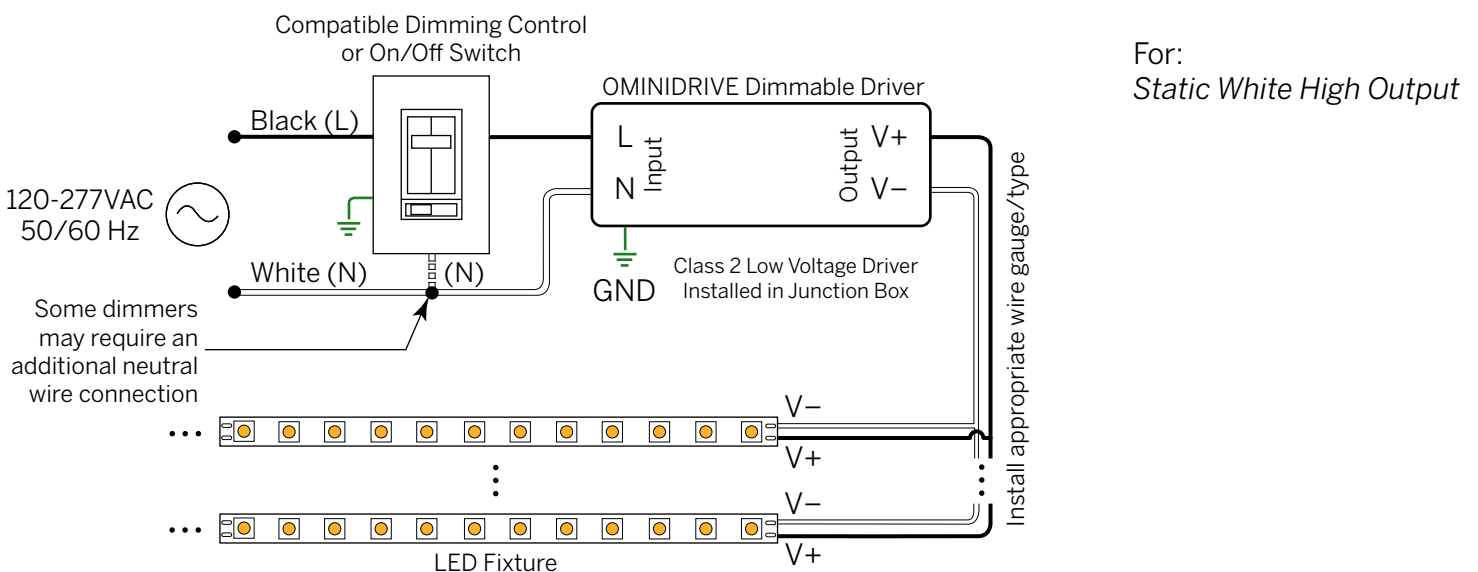

Need
Help?

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026


Step 6 - **Wire Luminaire** (continued)

L3D0E = Lutron Hi-lume Premier 0.1% EcoSystem (120-277V)

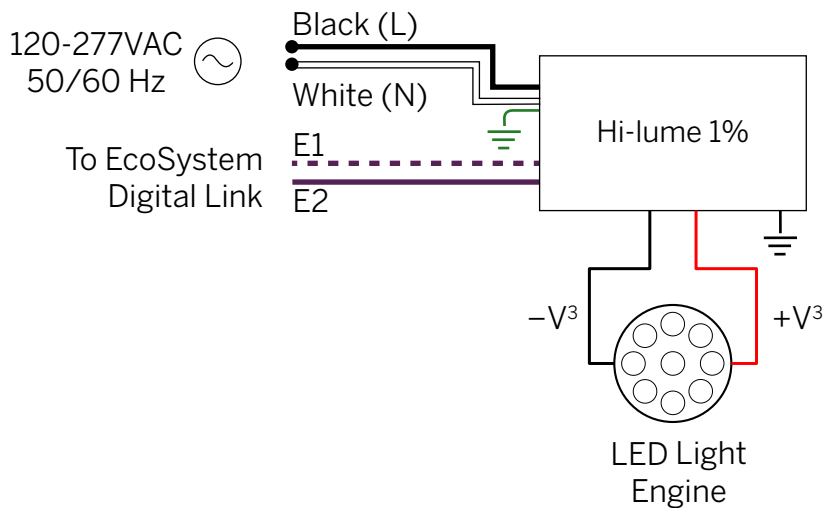

For:
Static White High Output

UNV96-WL = 0-10V/Phase Dim 96W Wet Location, 1% dimming (120-277V)

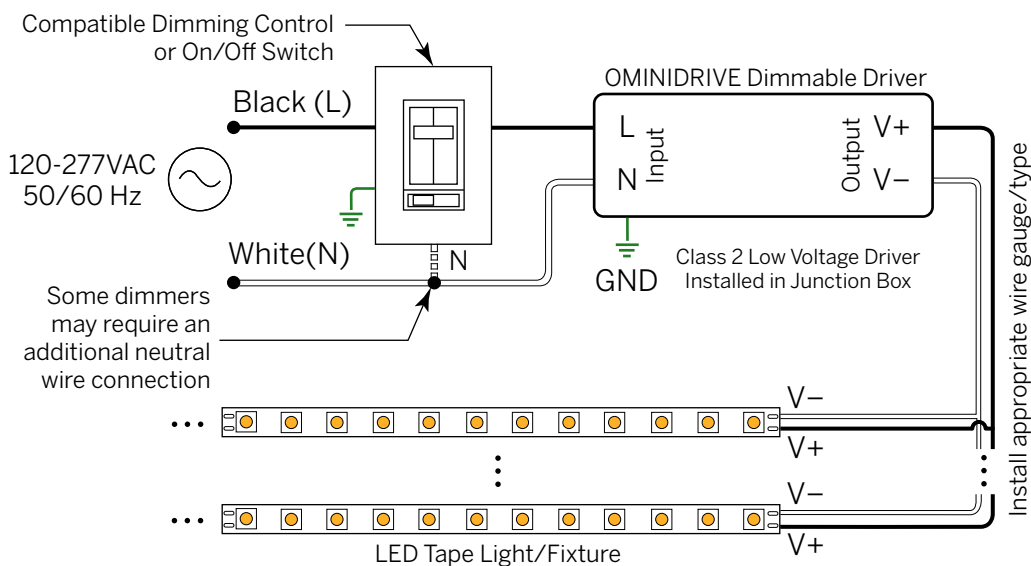

For:
Static White High Output

Need
Help?


Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026

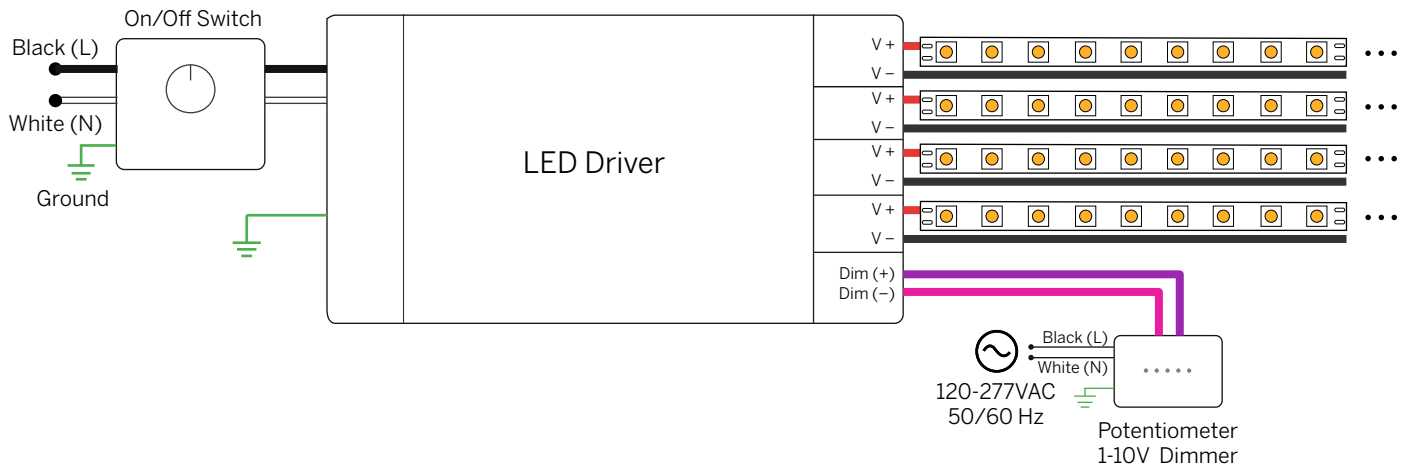Step 6 - **Wire Luminaire** (continued)**UNV384-WL = 0-10V/Phase Dim 384W Wet Location, 1% dimming (120-277V)**

For:
Static White High Output

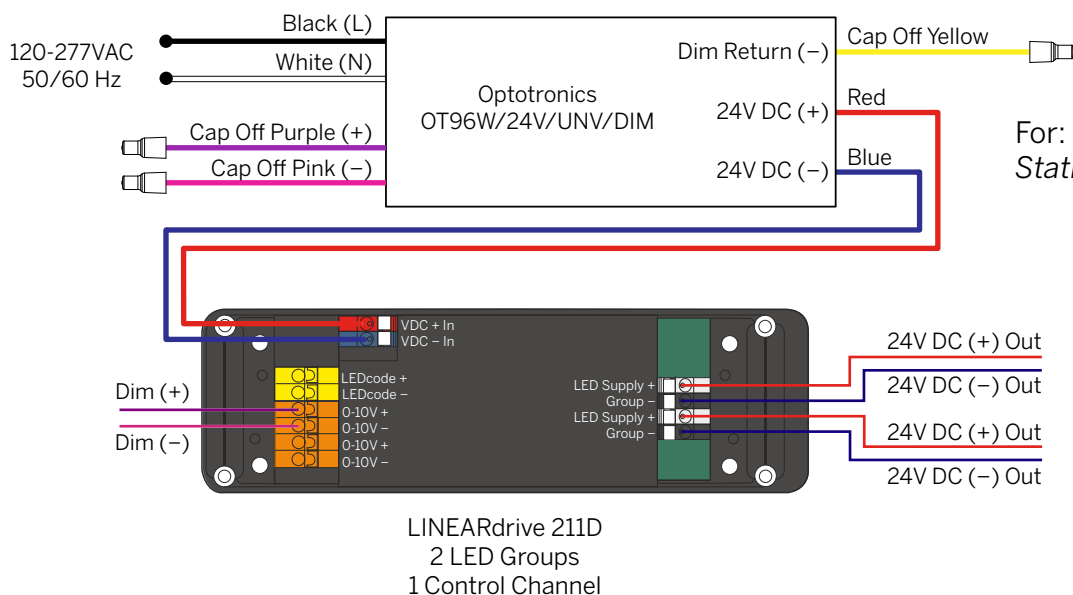DALI-DT6 = eldoLED DALI-2 (DT6), 0.1% dimming (120-277V)

For:
Static White High Output

Need
Help?

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026