

Whitegoods Bezel 100 Surface Ceiling/Floor Wash

INSTALLATION INSTRUCTIONS

PART. NO. WG-100SCFW-RBT



INSTALL PRODUCT IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES; BY A QUALIFIED ELECTRICIAN.



FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS MAY RESULT IN DEATH OR SERIOUS INJURY.

WARNING:

READ ALL SAFETY INSTRUCTIONS

INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE

CAUTION:


THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT

CAUTION:


INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.

TRIMETRIC VIEW


PACKAGE INCLUDES:

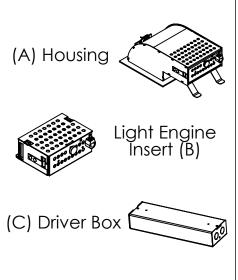


ITEMS NEEDED (SUPPLIED BY OTHERS):

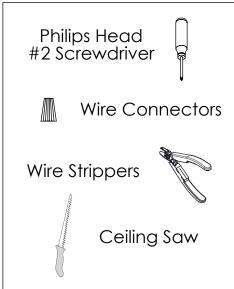


MOUNTING DIMENSIONS

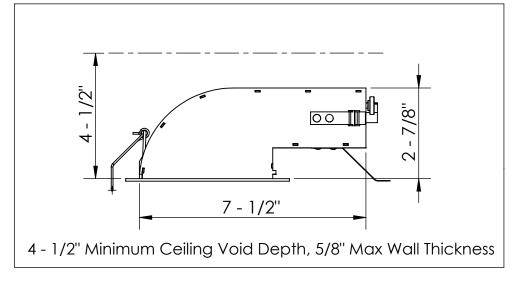

SURFACE CEILING WASH

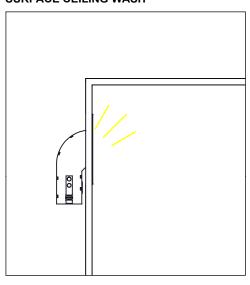


SURFACE FLOOR WASH

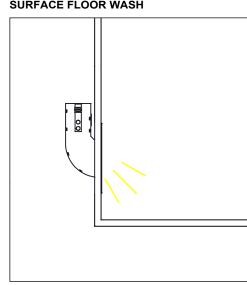


TURN OFF MAIN POWER BEFORE PROCEEDING!

Step 1: Cut Hole in the Wall and ensure minimum void depth is available for installation (5/8" Maximum Wall Thickness). Then install Remote Drivers (C). If Drivers are mounted above ceiling, clear insulation at least 3" around each side of the Drivers.

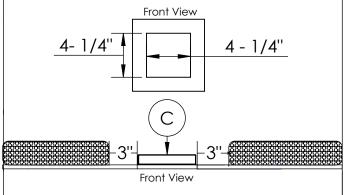


MOUNTING INSTALLATION STEPS


Step 2: Make connections between AC Power/Dimming and Remote Driver (C) in adherence with Local and National Electric Codes.

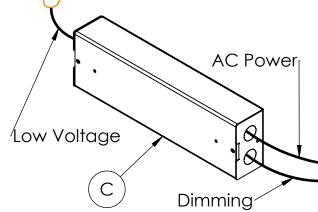


Step 3: Pull Low Voltage leads down and through wall opening. Make the connection between the Driver (C) and the AC/Dimming leads.

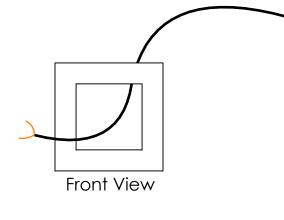


Step 4: Pull Low Voltage leads through Housing (A) and install Housing (A) into wall. Ensure spring clips are engaged.

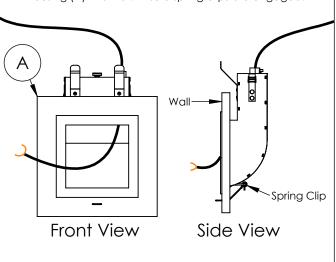

Step 5: Connect the Light Engine Insert (B) to the Low Voltage wires. Then insert Light Engine (B) into Housing (A) as shown below. Ensure that it clicks into place and that sn

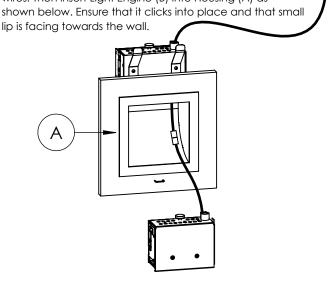

Step 6: Power product and test for proper operation.

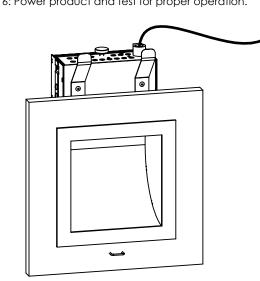

Phone: (410)381-1497

Web: www.inter-lux.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Inter-lux IS PROHIBITED.

Wiring Instructions

PART. NO. WG-100SCFW-RBT



INSTALL PRODUCT IN ACCORDANCE VITH LOCAL AND NATIONAL ELECTRICAL CODES; BY A QUALIFIED ELECTRICIAN.




FAILURE TO COMPLY WITH THE INSTALLATION INSTRUCTIONS MAY RESULT IN DEATH OR SERIOUS INJURY.

READ ALL SAFETY INSTRUCTIONS INCLUDED WITH LUMINAIRE BEFORE INSTALLING LUMINAIRE


THIS IS AN ELECTRONIC DEVICE. CARE MUST BE TAKEN DURING STORAGE AND HANDLING. STORE IN A CLEAN, COOL AND DRY LOCATION. ELECTROSTATIC DISCHARGE (ESD) CAN HARM THIS PRODUCT. AVOID STATIC DISCHARGE WHILE HANDLING THIS PRODUCT

INTER-LUX IS NOT RESPONSIBLE FOR THE STRUCTURAL INTEGRITY OF THE BUILDING TO SUPPORT THE LUMINAIRE. ADDITIONAL BACKING MAY BE REQUIRED.

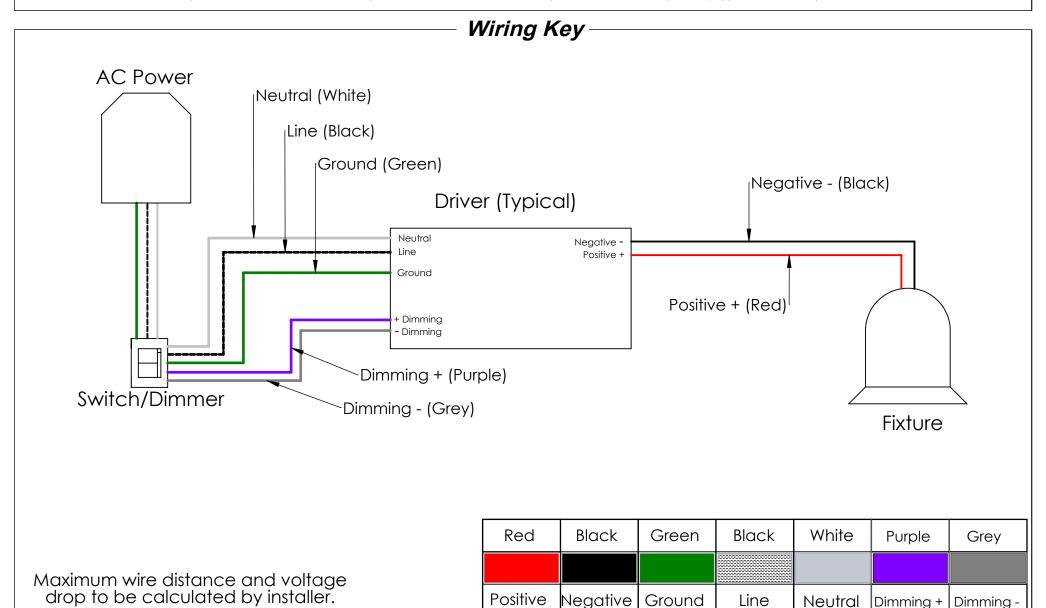

Driver Wiring Diagrams


Standard Non-Dimming SPH (Standard phase dimming wired for forward phase)

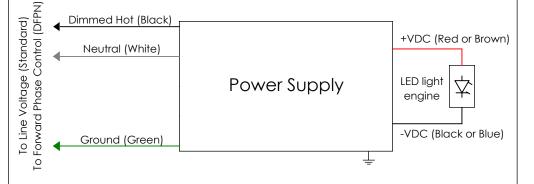

DFPN (Lutron forward phase dimming) SPH (Standard phase dimming wired for reverse phase)



PEQ1 1%/PEQ0 0.1% Dimming

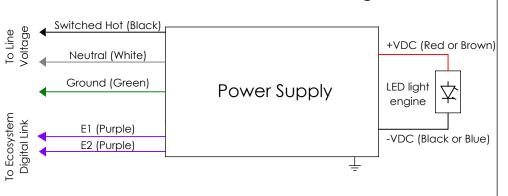

0-10V Dimming



ALL SHOWN DRIVERS ARE INTER-LUX PROVIDED. FOR NON INTER-LUX PROVIDED DRIVERS PLEASE REFER TO DRIVER MANUFACTURER. THE USE OF NON INTER-LUX PROVIDED DRIVERS VOIDS PRODUCT WARRANTY.

PROPRIETARY AND CONFIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Phone: (410)381-1497 Web: www.inter-lux.com Page 2 of 2