

Installation Instructions

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



Never connect a Fixture to a Live Driver!!!


To prevent electrical shock disconnect electrical supply before installation or servicing.

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - Open the Box

Unpack luminaire unit(s). The Flex family of luminaires require special handling. They are supplied in lengths specified at the time of order, and are delivered on a reel enclosed in a large anti-static bag. Remote Drivers and Boxes may be ordered from Inter-lux separately.

24VDC Constant Voltage

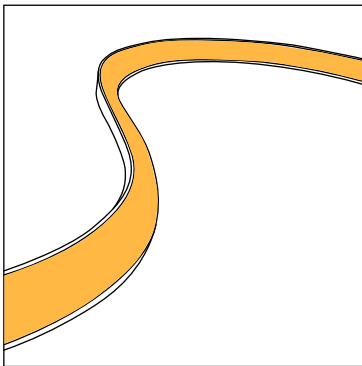

Flex 16 Cove

Static White
Static White High Output
Static White Free Cut
Tunable White
Tunable White High Output
Warm Dim

Minimum Horizontal or Vertical Bending
 $\varnothing \geq 9.8" / 250\text{mm}$


RGB
RGBW
Pixel Static White
Pixel Tunable White
Pixel RGB
Pixel RGBW

Minimum Horizontal or Vertical Bending
 $\varnothing \geq 11.8" / 300\text{mm}$



IMPORTANT!

The Flex 16 Cove can bend Horizontally **or** Vertically, but not at the same time.

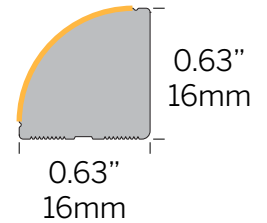


NOTE: Yellow (or light gray in B/W) indicates a lit surface.

Working Temperature Range
-40° to 130°

Step 2 - Handling the Luminaire

- a** The delicate nature of the Flex Multi High Temp Luminaire necessitates that unpacking, handling, and installing this fixture be done by **at least** two people.

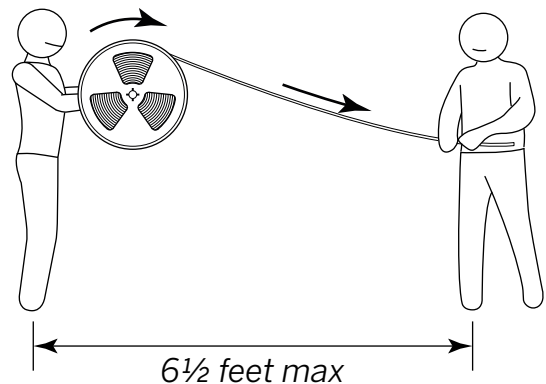

Need Help?

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 8.2026

Step 2 - *Handling the Luminaire* (continued)

- b** The Flex 16 Cove Luminaire may be represented by the illustration at right. *All* Cove Luminaires bend in the **horizontal or vertical planes** - Up, Down, Left, and Right.


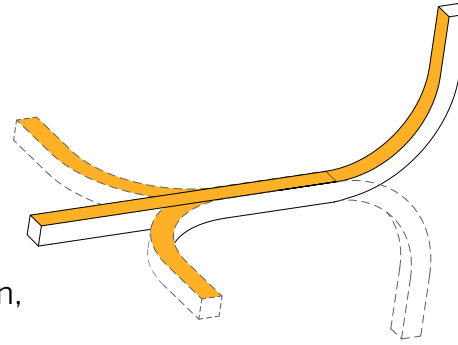


- c** Observe the following cautions during installation:

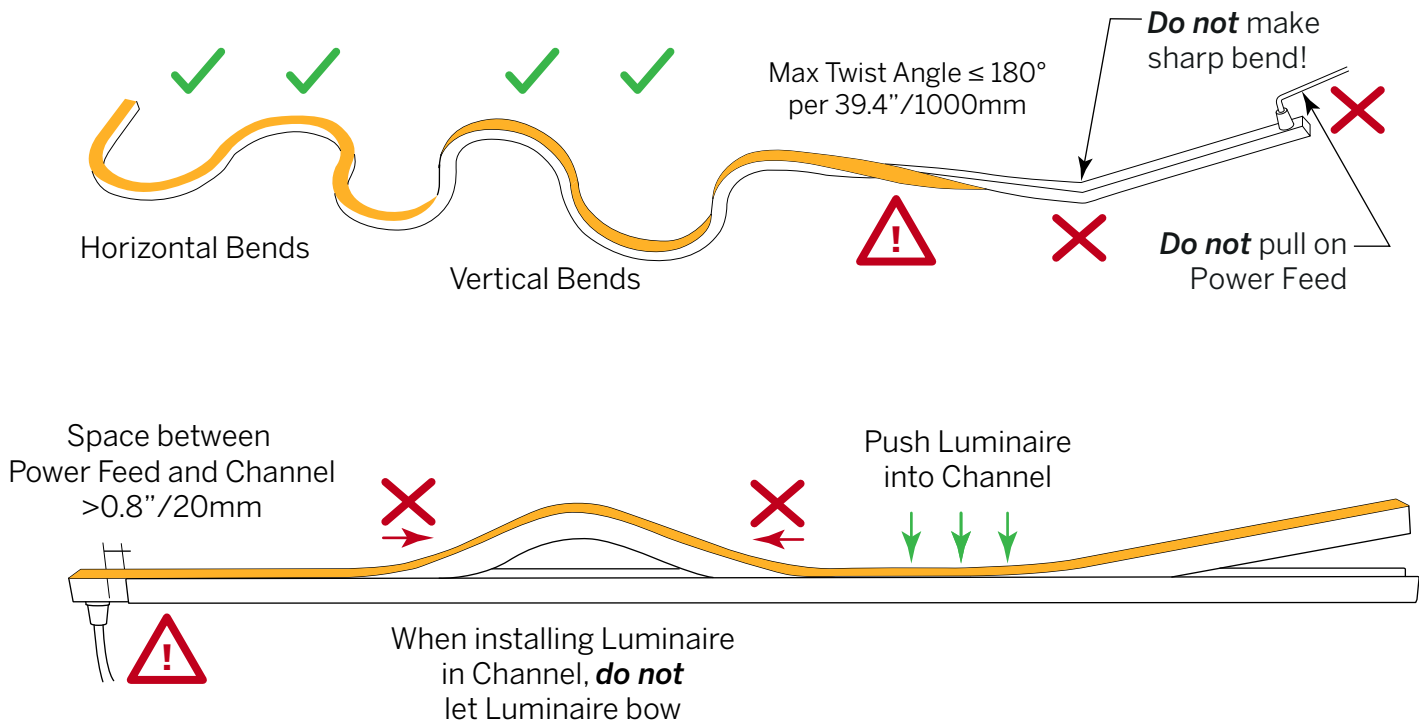

Step 3 - *Accessories*

Aluminum Profile

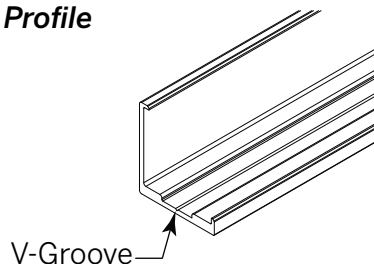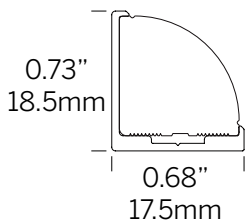

Available in:

39.37"/1000mm Silver^{1,3}

78.84"/2000mm Silver^{1,3}

Need
Help?

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 8.2026

Step 3 - **Accessories** (continued)

Stainless Steel Clip

Available in:
0.55"/14mm Silver^{1,2}

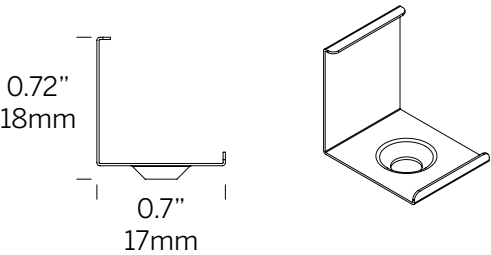

NOTES:

- 1 Mounting screws and anchors supplied by others.
- 2 All clip-length profiles are pre-drilled for mounting.
- 3 Full-length profiles are pre-drilled with (3) holes per 39.37"/1000mm. Additional holes may be drilled, as needed.


Step 4 - **How to Field Cut the Flex Luminaire**

All versions of the Flex 16 Cove Luminaire (except the *Free Cut*) have a narrow transparent window on the bottom or side with Cut Lines that look like one of those shown at right.

The ovals represent copper pads. It is imperative to cut on these lines to maintain a fully lit luminaire. If Flex is not cut on these lines, there is a risk that a portion of the luminaire near the cut will not power on.

The *Free Cut* version may be cut anywhere without concern that some LED's will go dark.

(Skip to **Step 5** if not applicable)

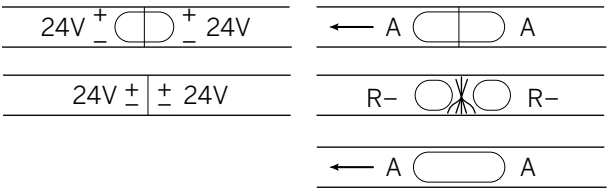

Cut Intervals

Static White

LED Type S05 - 2"/50mm
LED Type S12 - 2"/50mm

Static White High Output

LED Type S13 - 2.5"/63mm

Static White Free Cut

LED Type SF05 - n/a
LED Type SF12 - n/a

Tunable White

LED Type CT10 - 2.5"/63mm

Tunable White High Output

LED Type CT10 - 3.3"/83mm
LED Type CT13 - 3.3"/83mm

Warm Dim

LED Type 14R - 3.3"/83mm

RGB

LED Type L12 - 3.9"/100mm

RGBW

LED Type L16 - 3.9"/100mm

Pixel Static White

LED Type DMX10P13 - 3.9"/100mm

Pixel Tunable White

LED Type CTDMX10P13 - 3.9"/100mm

Pixel RGB

LED Type DMX02P14 - 19.7"/500mm
LED Type DMX10P14 - 3.9"/100mm

Pixel RGBW

LED Type DMX10P16 - 3.9"/100mm



Powered by

I B L




Step 4 - **How to Field Cut the Flex Luminaire** (continued)

IMPORTANT! All cuts are to be taken from the non-powered end!



- a** When cutting the Luminaire in the field, it is important to cut as perpendicular as possible. One way to do this is to use a pair of Miter Shears that has a fence 90° to the cut.

Generic Luminaire
Shown

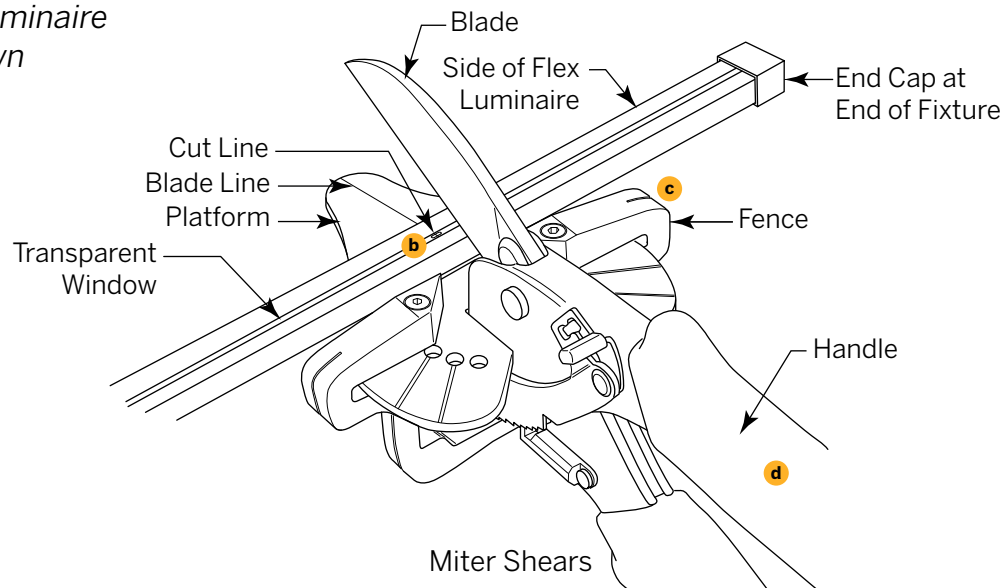

- b** Place Luminaire on Tool Platform with Transparent Window facing up as shown above. Line up Cut Line with Blade Line.
- c** Make sure Fence is at 0°, perpendicular to Blade.
- d** Squeeze Handles firmly to cut.

Whether one uses Miter Shears or not, it is important that Flex be cut at 90° across the fixture and not at an angle.

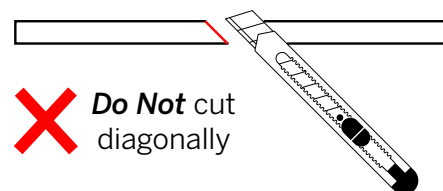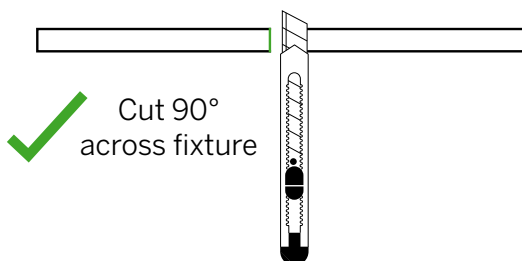

Need
Help?

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 8.2026


Step 4 - *How to Field Cut the Flex Luminaire* (continued)

Apply End Cap


With this new cut, an End Cap needs to be applied. (1) End Cap is supplied with each length of Flex. For example, if 300 feet was purchased in a single length, one End Cap is supplied. But if three 100 foot lengths were purchased, three End Caps would be supplied. Additional End Caps are available, if needed.

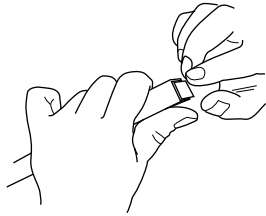


- a** Place Silicone Square at freshly cut end. Orient Square such that it lays entirely within confines of end shape.

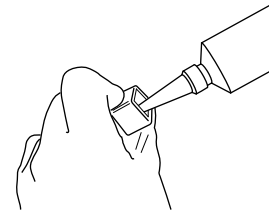


- b** Fill interior bottom and sides of End Cap with supplied silicone* sealant. Set aside.

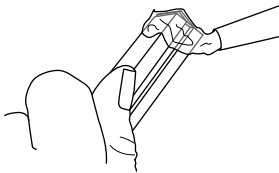

- c** Squeeze silicone sealant all around the last 1/2" of the newly cut end.

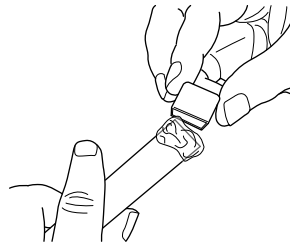

- d** Mount End Cap.

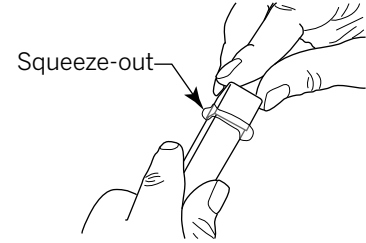


- e** Push End Cap onto Luminaire End. Wipe squeeze-out off and set aside to dry for 30-60 minutes.

Step 4 - *Install Luminaire* *Supplied silicone sealant is proprietary and specially formulated.

The Flex 16 Cove snaps into the Aluminum Profile and the Stainless Steel Clip via two grooves on each edge of the Fixture.

When using Profiles, the Feed Cable end must sit *outside* of Profile. The distance between the Power Feed - whether on the Side Left or Right; Bottom Left or Right; or End Left or Right - and the beginning of the the Profile should be at least 0.8" (20mm). See illustrations at right and next page.

- a** Drill mounting holes in Aluminum or Locking Profile as needed, at least one every 12". Stainless Mounting Clip and Flexible Profile are predrilled.

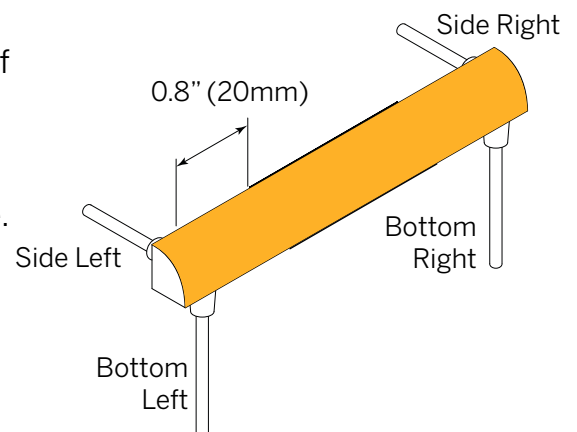

Need Help?

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 8.2026

Step 5 - **Install Luminaire** (continued)


- b** Fasten the Aluminum Profile(s) or Stainless Mounting Clips/Profile(s) to surface with appropriate screws (by others).
- c** Space Clips no more than 12 inches (300mm) apart and within 2 inches (50mm) of each bend.
- d** Press Luminaire into Clips or Profiles firmly.
- e** Wire Luminaire according to Driver specified. See Illustrations in **Step 6**, pages 6 - 12.
- f** Energize!

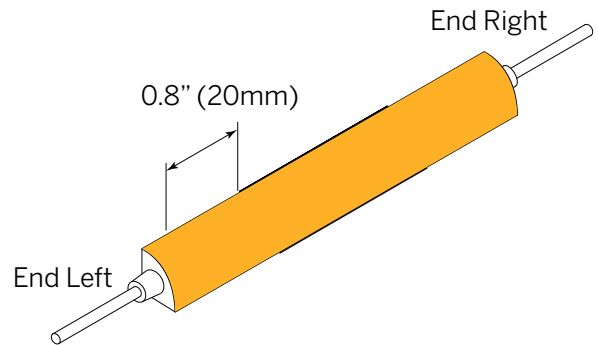Step 6 - **Wire Luminaire**

The following wiring diagrams for Constant Voltage remote drivers are included here for reference. For additional details, such as Maximum Wiring Distance, compatible dimmers, and driver box dimensions, please refer to the Driver Information Guide on our website.

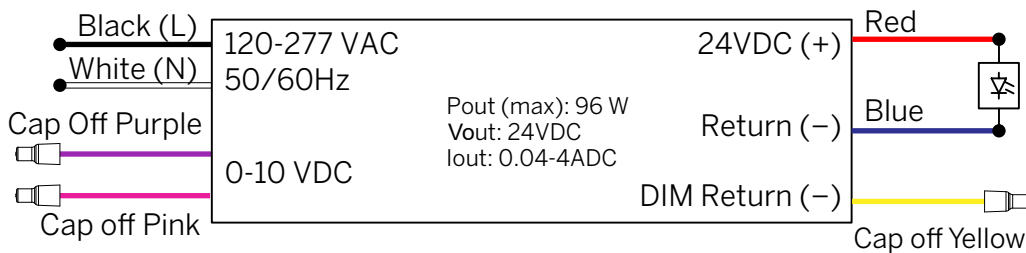D010 = eldoLED, Non-Dim or 10% 0-10V dimming (120-277V)*Non-Dimming*

For:
Static White
Static White High Output
Static White Free Cut

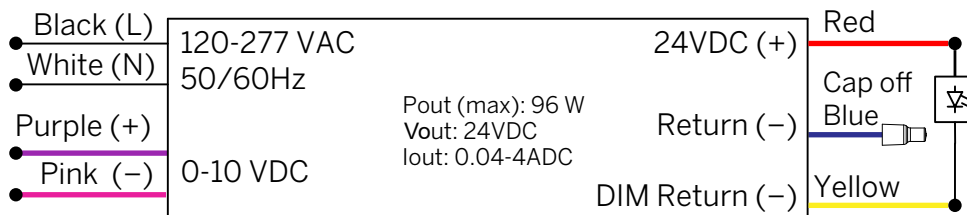Dimming

WARNING: If not connected to a 0-10V dimmer, driver **MUST** be wired as Non-dim. Not doing so can cause the driver and the fixtures to fail prematurely.

Need
Help?



Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 8.2026

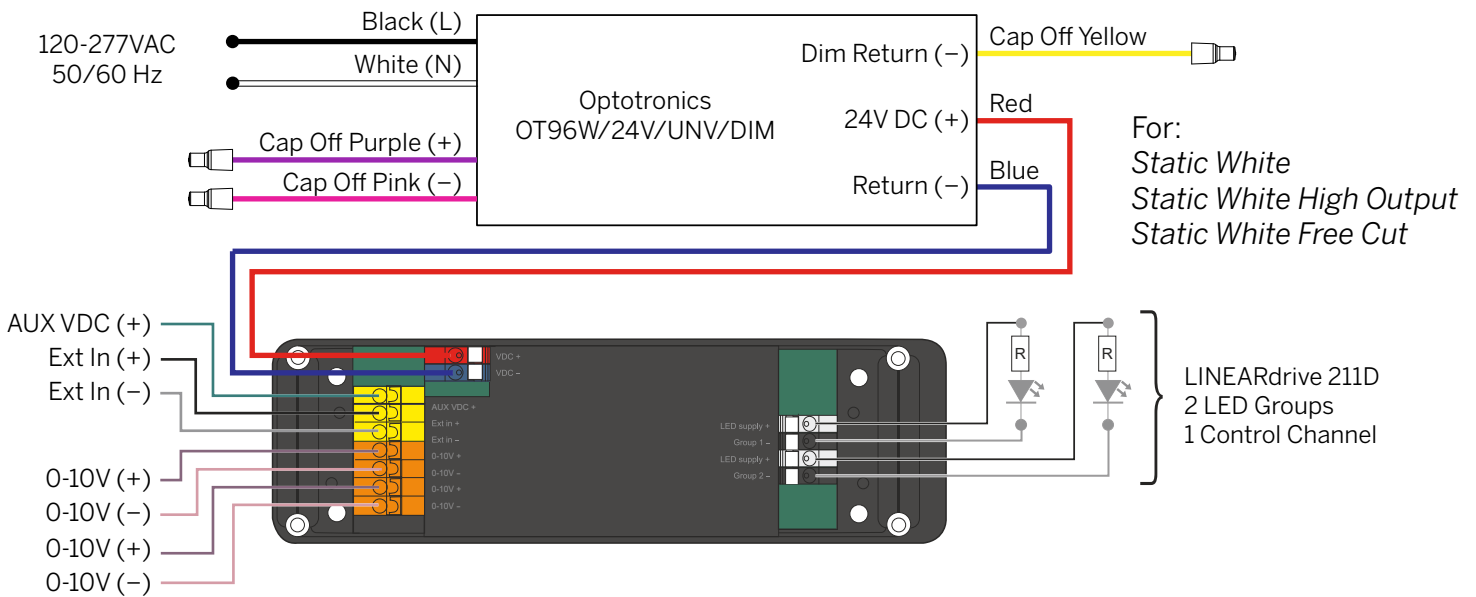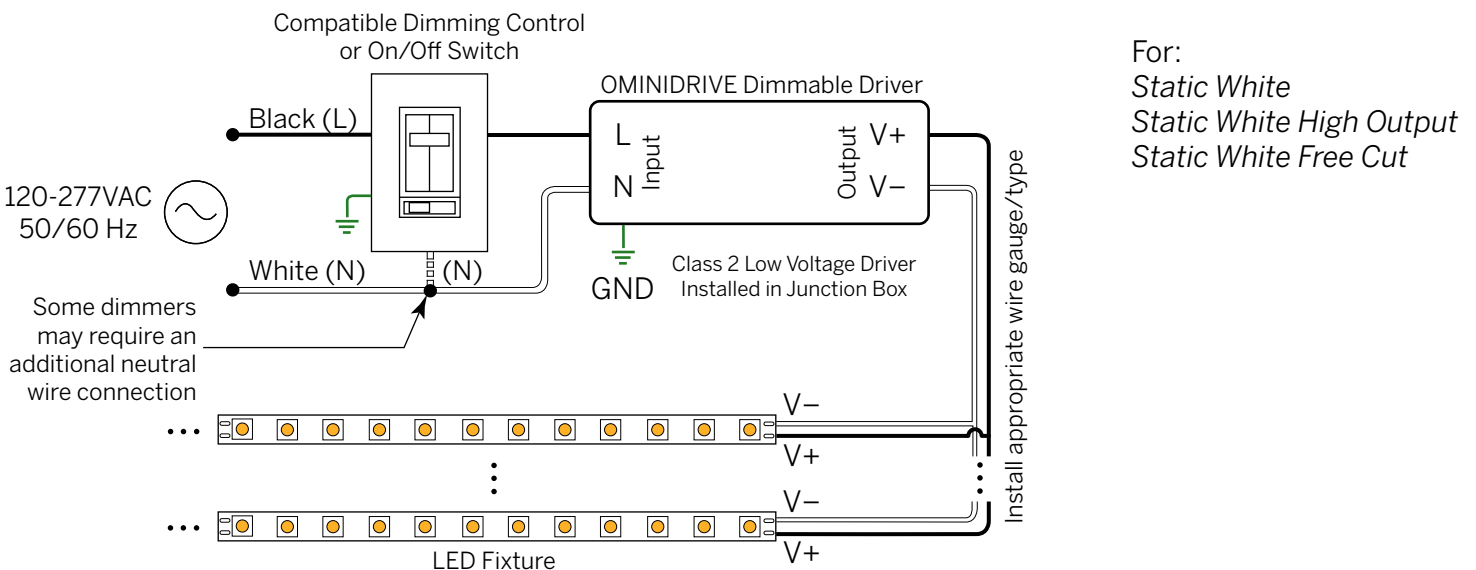
Step 6 - **Wire Luminaire** (continued)**EL96 = eldoLED 0-10V, 0.1% dimming (120-277V)****DPH = Phase Dimming, 1% dimming (120V only)**Need
Help?

Powered by


I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.

updated 8.2026

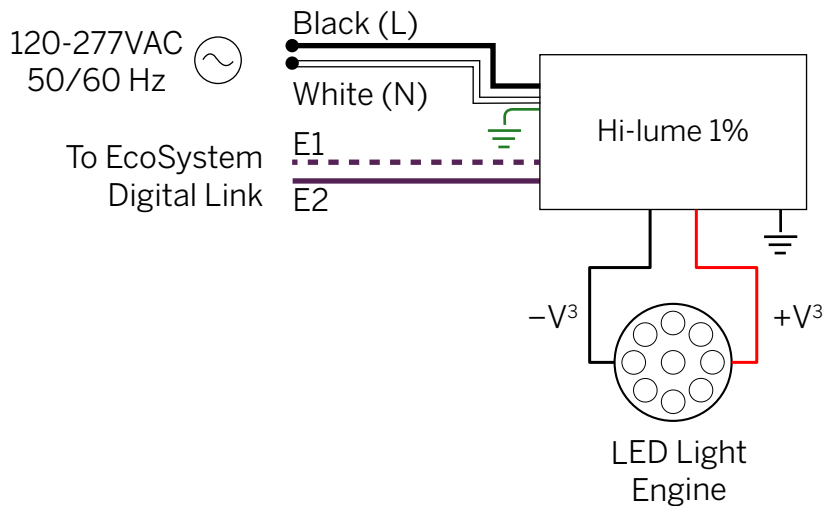Step 6 - **Wire Luminaire** (continued)**L3D0E = Lutron Hi-lume Premier 0.1% EcoSystem (120-277V)**

For:
 Static White
 Static White High Output
 Static White Free Cut

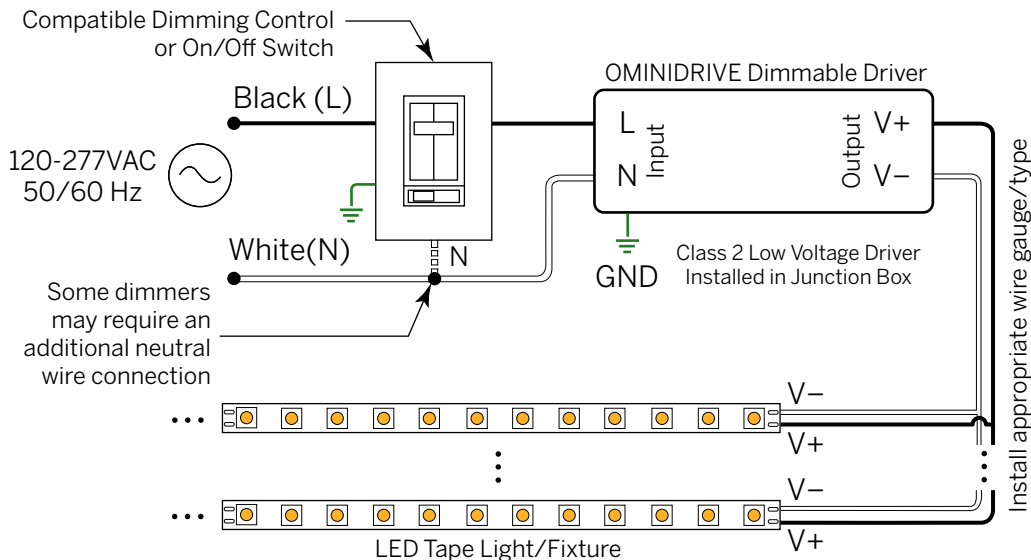UNV96-WL = 0-10V/Phase Dim 96W Wet Location, 1% dimming (120-277V)

For:
 Static White
 Static White High Output
 Static White Free Cut

Need
 Help?



Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
 Inter-lux reserves the right to make technical changes without notice.



updated 8.2026

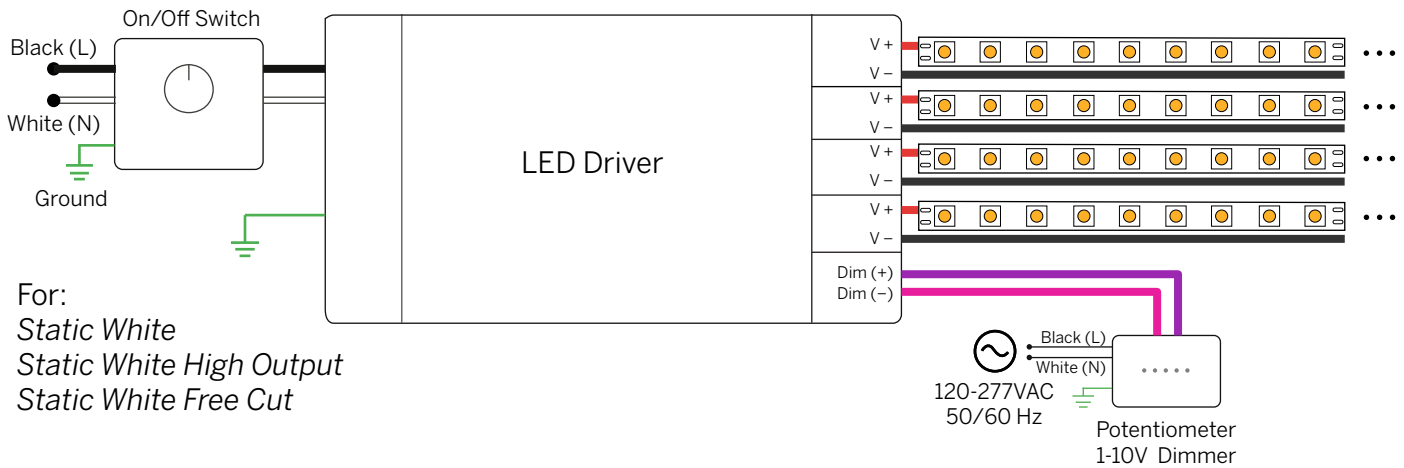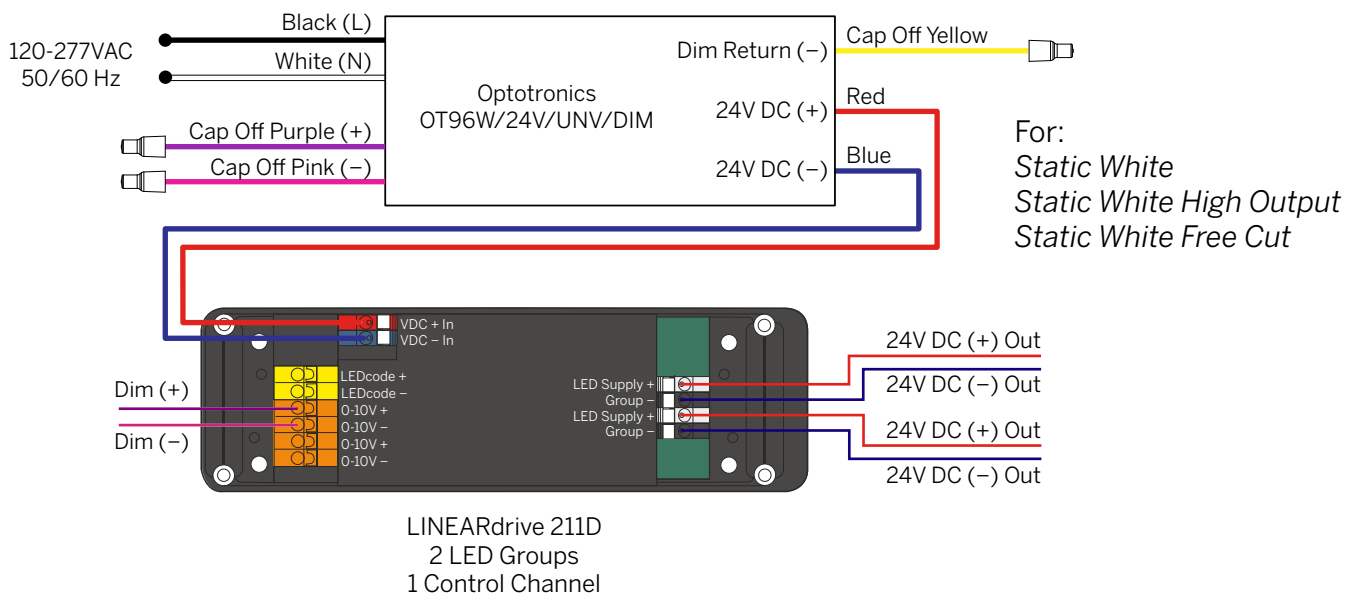Step 6 - **Wire Luminaire** (continued)**UNV384-WL = 0-10V/Phase Dim 384W Wet Location, 1% dimming (120-277V)****DALI-DT6 = eldoLED DALI-2 (DT6), 0.1% dimming (120-277V)**Need
Help?

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
 Inter-lux reserves the right to make technical changes without notice.




updated 8.2026

Step 6 - Wire Luminaire (continued)

DALI-DT6 = eldoLED DALI-2 (DT6), 0.1% dimming (120-277V)

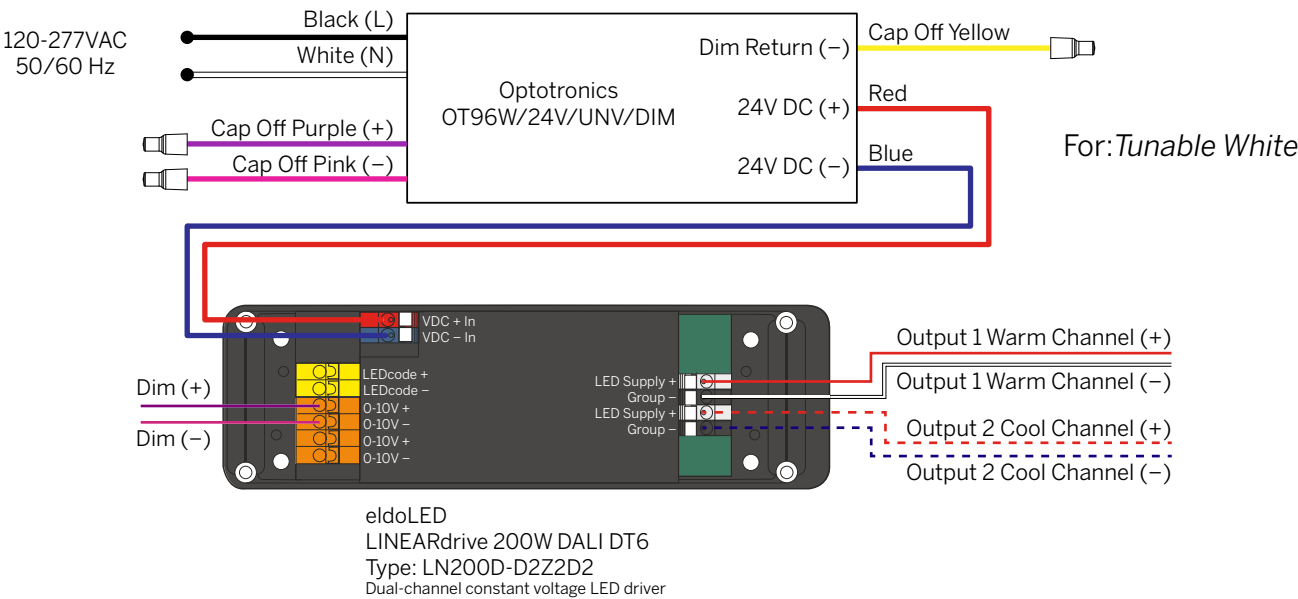

DALI-DT8 = eldoLED DALI-2 (DT8), 0.1% dimming (120-277V)

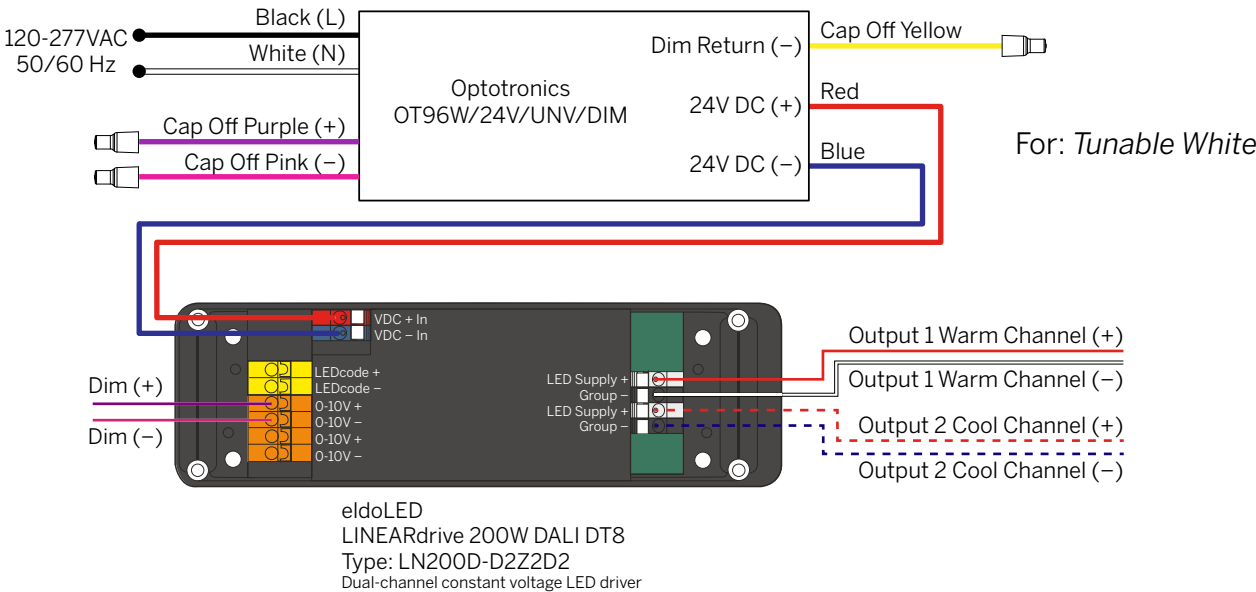


Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 8.2026

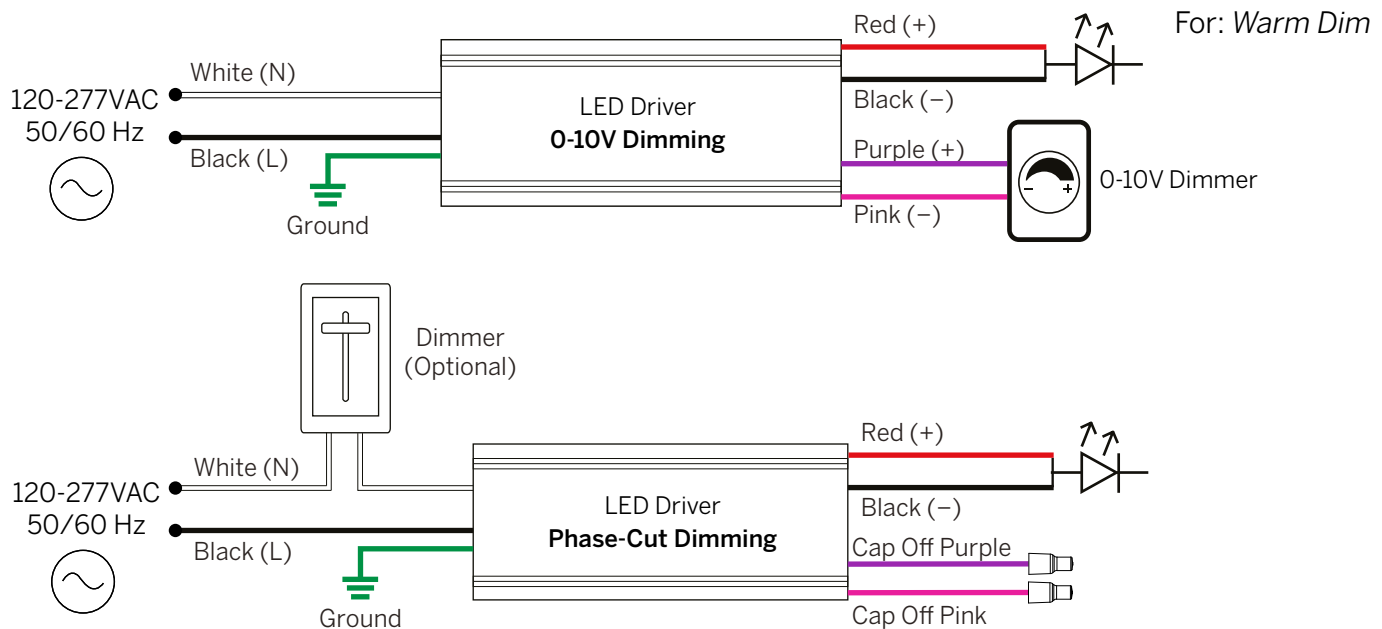Step 6 - **Wire Luminaire** (continued)**MAGSDM96-WD = 0-10V/Phase Dim 96W, 0.1% CCR dimming (120-277V) Phase - 120V only**

This space intentionally left blank.

Need
Help?


Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
 Inter-lux reserves the right to make technical changes without notice.



updated 8.2026

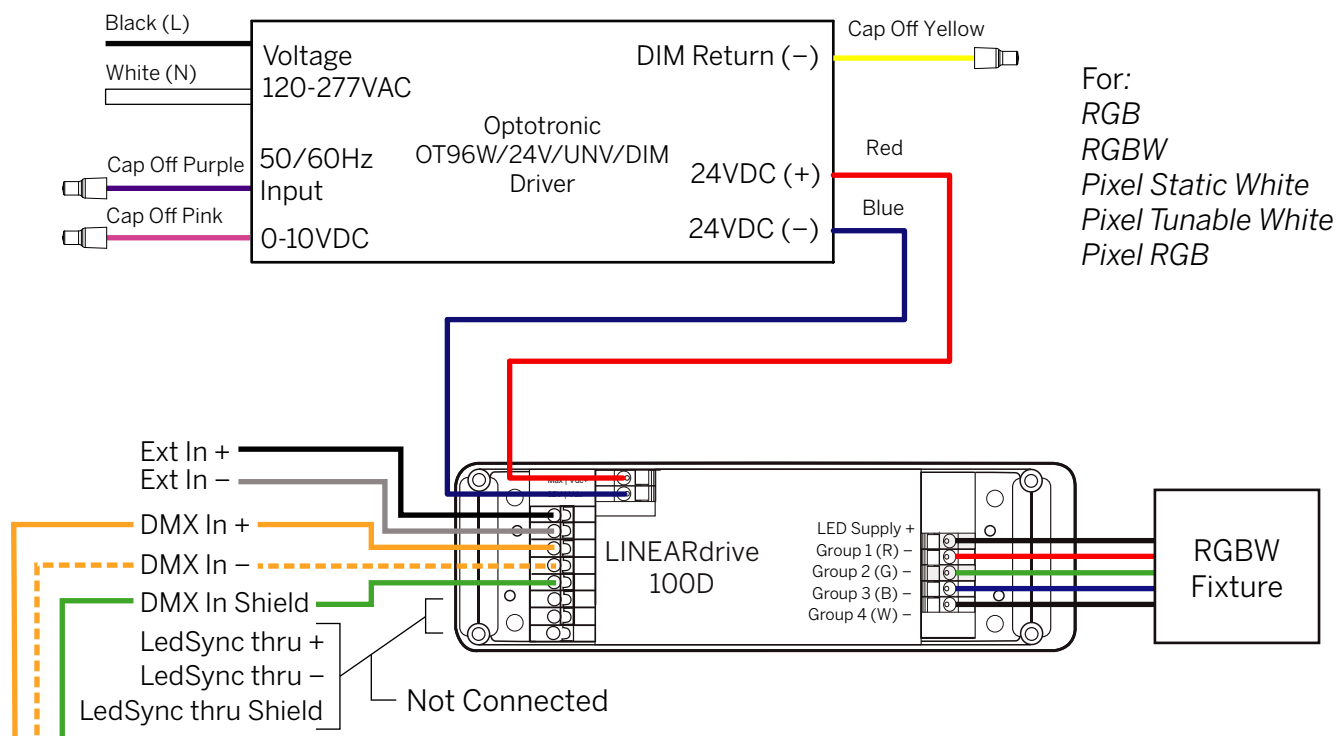Step 6 - **Wire Luminaire** (continued)**DMX = eldoLED 24V, 0.1% DMX Dimming**

NOTE: A second OT96W & LINEARdrive 100D pair may be daisy-chained to the first set of DMX connectors (DMX In +, DMX In -, DMX In Shield). A third pair may be daisy-chained to the second, etc.

Need
Help?

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 8.2026