

Installation Instructions

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



Never connect a Fixture to a Live Driver!!!

To prevent electrical shock disconnect electrical supply before installation or servicing.


Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - *Open the Box*

Unpack luminaire unit(s). The Flex family of luminaires require special handling. They are supplied in lengths specified at the time of order, and are delivered on a reel enclosed in a large anti-static bag. Remote Drivers and Boxes may be ordered from Inter-lux separately.



24VDC Constant Voltage

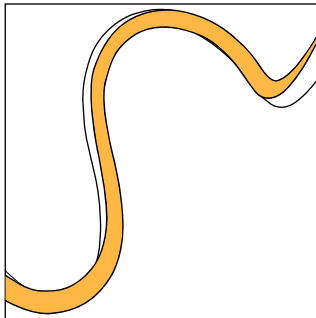


15 x 15 Multi High Temp

Static White

Minimum Horizontal and Vertical Bend $\varnothing \geq 11.8" / 300\text{mm}$

Working Temp Range


13° to 212°F / -25° to 100°C

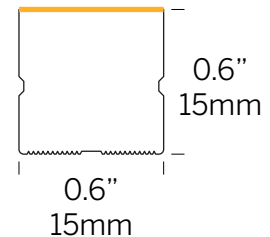

NOTE: Yellow (or light gray in B/W) indicates a lit surface.

Step 2 - *Handling the Luminaire*

- a** The delicate nature of the Flex Multi High Temp Luminaire necessitates that unpacking, handling, and installing this fixture be done by **at least** two people.

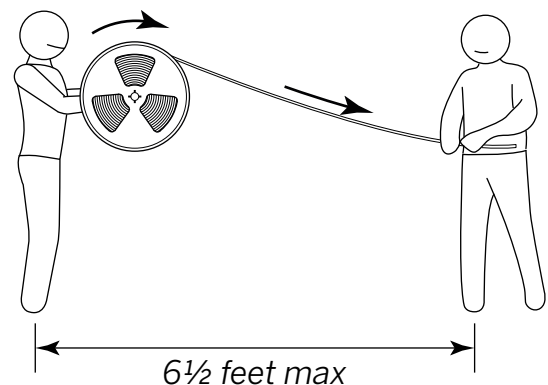

Need
Help?

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026

Flex 15 x 15


Multi High Temp

inter•lux


2/10

Step 2 - *Handling the Luminaire* (continued)

- b** The Flex 15 x 15 Multi High Temp Luminaire may be represented by the illustration at right. All Multi Luminaires bend in both the **horizontal and vertical planes** - Up, Down, Left, and Right.


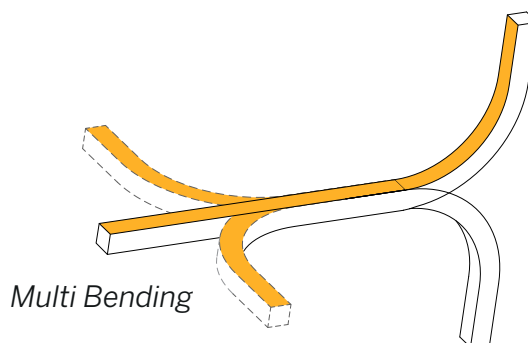


- c** Observe the following cautions during installation:


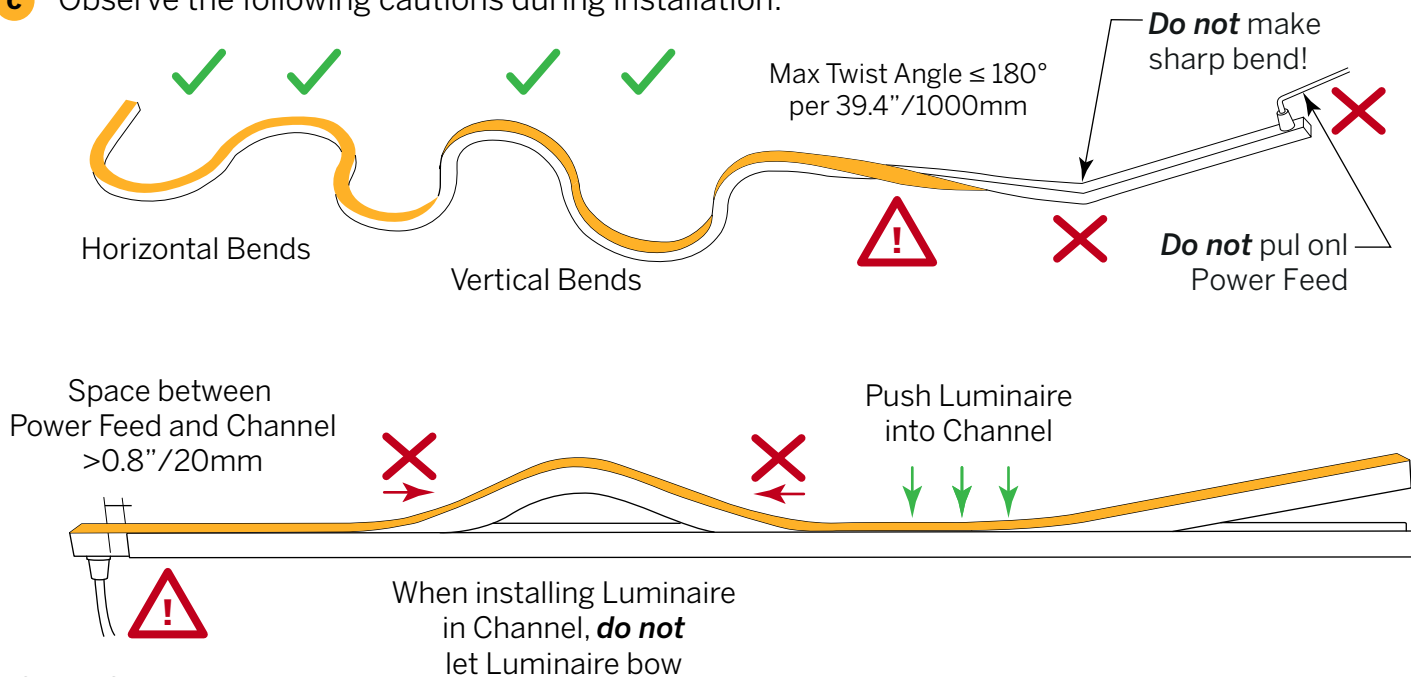


Step 3 - *Accessories*

Aluminum Clip/Profile

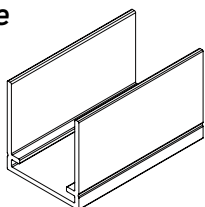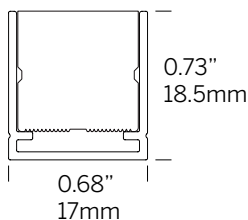

Locking Clip/Profile

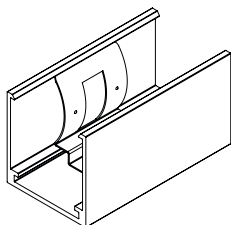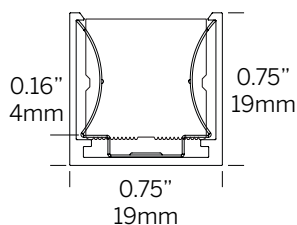

Available in:

1.18"/30mm Silver^{1,2}
1.18"/30mm Black^{1,2}
39.37"/1000mm Silver^{1,3}
39.37"/1000mm Black^{1,3}

Available in:

1.38"/35mm Silver^{1,2,4}
1.38"/35mm Black^{1,2,4}
39.37"/1000mm Silver^{1,3,4}
39.37"/1000mm Black^{1,3,4}
78.74"/2000mm Silver^{1,3,4}
78.74"/2000mm Black^{1,3,4}
98.43"/2500mm Silver^{1,3,4}
98.43"/2500mm Black^{1,3,4}

Need
Help?

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026

Step 3 - Accessories (continued)


Deep Self Locking Clip/Profile

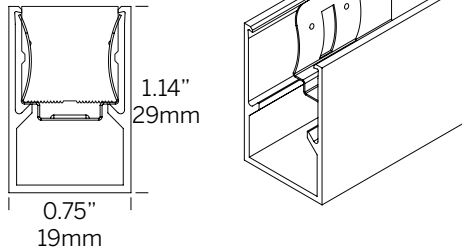

Available in:

1.38\"/35mm Silver^{1, 2, 4, 5}
1.38\"/35mm Black^{1, 2, 4, 5}
39.37\"/1000mm Silver^{1, 3, 4, 5}
39.37\"/1000mm Black^{1, 3, 4, 5}


Stainless Steel Clip/Profile

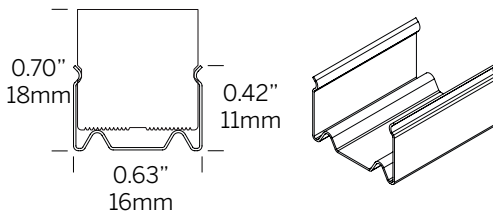

Available in:

0.79\"/20mm Silver^{1, 2, 4}
0.79\"/20mm Black^{1, 2, 4}
39.37\"/1000mm Silver^{1, 3, 4}
39.37\"/1000mm Black^{1, 3, 4}

Stainless Bendable Profile

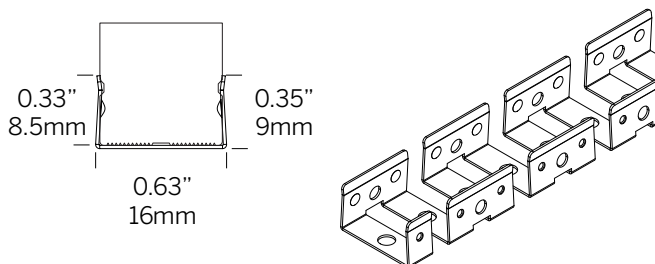

Available in:

39.37\"/1000mm Silver^{1, 6}
39.37\"/1000mm Black^{1, 6}

NOTES:

- 1 Mounting screws and anchors supplied by others.
- 2 All clip-length profiles are pre-drilled for mounting.
- 3 Full-length profiles are pre-drilled with (3) holes per 39.37\"/1000mm. Additional holes may be drilled, as needed.
- 4 Internal spring(s) inside Locking and Deep Self Locking Clip and Profile is movable to allow access to Mounting Hole(s).
- 5 Open space under spring of Deep Self Locking Profile is intended for wire management.
- 6 Flexible Profiles have pre-drilled holes in each segment for easy positioning.

Need
Help?

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 10.2026

Step 4 - *How to Field Cut the Flex Luminaire*

(Skip to **Step 5** if not applicable)

The Flex 15 x 15 Multi High Temp Luminaire has a narrow transparent window on the bottom or side with Cut Lines that look like one of those shown at right.

The ovals represent copper pads. It is imperative to cut on these lines to maintain a fully lit luminaire. If Flex is not cut on these lines, there is a risk that a portion of the luminaire near the cut will not power on.

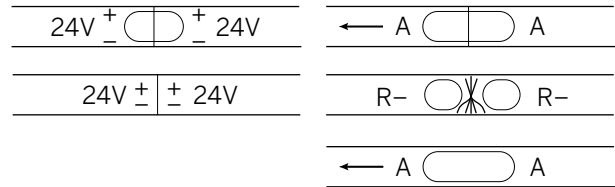

Cut Interval


Static White

LED Type S04 - 2"/50mm

IMPORTANT! All cuts are to be taken from the non-powered end!

- a** When cutting the Luminaire in the field, it is important to cut as perpendicular as possible. One way to do this is to use a pair of Miter Shears that has a fence 90° to the cut.

Generic Luminaire Shown

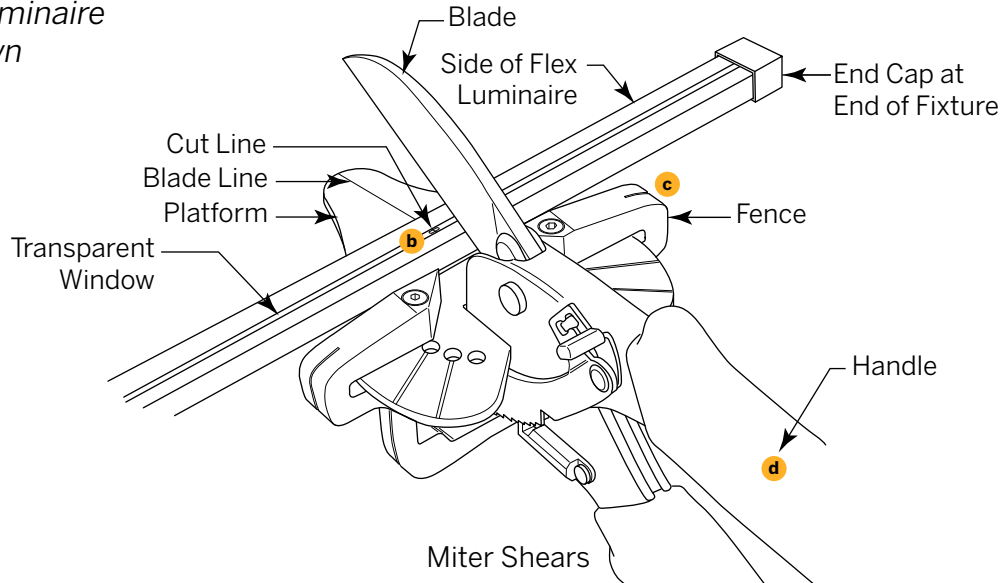

- b** Place Luminaire on Tool Platform with Transparent Window facing up as shown above. Line up Cut Line with Blade Line.
- c** Make sure Fence is at 0°, perpendicular to Blade.
- d** Squeeze Handles firmly to cut.

Need Help?

Powered by

I B L



410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 10.2026

Step 4 - How to Field Cut the Flex Luminaire *(continued)*


Whether one uses Miter Shears or not, it is important that Flex be cut at 90° across the fixture and not at an angle.

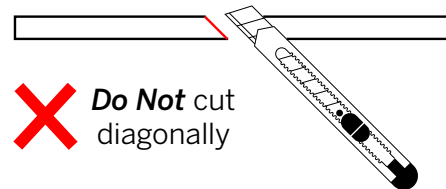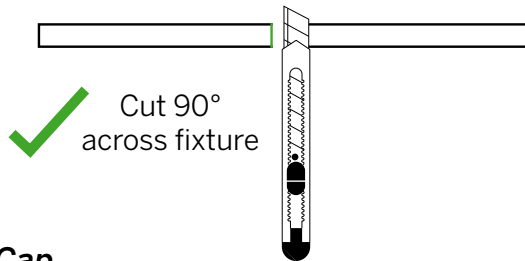**Apply End Cap**


With this new cut, an End Cap needs to be applied. (1) End Cap is supplied with each length of Flex. For example, if 300 feet was purchased in a single length, one End Cap is supplied. But if three 100 foot lengths were purchased, three End Caps would be supplied. Additional End Caps are available, if needed.

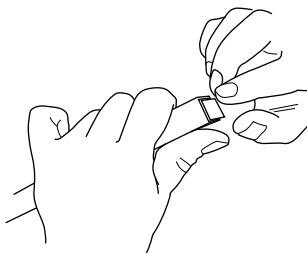


- a** Place Silicone Square at freshly cut end. Orient Square such that it lays entirely within confines of end shape.

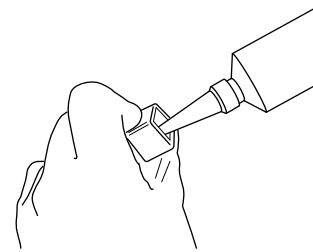


- b** Fill interior bottom and sides of End Cap with supplied silicone* sealant. Set aside.

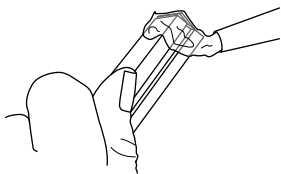

- c** Squeeze silicone sealant all around the last ½" of the newly cut end.

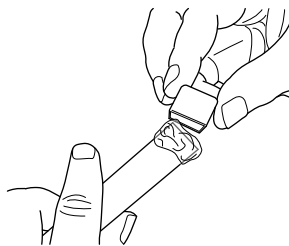

- d** Mount End Cap.

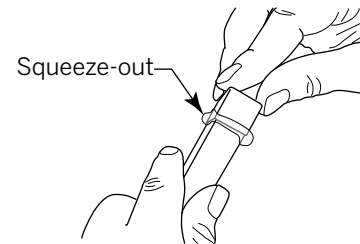

- e** Push End Cap onto Luminaire End. Wipe squeeze-out off and set aside to dry for 30-60 minutes.

**Need
Help?**

**Supplied silicone sealant is proprietary and specially formulated.*

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.





updated 10.2026

Step 5 - *Install Luminaire*

The Flex 15 x 15 Multi High Temp sits in the Aluminum Profile via a friction fit. The Luminaire is retained in the Locking Profile and the Deep Locking Profile via an integral spring. Luminaire is held in the Stainless Clip/Profile by a ridge along the top edge that catches a groove on either side of the Luminaire. It is secured in the Stainless Flexible Profile by small linear barbs that catch the sides of the Fixture.

When using Profiles, the Feed Cable end must sit *outside* of Profile. The distance between the Power Feed - whether on the Side Left, Side Right, Bottom or End - and the beginning of the the Profile should be at least 0.8" (20mm). See illustrations at right.

- a** Drill additional mounting holes in Aluminum Profiles, if needed.
- b** Fasten the Aluminum Profile(s) or Stainless Mounting Clips/Profile(s) to surface with appropriate screws (by others).
- c** Space Clips no more than 12 inches (300mm) apart and within 2 inches (50mm) of each bend.
- d** Press Luminaire into Clips or Profiles firmly.
Do not allow a vertical bend greater than 10°.
- e** Wire Luminaire according to Driver specified. See Illustrations in **Step 6**, pages 9-12.
- f** *Energize!*

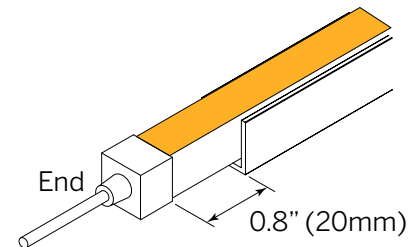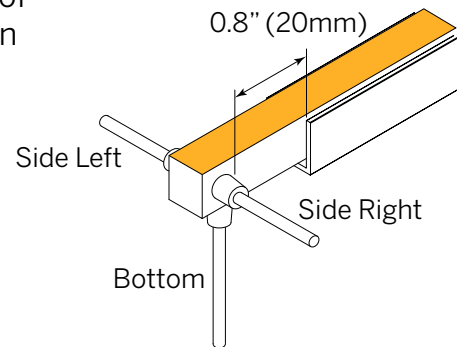

Generic Luminaires Shown

This Space Intentionally Left Blank

Need
Help?

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 10.2026

Step 6 - **Wire Luminaire**

The following wiring diagrams for Constant Voltage remote drivers are included here for reference. For additional details, such as Maximum Wiring Distance, compatible dimmers, and driver box dimensions, please refer to the Driver Information Guide on our website.


D010 = eldoLED, Non-Dim or 10% 0-10V dimming (120-277V)

Non-Dimming

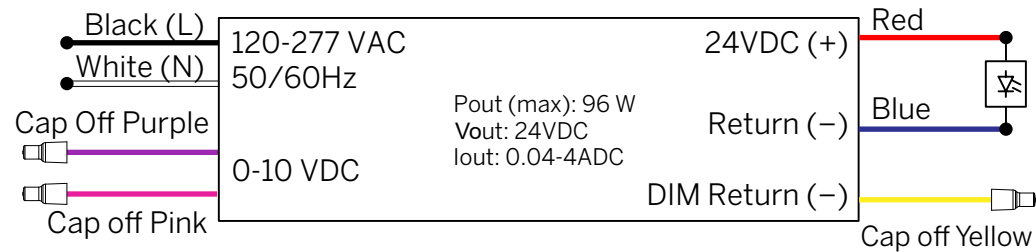

For:
Static White
Static White High Output
Static White Free Cut

Dimming

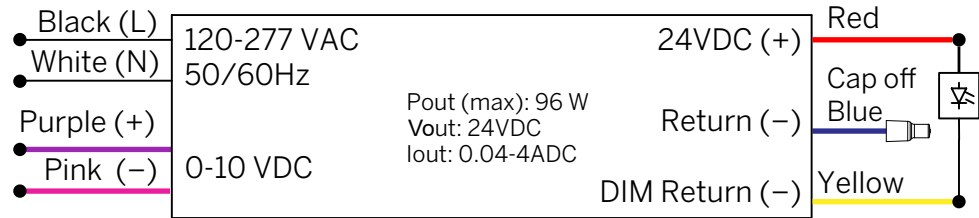

WARNING: If not connected to a 0-10V dimmer, driver **MUST** be wired as Non-dim. Not doing so can cause the driver and the fixtures to fail prematurely.

This Space Intentionally Left Blank



120-277VAC
50/60 Hz

Black (L)
White (N)

Cap Off Purple (+)
Cap Off Pink (-)

Optotronics
OT96W/24V/UNV/DIM

24V DC (+)
Return (-)

Dim Return (-)

Cap Off Yellow

Red
Blue

For:
Static White

AUX VDC (+)
Ext In (+)
Ext In (-)

0-10V (+)
0-10V (-)
0-10V (+)
0-10V (-)


VDC +
VDC -

AUX VDC +
Ext In +
Ext In -
0-10V +
0-10V -
0-10V +
0-10V -

LED supply +
LED supply -
Group 1 +
Group 1 -
Group 2 +
Group 2 -

LINEARdrive 211D
2 LED Groups
1 Control Channel


DPH = Phase Dimming, 1% dimming (120V only)

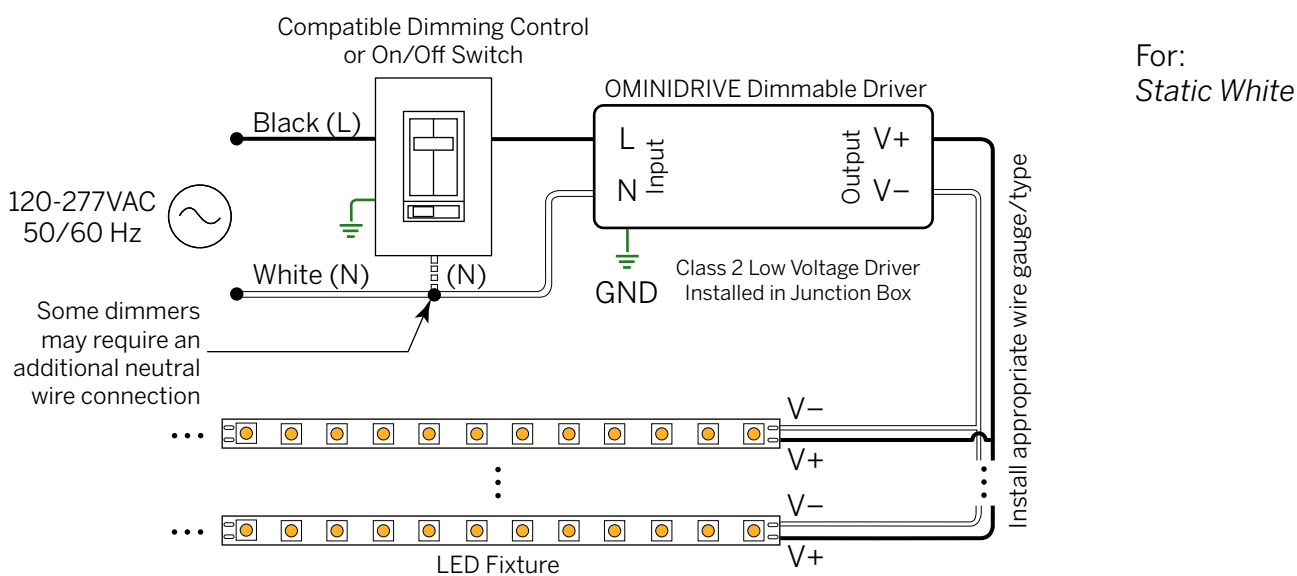

**Need
Help?**


Step 6 - **Wire Luminaire** (continued)

L3D0E = Lutron Hi-lume Premier 0.1% EcoSystem (120-277V)

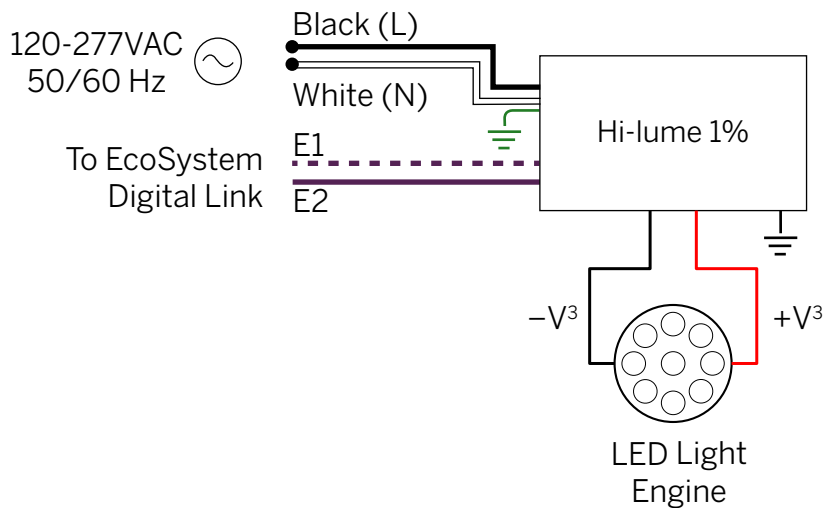

For:
Static White

UNV96-WL = 0-10V/Phase Dim 96W Wet Location, 1% dimming (120-277V)

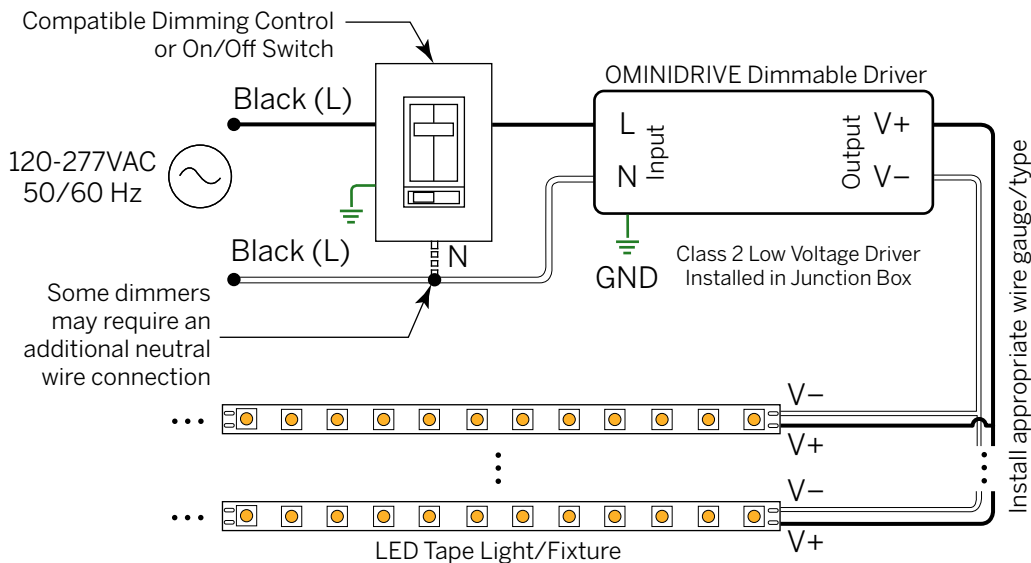

For:
Static White

Need Help?

Powered by

I B L


410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.




updated 10.2026

Step 6 - **Wire Luminaire** (continued)

UNV384-WL = 0-10V/Phase Dim 384W Wet Location, 1% dimming (120-277V)

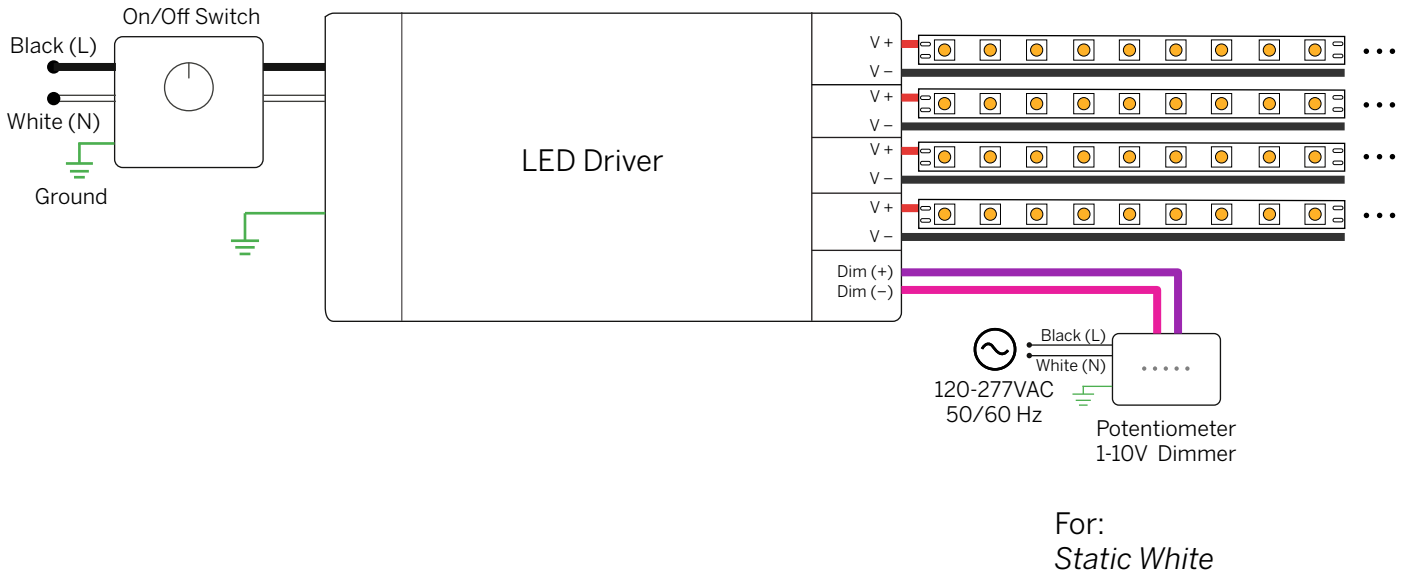

DALI-DT6 = eldoLED DALI-2 (DT6), 0.1% dimming (120-277V)

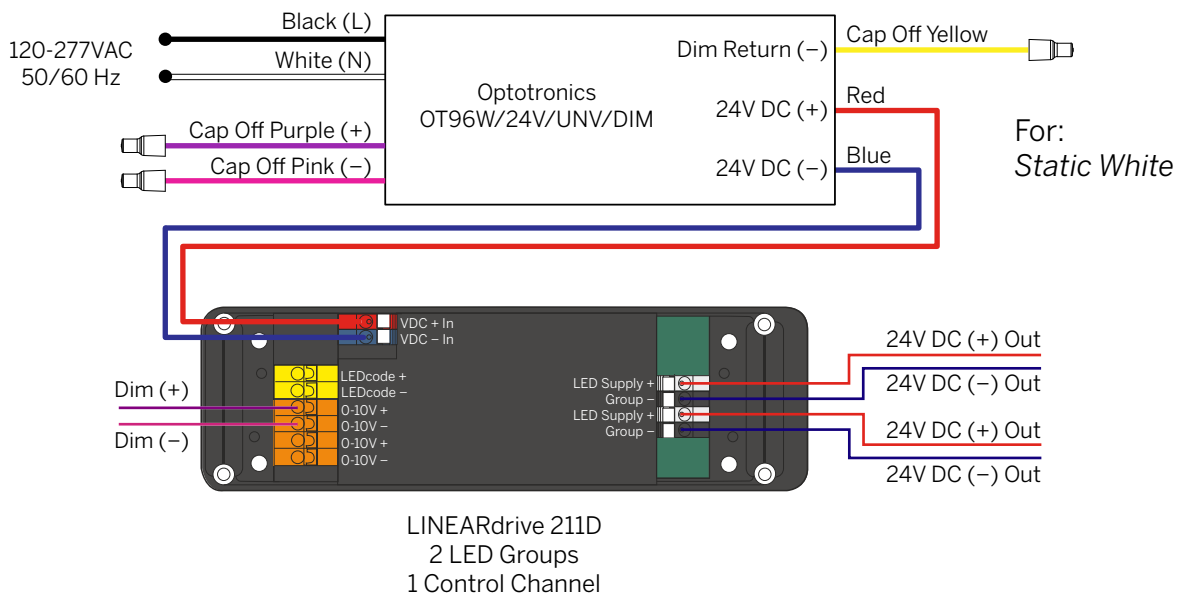

**Need
Help?**

Powered by

I B L

410 381 1497 inter-lux.com answers@inter-lux.com
Inter-lux reserves the right to make technical changes without notice.



updated 10.2026