

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.


Never connect a fixture to a live driver!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.


Step 1 - *Open the Box*

Unpack Luminaire unit. Unit ships with Trim, Springs, and Accessories (e.g. Lenses, Louvers, etc.) attached as specified. Remote Drivers and Housings are supplied by Inter-lux.


*Fixtures must be wired in **series**!*

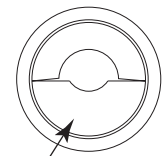


Light Shield

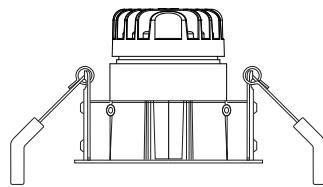

3" ProTools+
6W/9W

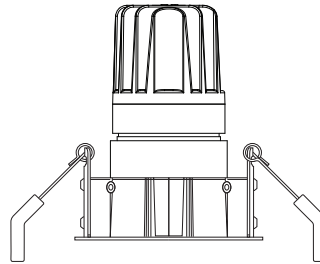

3" ProTools+
12W

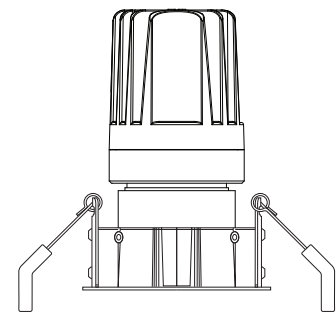


3" ProTools+
16W/20W

Step 2 - *Prep Ceiling*

- a** Cut 3¼" (80mm) diameter hole

Ceiling Thickness: Min: ¼"/6mm Max: 1¼"/31mm

- b** Clear any insulation at least 3" from any part of the Fixture or Driver Enclosure.

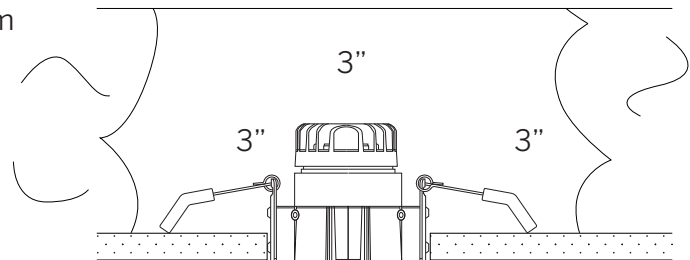

Step 3 - *Wire Luminaire*

See **Series Wiring Diagrams** on page 3. Select relevant Driver Diagram starting on page 4 of this document. For more detailed information, see the Driver Information pages for this product on our website.

- a** Pull low voltage cable from Remote Drivers through Ceiling.


IMPORTANT! Add a bit of slack to cable such that there is enough for Luminaire to be fully removed without tugging on Remote Driver.

- b** Connect incoming low voltage cable to 5" lead with Two-WireQuick Connect on Fixture.

**Need
Help?**

Step 4 - **Mount Luminaire**

- a** Bend Spring Clips upward and insert Fixture into hole.
- b** Fixture is seated when Clips spring back up above ceiling to secure.
- c** Rotate Light Shield as needed.
- d** *Energize!*

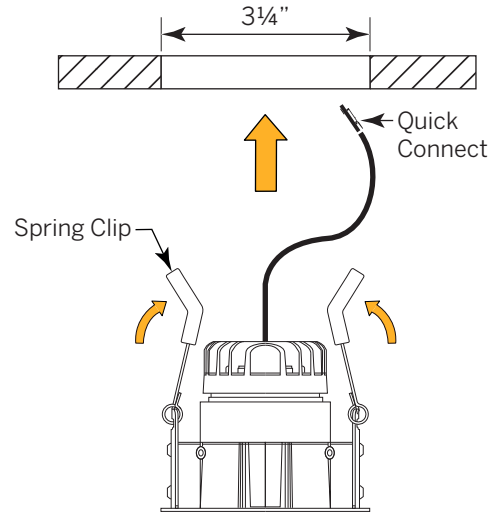

To Remove Luminaire

Luminaire may be removed by gripping Bezel with fingertips and pulling down. Spring Clips will loosen allowing for a better hold to pull fixture out further.


**Need
Help?**

Series Wiring Diagrams


3/9

Multiple Fixtures/One Driver

NOTE: Wago™ Connectors illustrated above not included with fixture.

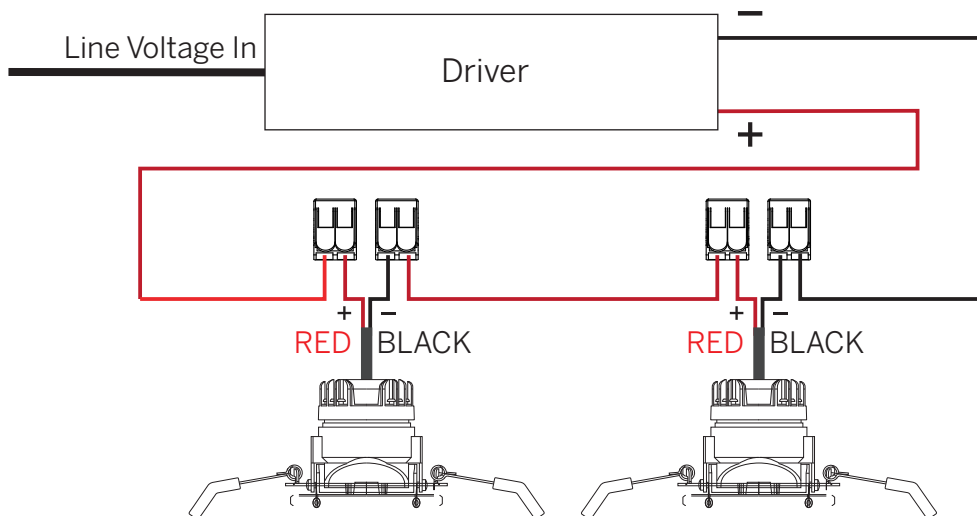

Multiple Fixtures/One Driver, Multiple Outputs

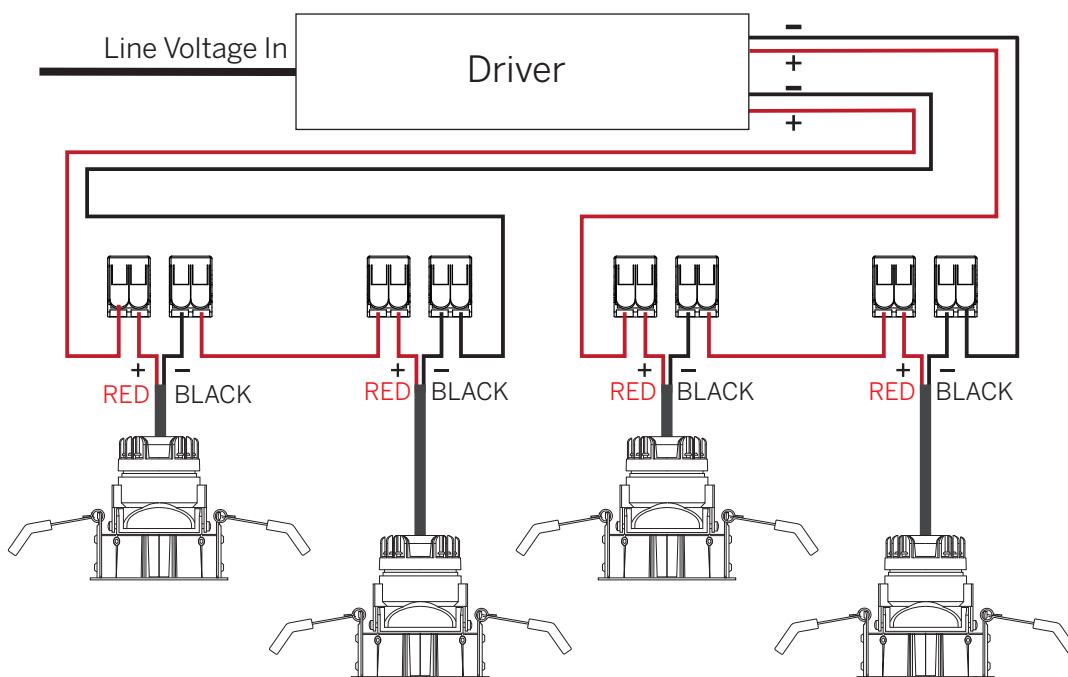

Need
Help?

Driver Wiring Diagrams


4/9

S010/RS010 = eldoLED 0-10V 1% dimming, 120-277V	p. 4, 5
D010/RD010 = eldoLED 0-10V 0.1% dimming, 120-277V	p. 5, 6
SPH/RSPH = Phase (2 Wire) 3% dimming, 120V only	p. 7
D2S/RD2S = DALI-2 (DT6) for Static White 0.1% dimming, 120-277V	p. 7, 8
RD2T = DALI-2 (DT8) for Tunable White, 0.1% dimming, 120-277V	p. 9


NOTE: Drivers are available as integral or remote, unless otherwise noted.

S010/RS010 = eldoLED 0-10V 1% dimming, 120-277V

22W (Integral & Remote)

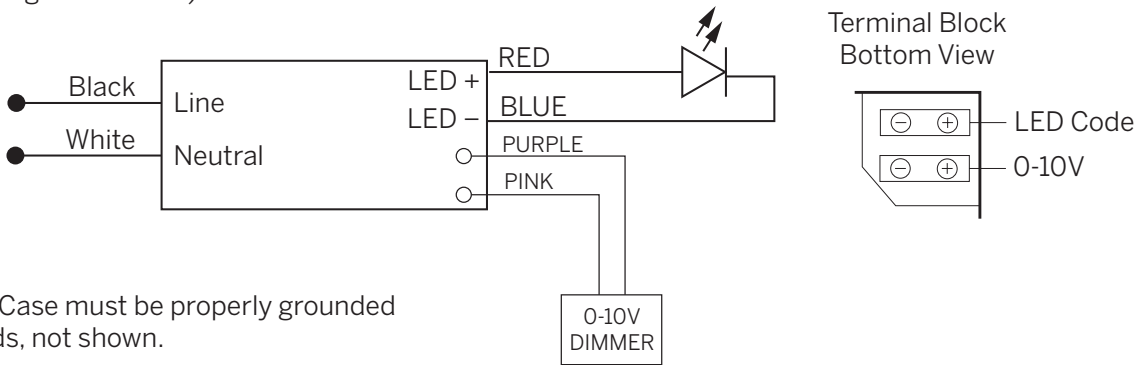


50W (Remote only)

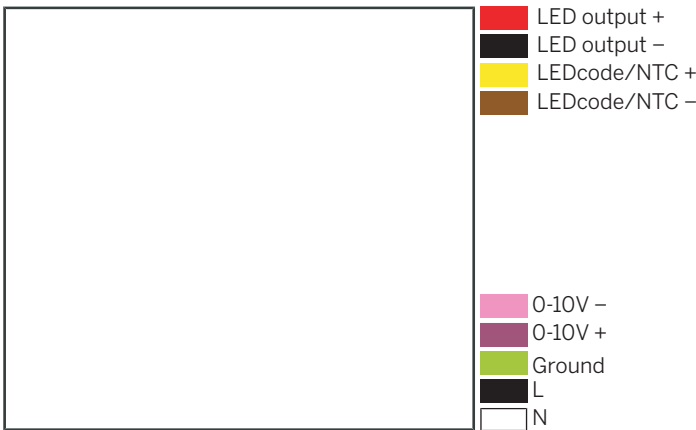


Driver Wiring Diagrams

S010/RS010 = eldoLED 0-10V 1% dimming, 120-277V (continued)
100W (Remote only)

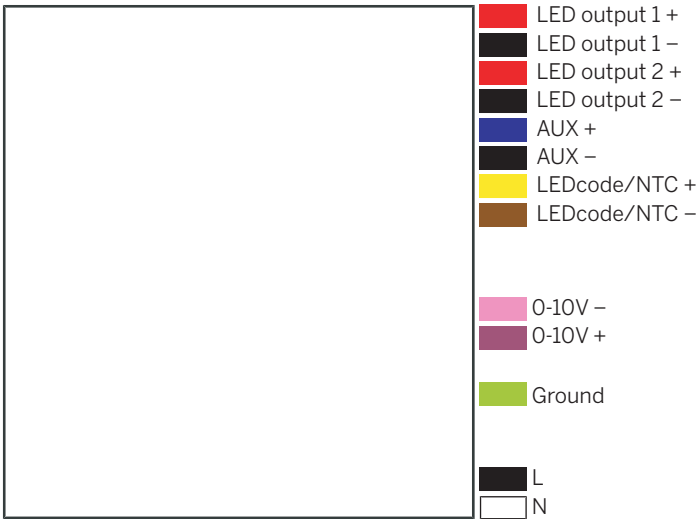


D010/RD010 = eldoLED 0-10V 0.1% dimming, 120-277V

22W (Integral & Remote)

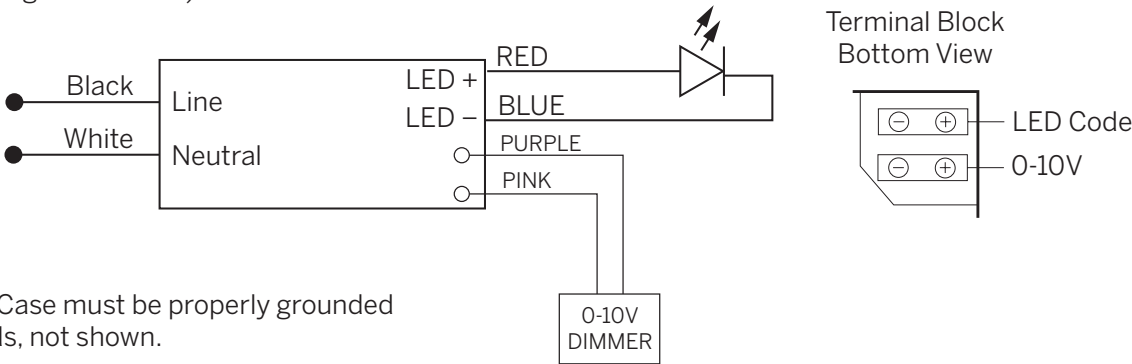

Driver Wiring Diagrams

D010/RD010 = eldoLED 0-10V 0.1% dimming, 120-277V (continued)
50W (Remote only)

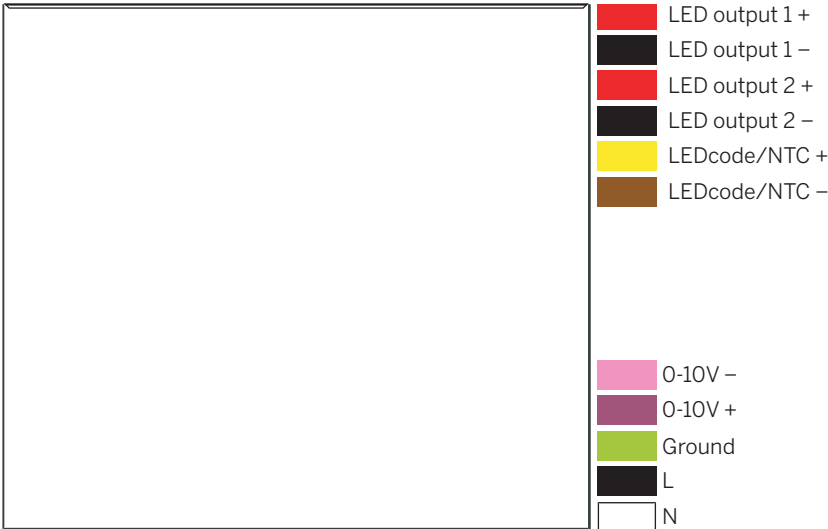


100W (Remote only)



Driver Wiring Diagrams


SPH/RSPH = Phase (2-wire) 3% dimming, 120V only

20W

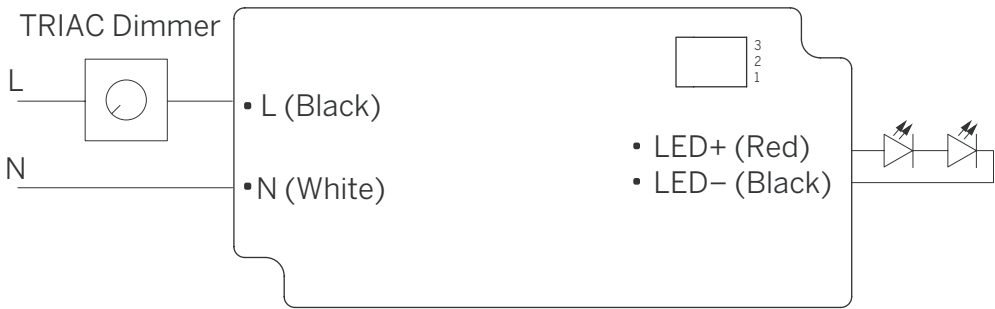

D2S/RD2S = DALI-2 (DT6) for Static White 0.1% dimming, 120-277V


22W (Integral & Remote)

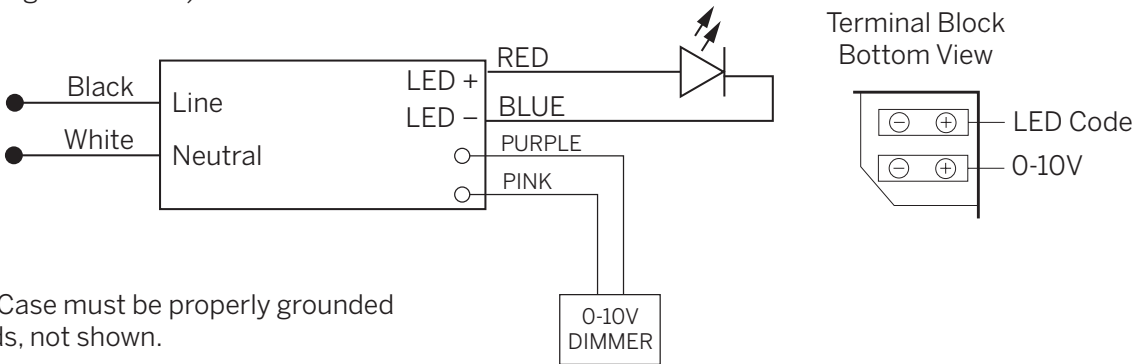


Driver Wiring Diagrams

D2S/RD2S = DALI-2 (DT6) for Static White 0.1% dimming, 120-277V (continued)

50W (Remote only)

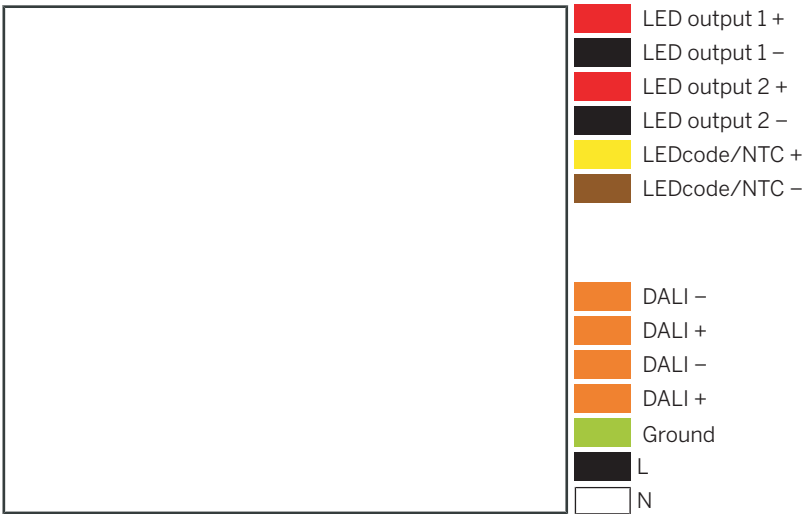

100W (Remote only)

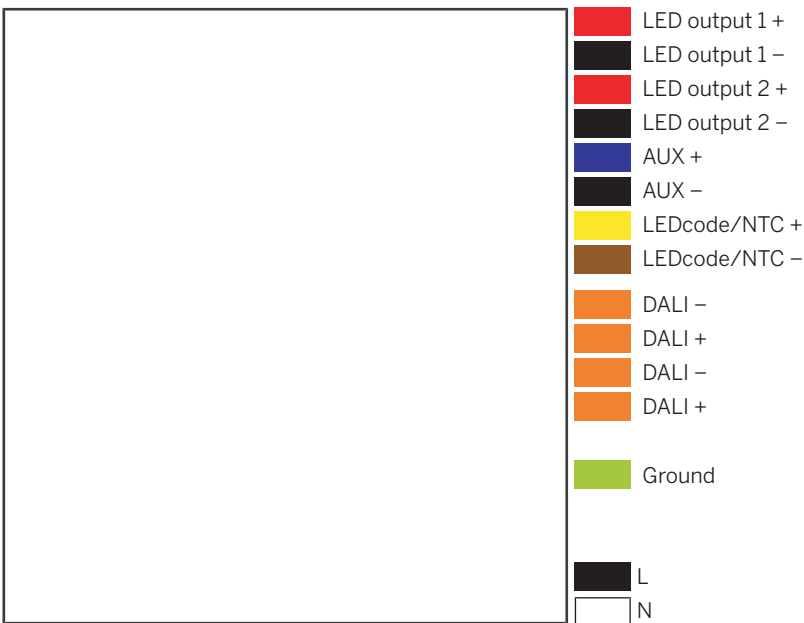

Driver Wiring Diagrams

RD2T = DALI-2 (DT8) for Tunable White 0.1% dimming, 120-277V

30W (Remote only)

