INSTALLATION INSTRUCTIONS

FASIM 2 // FASIM 2J

inter•lux
3741 Commerce Dr. #306-308
Baltimore, MD 21227
Phone (410) 381-1497
inter-lux.com

FASIM 2 13W
FASIM 2J 13W

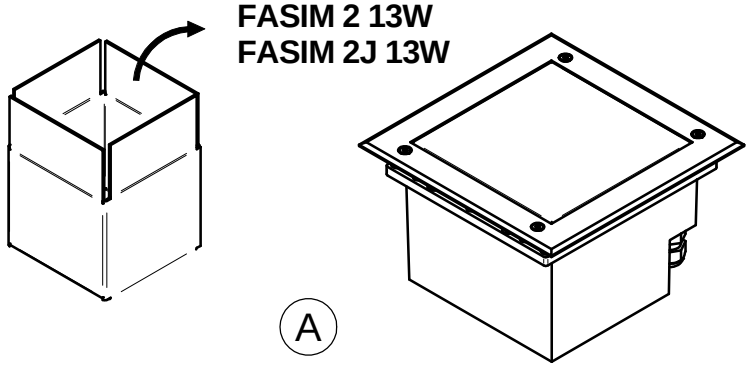

FASIM 2 8W
FASIM 2J 8W

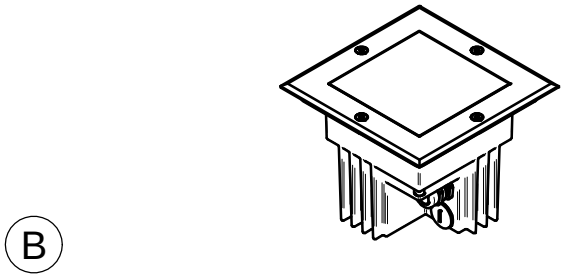

OUTER CASING FOR:
FASIM 2 13W
FASIM 2J 13W

Cod. E84906

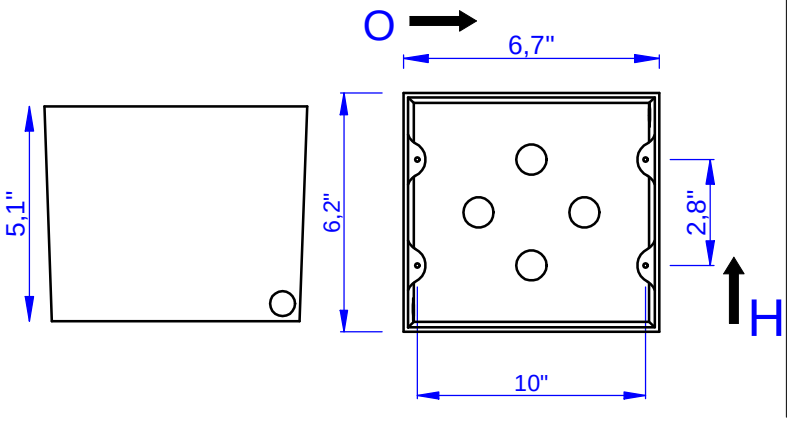

OUTER CASING FOR:
FASIM 2 8W
FASIM 2J 8W

Cod. E84928

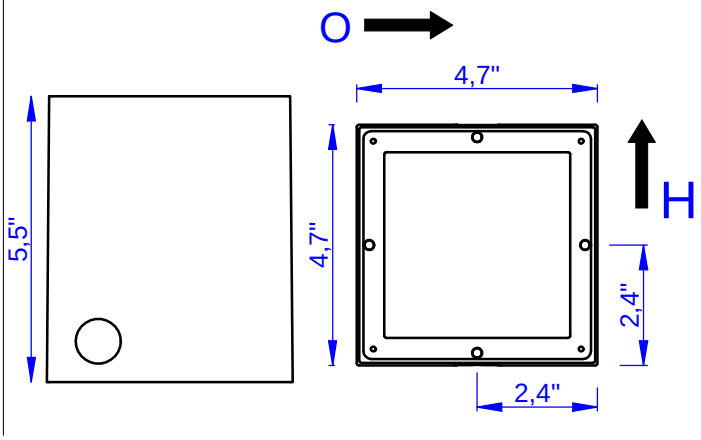

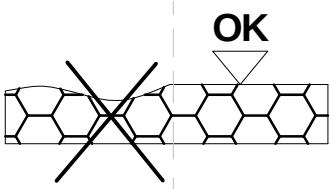

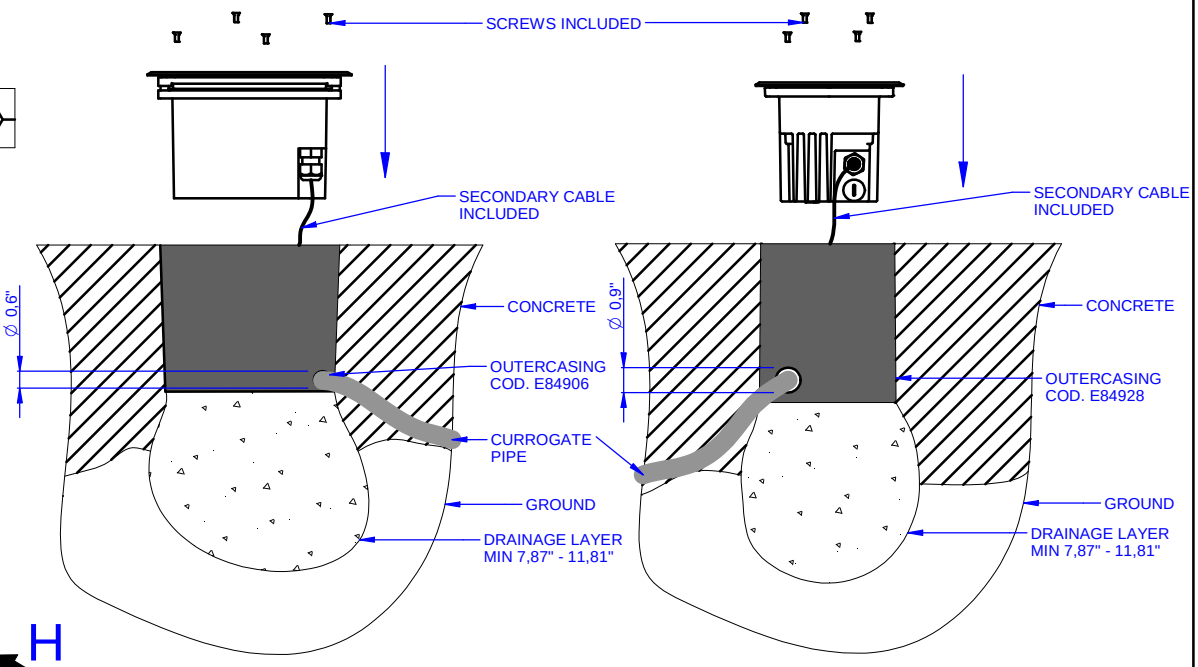

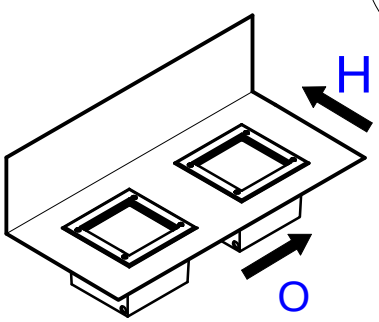

A1

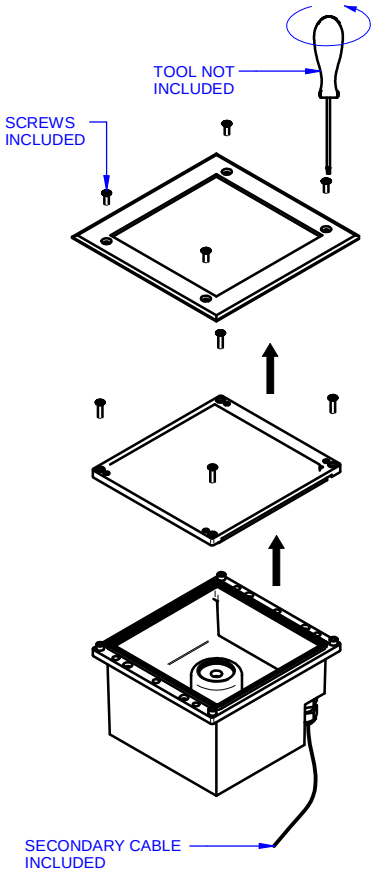

UNSCREW THE SCREWS.
REMOVE THE FLANGE AND
THE GLASS.

A2

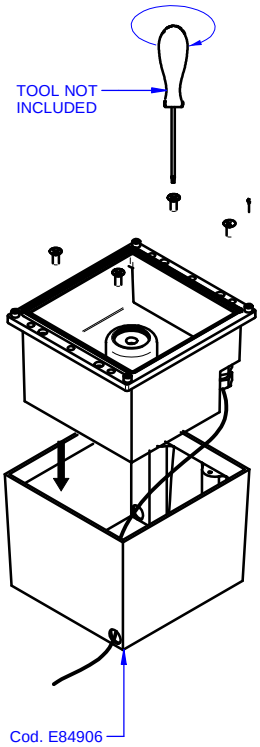

INSERT THE FASIM INTO
THE OUTERCASING.

A3

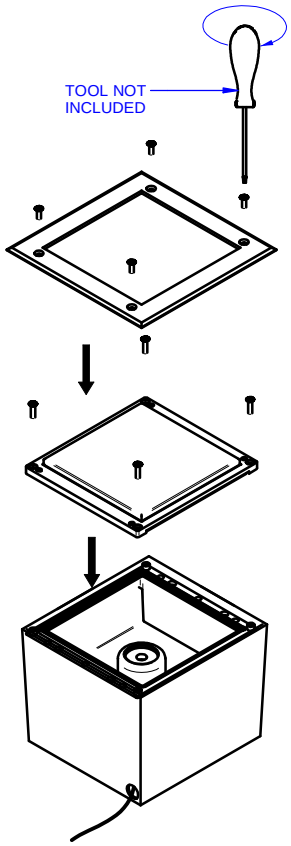

INSERT THE GLASS AND
THE FLANGE.
TIGHTEN THE SCREWS.

B1

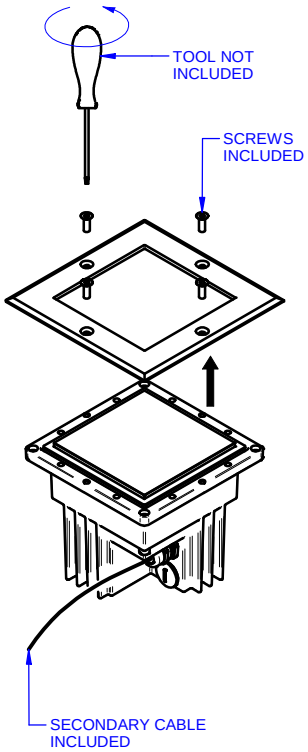

UNSCREW THE SCREWS.
REMOVE THE FLANGE AND
THE GLASS.

B2

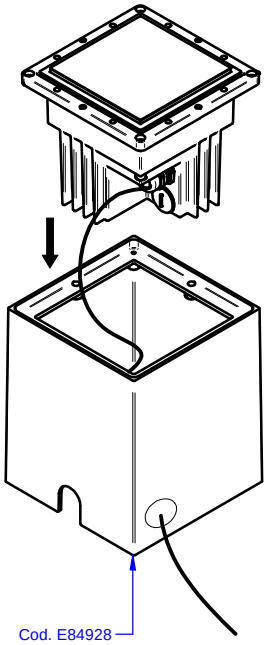

INSERT THE FASIM INTO
THE OUTERCASING.

B3

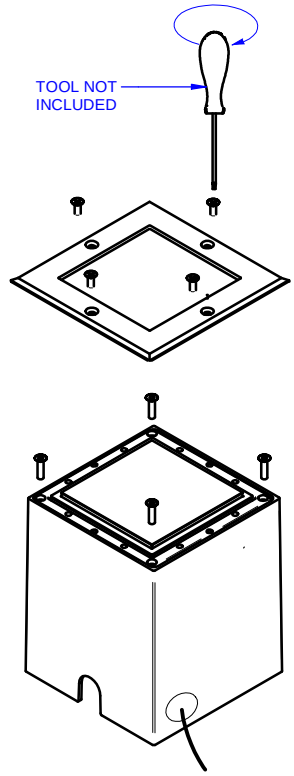

INSERT THE GLASS AND
THE FLANGE.
TIGHTEN THE SCREWS.

TILTING / ADJUSTABLE

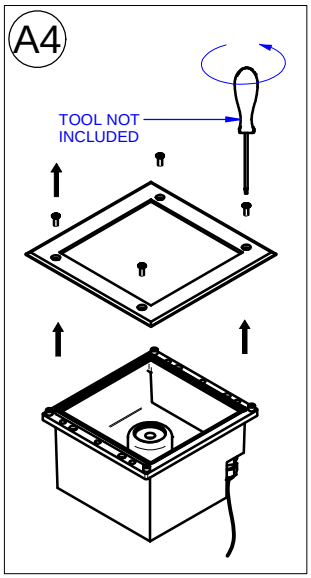

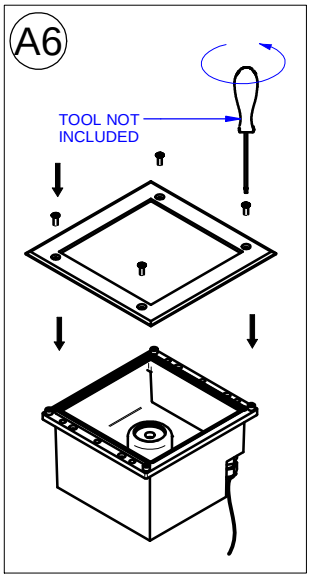

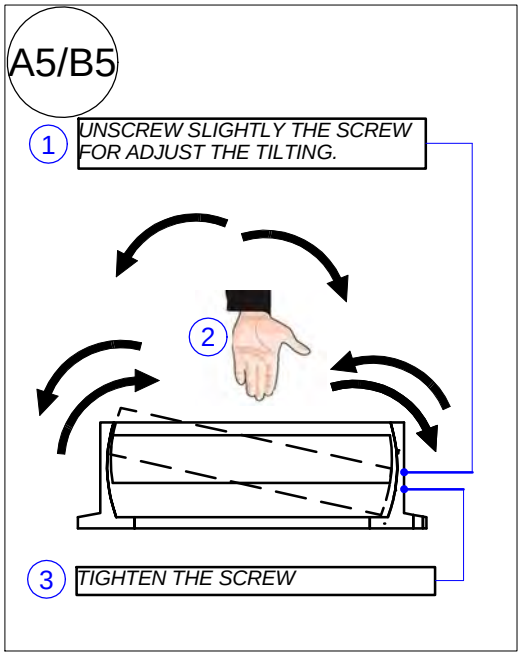

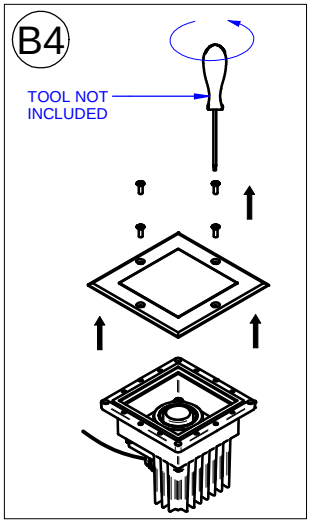

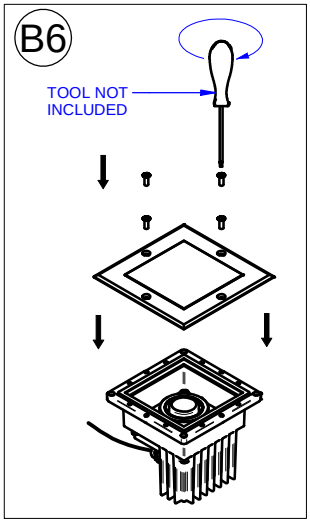

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED

MOUNTING INSTRUCTIONS

READ ALL OF THESE INSTRUCTIONS BEFORE INSTALLING FIXTURES

· Keep all of the instructions for future reference
· Turn off power before installing fixture
· Installation is to be performed by a qualified electrician only
· All installations must conform to the National Electrical Code as well as all local jurisdictional codes and regulations
· Any modification of the luminaire will void any and all written or implied warranties
· The manufacture accepts no responsibility for damage to persons or property airing through improper use or installation

INSTALLATION SEQUENCE

- Mount remote driver in accessible well ventilated space
- Ensure power is off before connecting driver to line voltage
- Fix the outercasing on the ground, the surface must be perfectly flat
- Connect secondary wiring to fixture wiring
- Unscrew the screws and remove the flange and the glass from the Fasim [A1-B1]
- Insert the Fasim into the outercasig and fix it with the screws [A2-B2]
- Close the Fasim with the glass, the flange and the screws [A3-B3]
- WARNING - Be sure secondary wiring is connected to driver BEFORE energizing to avoid LED failure
- Energize

SEQUENCE FOR ADJUST TILTING

- Ensure power is off before opening the Fasim
- Unscrew the screws and remove the flange and the glass from the Fasim [A4-B4]
- Unscrew slightly the screw, adjust the tilting and tighten the screw [A5-B5]
- Close the Fasim with the glass, the flange and the screws [A6-B6]
- Energize

Colours Secondary Cable	Pole
Wire black number 1	+
Wire black number 2	-
Wire green	Ground