

ProTools Linear

WG-60LDL-WM-RML/ROL/RLW/RLB/REO

WG-60LDL-MM-RML/ROL/RLW/RLB/REO

Wall / Mullion Mount Installation Instructions



Luminaires must be installed by a qualified electrician (check with local and national codes for proper installation).



To prevent electrical shock, disconnect electrical supply before installation or servicing. Never connect a live fixture!!!


Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Individual / Starter Housing

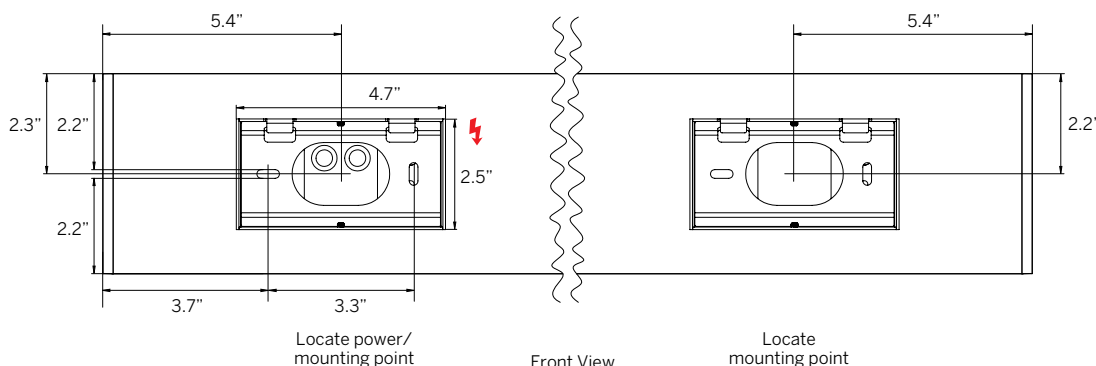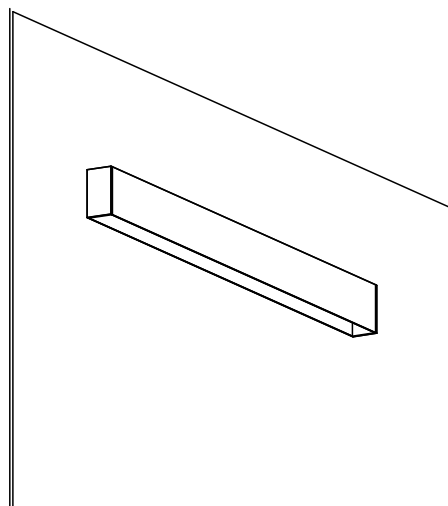


Step 1 Mark reference points on wall for drilling holes to mount clips.

Feed Options

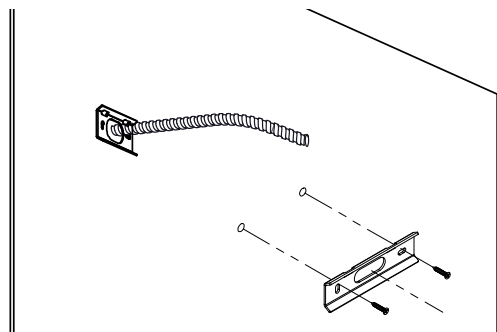


Direct Conduit Feed Direct 3/8" flexible conduit supply cable through Center Slot of Clips before attaching to wall.

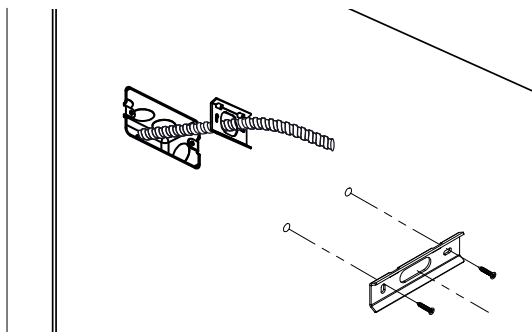

Horizontal Switch Box Feed Mount the Mounting Clips directly to a Single Gang j-box.

Attach Housing to Mounting Clip with even pressure ensuring the Housing is held securely. Tighten Set Screw from top and bottom to secure Housing.

Note: Housing can also be mounted directly to the wall without the Mounting Clip by drilling mounting holes and screwing into adequately reinforced wall.

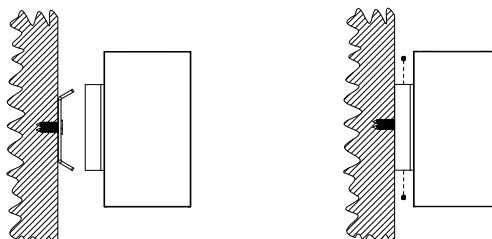


ProTools Linear

WG-60LDL-WM-RML/ROL/RLW/RLB/REO


WG-60LDL-MM-RML/ROL/RLW/RLB/REO

Wall / Mullion Mount Installation Instructions


Continuous Run Housing (see page 1 for starter)

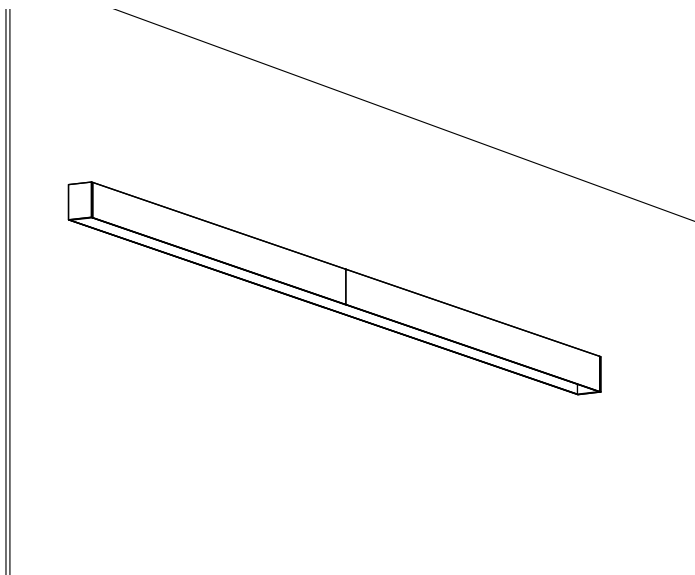


Step 2 For continuous runs install the Joiners on to one Housing with Set Screws.

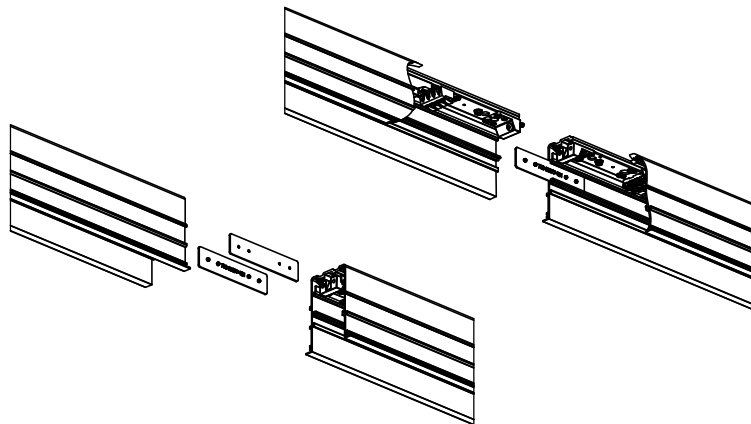


Step 3 Slide the joining Housing on to the Joiners and insert the Set Screws. Do not tighten the Set Screws.

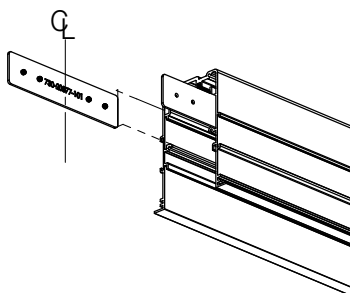

Step 4 Insert the Cross Joiner Screws and tighten ensuring there is no gap. Then tighten the Joiner Set Screws.

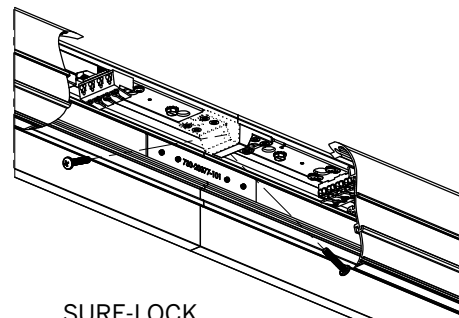

Step 5 Attach the End Caps and tighten Set Screws ensuring there is no gap.

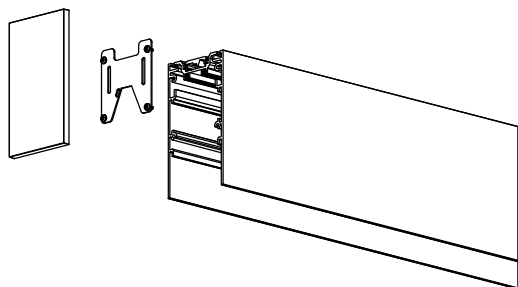

ProTools Linear



WG-60LDL-WM-RML/ROL/RLW/RLB/REO

WG-60LDL-MM-RML/ROL/RLW/RLB/REO



Wall / Mullion Mount Installation Instructions

Connect Wiring (with power off)

Step 6 Connect wiring as appropriate.

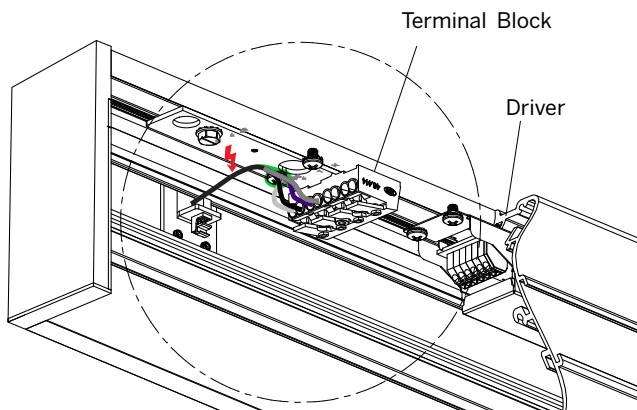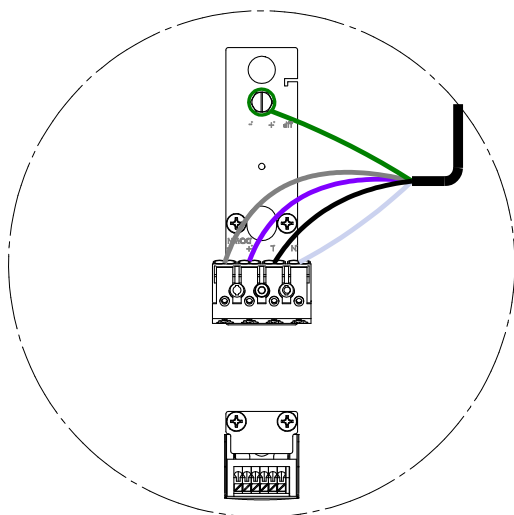

Step 7 For continuous run connect wires to Terminals as shown.

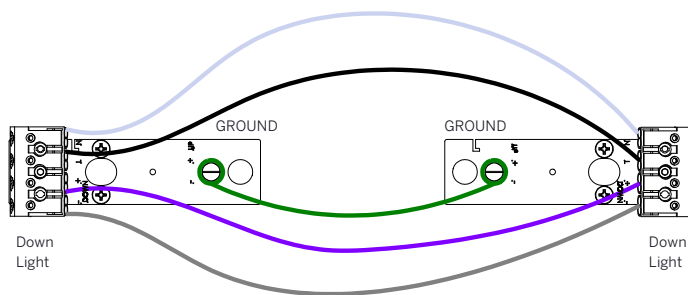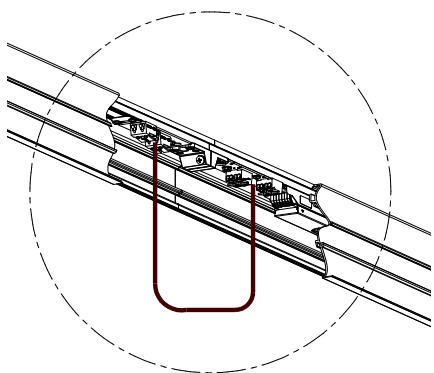

ProTools Linear


WG-60LDL-WM-RML/ROL/RLW/RLB/REO

WG-60LDL-MM-RML/ROL/RLW/RLB/REO




Wall / Mullion Mount Installation Instructions

Install LED Tray


Step 8 Connect low voltage wires from the Gear Tray to the Driver Secondary.

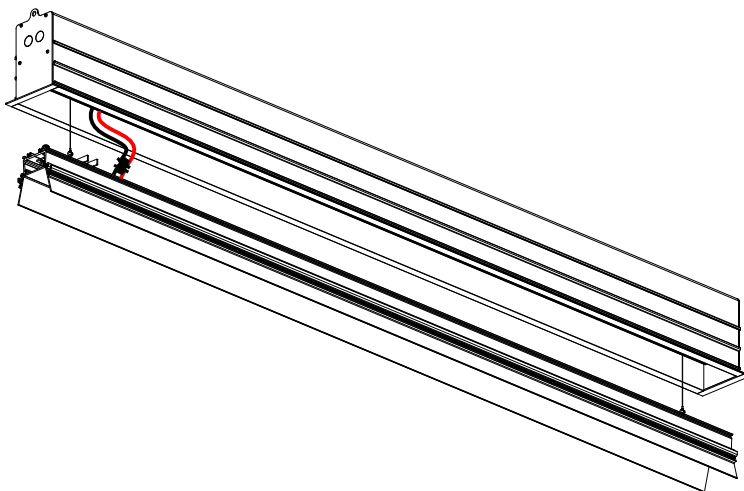


Step 9 Push Gear Tray straight and level into the Housing until it clicks into place. Slide the Gear Tray to adjust as needed.

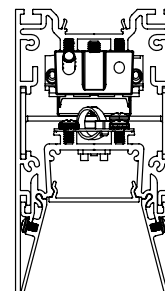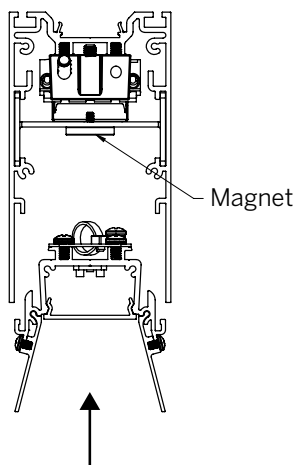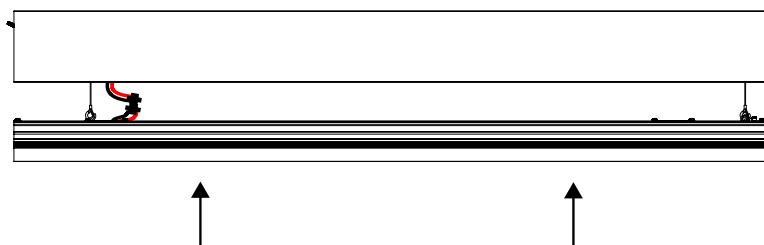

Step 1 Slide provided
Gear Tray Removal Tool
between Gear Trays.

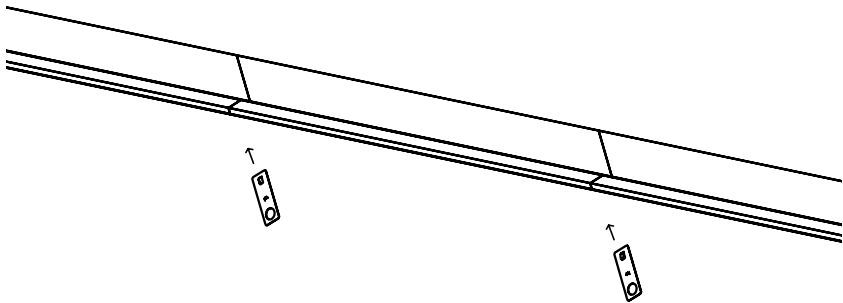

Step 2 Making sure the tab passes
through the opening.

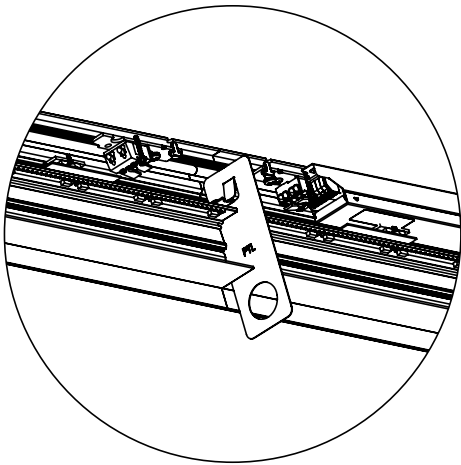

Step 3 Pull both Tools straight
down with thumbs against lens.

