
### **3" ProTools Downlight**


Square Recessed

# inter•lux

# Multiple luminaire configurations (MLC)

Effortlessly create multiple groups of luminaires in perfect formation without the need for custom housings. It is simple, easy and fast to create any combination required (RPT Recessed Plaster Trim only).\*

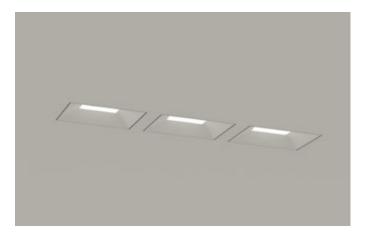

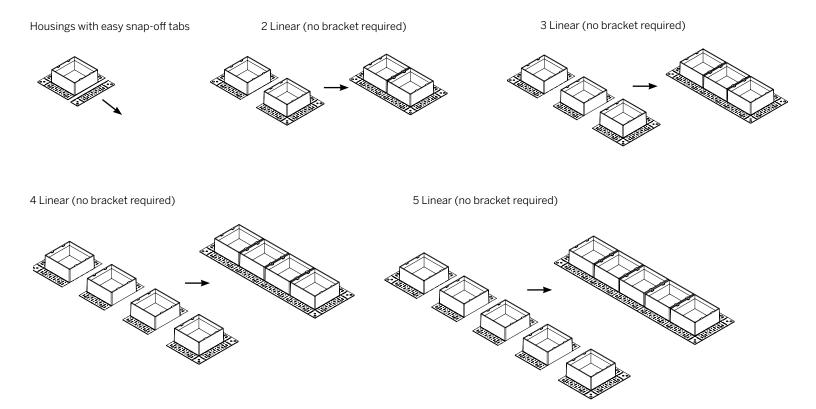

\*Endless linear configurations possible without bracket. Contact factory for additional square and rectangle configurations.




#### 3" ProTools Downlight


Square Recessed


## inter•lux

#### Wood Ceiling (WC)

\*¾" thickness standard, custom thickness from ¼" to 1 ½" available upon request. Black finish standard, custom finishes available upon request.

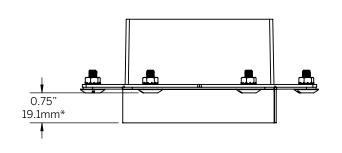


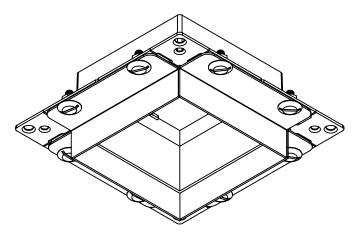

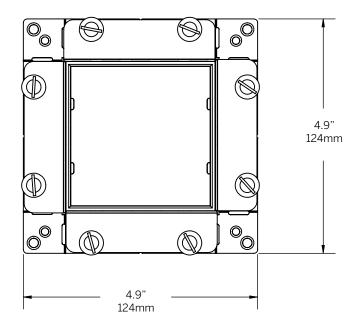

Square Recessed

### inter-lux

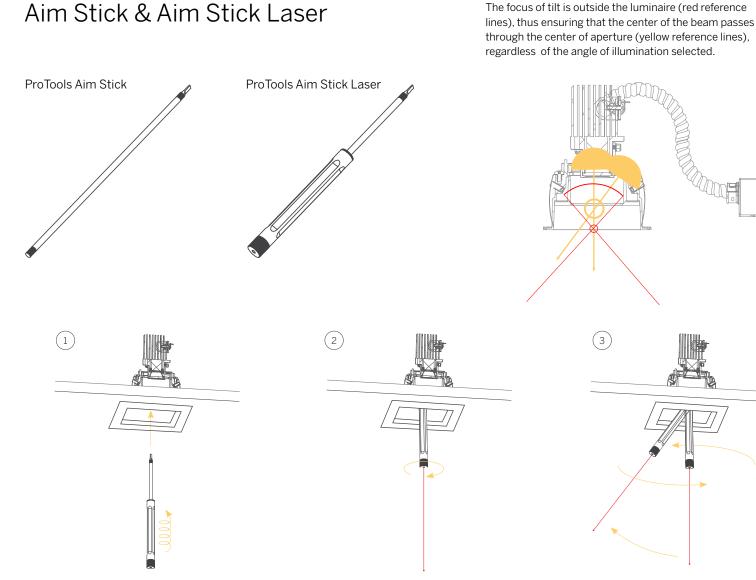

Locate the designated hole for the tool. Insert the ProTools Aim Stick into the housing and screw in a few short twists.

View from under the ProTools Adjustable.

The designated hole for the Aim Stick is highlighted in yellow.



Activate the laser by rotating the black dial on the bottom of the Aim Stick clockwise. Use the tool to rotate the direction of the beam to the desired point. ProTools Adjustable can rotate 365° and has a tilt of 45°.

Once the required adjustment has been made, repeat steps 3-6 in reverse.