2.4" ProTools

WG-60RPTDLID-SC

J-Box

(by others)

Hex Nut

Cross Bar-

Cross Bar

Screw (2)

Bar Nut

Canopy

Strain

Relief

Screw

Set

Suspension

Fixture

Body

whitegoods

Cable

Installation Instructions

Downlight

Round Cylinder Tall Suspended Cable

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Integral Driver

Step 1

Open the Box

Unpack luminaire unit. Remote drivers and housings are supplied by Inter-lux.

Step 2

Ceiling Preparation

- a Mark location, cut opening, and mount J-Box. Pull power (and control) cable(s) inside. Attach Cross Bar with supplied screws.
- Screw Bar Nut to bottom of Cross Bar. Secure with Hex Nut above Bar.

Step 3

Electrical Connection

a From fixture, feed cable through Strain Relief and Canopy into J-Box.

NOTE: Hex Side of Strain Relief to contact canopy, as shown.

b Inside J-Box, connect power (and control) wire(s) using suitable connectors.

Step 4


Secure Luminaire

Slide Canopy and Strain Relief up the suspension cable to the ceiling. Screw Strain Relief to Bar Nut. Lock in place with Set Screw. Energize!



Included in Box

- (1) Fixture Body with connected cable
- (1) Cross Bar
- (2) Cross Bar Screws
- (1) Bar Nut
- (1) Hex Nut
- (1) Canopy
- (1) Strain Relief with Set Screw

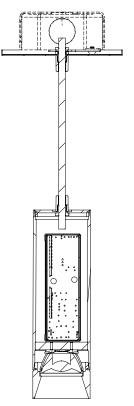

Cross-Section of Fixture

