

2.4" ProTools

WG-60RPTDLID-SR

Installation Instructions

Downlight

Round Cylinder Tall
Suspended Rigid Stem

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document


Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

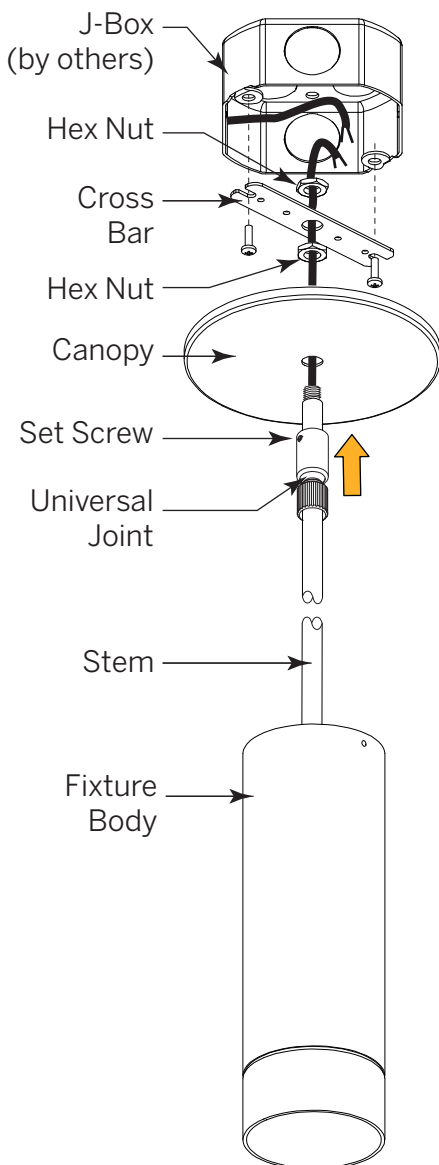

Step 1 Open the Box

Unpack luminaire unit. Remote drivers and housings are supplied by Inter-lux.

Step 2 Ceiling Preparation

Mark location, cut opening, and mount J-Box. Pull power (and control) cable(s) inside. Attach Cross Bar with supplied screws.

Step 3 Mounting

- From Fixture Body, feed cable through stem. If stem is supplied in multiple pieces, feed cable through first section and **then** through second section. Now join first to second. Repeat if needed. Screw Stem assembly to Fixture Body.
- Slide Strain Relief onto top of stem. Follow with Canopy. Screw on Hex Nut on top of Canopy.
- Screw top of Stem to Cross Bar, followed by Hex Nut to secure.

Step 4 Connect Electrical & Secure

- Inside J-Box, connect power (and control) wire(s) using suitable connectors.
- Slide Canopy and Universal Joint up the Stem to ceiling. Lock in place with Set Screw. Energize!

Need
Help?

Integral Driver

Included in Box

- (1) Fixture Body with connected cable
- (1) Cross Bar
- (2) Cross Bar Screws
- (2) Hex Nuts
- (1-3) Stem(s) as specified
- (1) Canopy
- (1) Universal Joint for Sloped Ceiling

