#### 4" ProTools

WG-100SPTDL-SC

Hex Nut

Cross Bar

Bar Nut

Cross Bar

Screw (2)

Canopy

Strain

Relief

Set

Screw

Suspension

Fixture

Body

whitegoods

Cable

# Installation Instructions

## Downlight

Square Dark Cylinder Suspended Cable

**IMPORTANT:** Fixture(s) must be wired in series! Refer to driver wiring document

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing

Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.



Unpack luminaire unit. Remote drivers and housings are supplied by Inter-lux.

#### Step 2

### Ceiling Preparation

- Mark location, cut opening, and mount J-Box. Pull power (and control) cable(s) inside. Attach Cross Bar with supplied screws.
- Screw Bar Nut to bottom of Cross Bar. Secure with Hex Nut above Bar.

### Step 3

## **Electrical Connection**

a From fixture, feed cable through Strain Relief and Canopy into J-Box.

**NOTE:** Hex Side of Strain Relief to contact canopy, as shown.

Connect power (and control) wire(s) using suitable connectors.


#### Step 4 Secure Luminaire

Slide Canopy and Strain Relief up the suspension cable to the ceiling. Screw Strain Relief to Bar Nut. Lock in place with Set Screw. Energize!



#### Included in Box

- (1) Fixture Body with Integral Driver (or none, if remote driver specified) with connected cable.
- (1) Cross Bar
- (2) Cross Bar Screws
- (1) Bar Nut
- (1) Bar Hex Nut
- (1) Canopy
- (1) Strain Relief with Set Screw

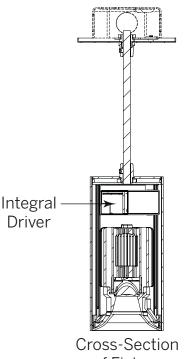

of Fixture



