#### 4" ProTools

WG-100SPTDL-SR

### Installation Instructions

### Downlight

Square Dark Cylinder Suspended Rigid Stem

**IMPORTANT:** Fixture(s) must be wired in series! Refer to driver wiring document


Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

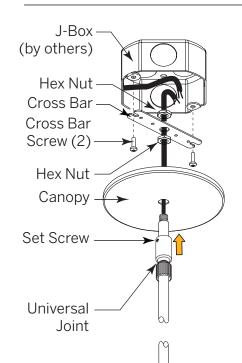

## Step 1 **Confirm Power Supply is Off!**

Unpack luminaire unit. Remote drivers and housings are supplied by Inter-lux.

# Step 2 **Ceiling Preparation**

Mark location, cut opening, and mount J-Box. Pull power (and control) cable(s) inside. Attach Cross Bar with supplied screws.

## Step 3 **Mounting**

- a From Fixture Body, feed cable through stem. If stem supplied in multiple pieces, feed cable through first section and *then* through second section. Now join first to second.

  Repeat if needed.
- Screw Stem assembly to Fixture Body. Slide Strain Relief onto top of Stem. Follow with Canopy. Screw Hex Nut on top of Canopy.
- **c** Screw top of Stem to Cross Bar, followed by Hex Nut to secure.

# Step 4 Connect Electricals & Secure


- a Inside J-Box connect power (and control) cable(s) using suitable connectors.
- b Slide Canopy and Universal Joint up the Stem to ceiling. Lock in place with Set Screw.

  Energize!



#### **Included in Box**

- (1) Fixture Body with Integral Driver (or none, if remote driver specified) with connected cable.
- (1) Cross Bar
- (1) Cross Bar Screws
- (2) Hex Nuts
- (1-3) Stem(s) as specified
- (1) Canopy
- (1) Universal Joint for Sloped Ceilings

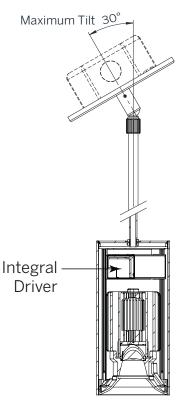





Fixture

Body

Stem -