

60 ProTools Linear

WG-60PTLP-RPT
WG-60PTLPSG1-RPT
WG-60PTLPSG2-RPT
WG-60PTLPSG3-RPT

Perimeter

Recessed Plaster Trim

Installation Instructions

Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect a live fixture!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

Step 1 - Open the Box


Unpack luminaire unit. Unit consists of **two** major parts: Housing and Gear Tray with Lens/Diffuser. If Soft Graze option specified, Soft Graze Bracket is an **additional** major part. Integral Drivers supplied by Inter-lux.

Wall Mounting Clips


- (3) supplied with Fixtures 48" L and under
- (4) supplied with Fixtures 48" L to 96" L



A **Top Feed** option is available, where a hole is drilled into profile. Conduit and Clamp supplied by others.

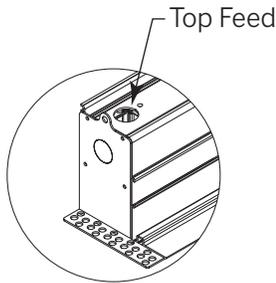

A **Flat End Cap** is available as an option (ordered separately) where there is not enough space to house the standard flanged End Cap.



(2) Knock-out Covers For Chicago Plenum

1", 2", 3" Soft Graze Brackets (Optional)

Fronts of Brackets shown

Hole for Wall Clip

Through Hole to Mounting Hole

Housing

Gear Tray

(1) Gear Tray Removal Tool

(2) Side Joiners (1) Plaster Flange Joiner

End Caps come pre-installed on both **Stand Alone Units** and **Start** and **End Units** of **Multi Unit Runs**

Need Help?

60 ProTools Linear

WG-60PTLP-RPT
WG-60PTLPSG1-RPT
WG-60PTLPSG2-RPT
WG-60PTLPSG3-RPT

Perimeter


Recessed Plaster Trim

2/9

Step 2 - *Installation Prep*


Direct Wall Mount/Non-Soft Graze

- a** Allow an opening of 3" between Wall and edge of Ceiling.

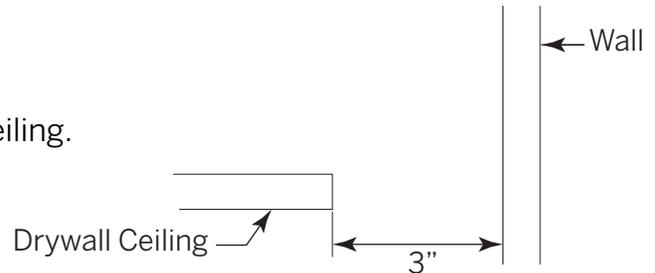

- b** Determine mounting location relative to exposed surface of ceiling, approximately 2-5/8" as shown below. Lay out a level line for all Mounting Clips, whether a single Stand Alone Unit or a Multi Unit Run.

- c** Add Blocking behind Wall and fasten Mounting Clips to Wall with screws and anchors (supplied by others). Clip spacing is (1) per foot on centers.

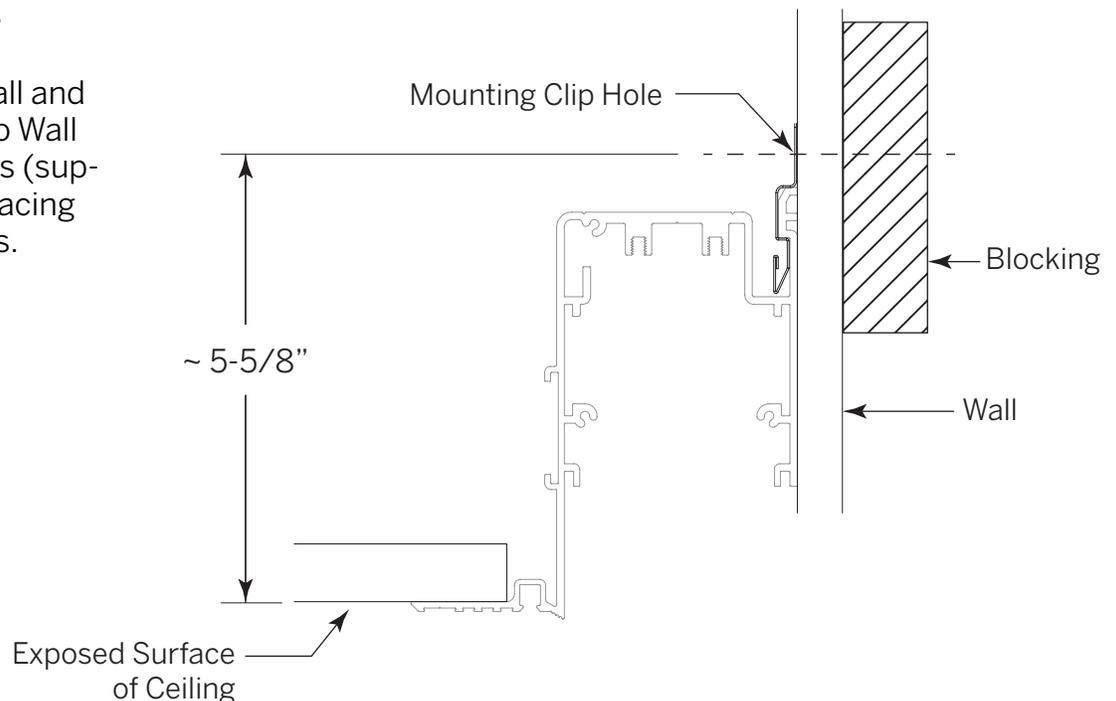

Installation for Chicago Plenum


To install this fixture consistent with Chicago Plenum requirements, Chicago Plenum-rated conduit, junction box(es) and gasket(s) are supplied by others. In addition, fixtures must be installed in an accessible ceiling, particularly Multi Unit Runs (See **Step 5c**).

Need Help?

Step 2 - *Installation Prep* (continued)


Soft Graze Mount

- a** If order specifies Soft Graze illumination, install the Soft Graze Bracket now using screws and anchors (supplied by others) with Blocking. Opening between Wall and Grid Member increases as follows:

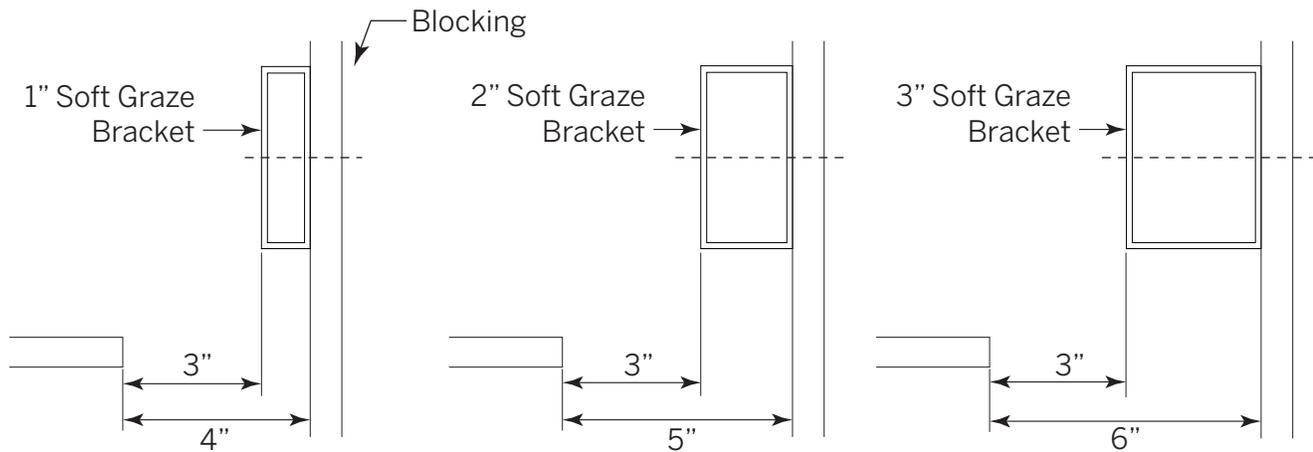

- b** Determine mounting location of Soft Graze Bracket such that center of *Mounting Clip Hole* is approximately 5-5/8" from Exposed Surface of Ceiling, as shown below. Lay out a level line for all Mounting Clips, whether a single Stand Alone Unit or a Multi Unit Run. Use Fixture Unit to confirm that Plaster Trim is in contact with Exposed Surface of Ceiling.

- c** Add Blocking behind Wall and fasten Mounting Clips to Soft Graze Bracket with screws and anchors (supplied by others).

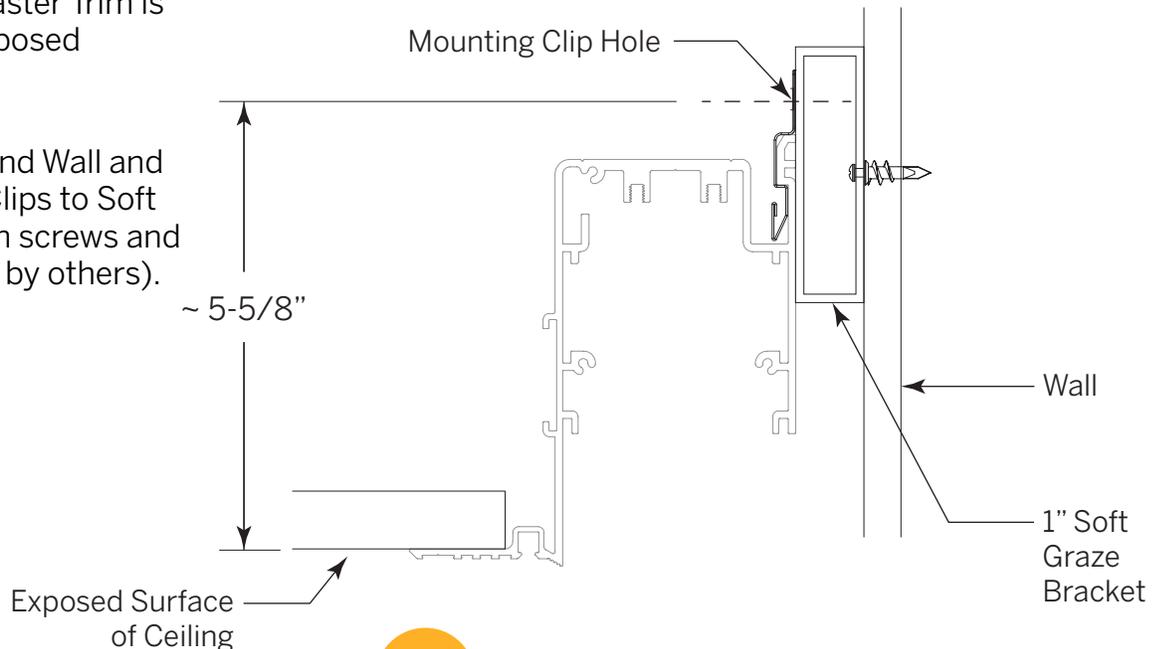

60 ProTools Linear

Perimeter


WG-60PTLP-RPT
WG-60PTLPSG1-RPT
WG-60PTLPSG2-RPT
WG-60PTLPSG3-RPT

4/9

Step 3 - *Install Housing(s)*

Stand Alone Unit or First Unit in Multi Unit Run

Slide Housing up against Wall as shown. Uppermost portion of Housing slides up and under Mounting Clip.

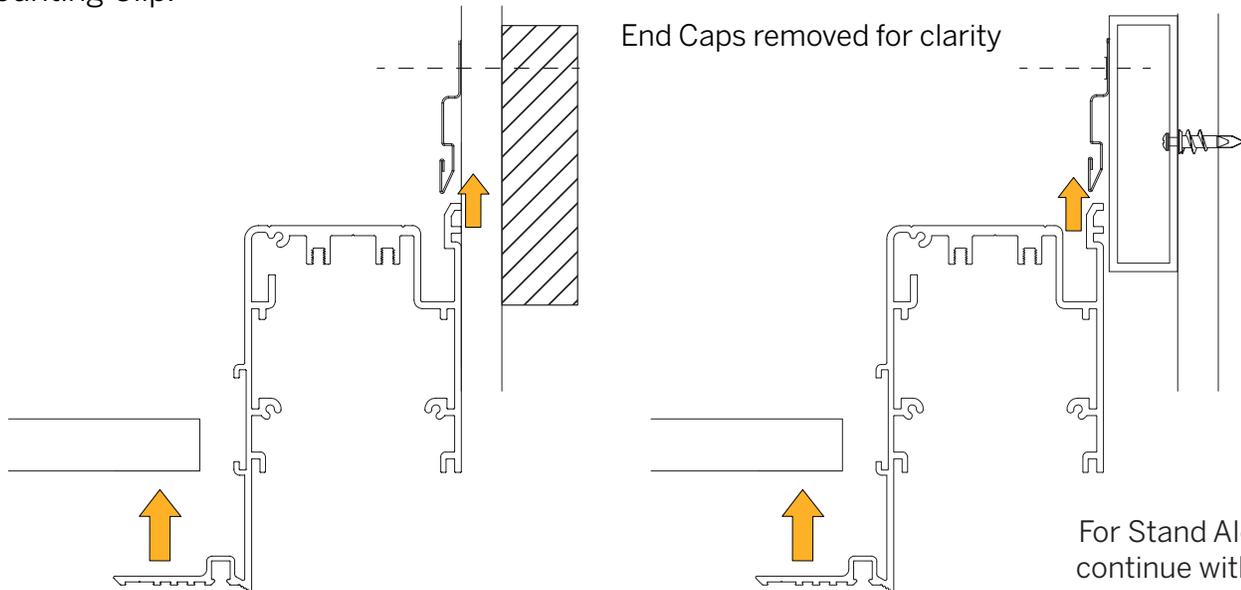

For Multi Unit Run, continue below.

Step 4 - *Install Joiners - Multi Unit Run only*


On first Middle Unit or End Unit,

- a** Slide the (2) Side Joiners completely into each interior channel on each side of Housing.
- b** Slide the (1) Plaster Flange Joiner completely inside the square channel on the Flange.

Do not fasten Joiners to Housing at this time.

Chicago Plenum

Snap in Hole Covers are provided to cover electrical knock-outs not utilized for end-feed connections.

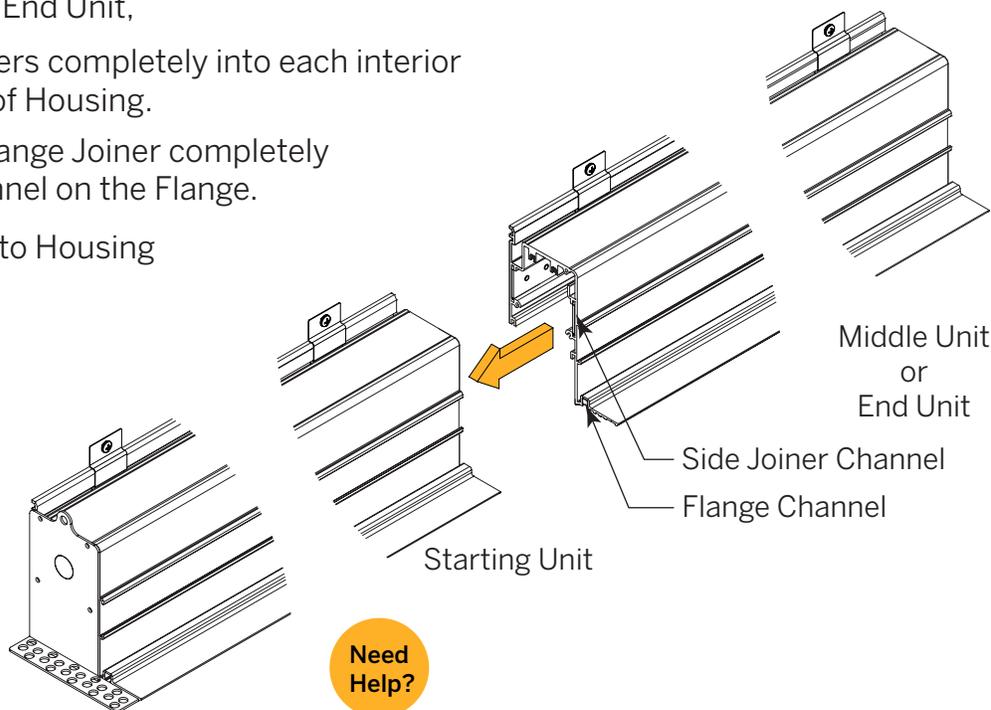


60 ProTools Linear

Perimeter

WG-60PTLP-RPT
WG-60PTLPSG1-RPT
WG-60PTLPSG2-RPT
WG-60PTLPSG3-RPT

5/9

Step 5 - **Joining Units** - Multi Unit Run only

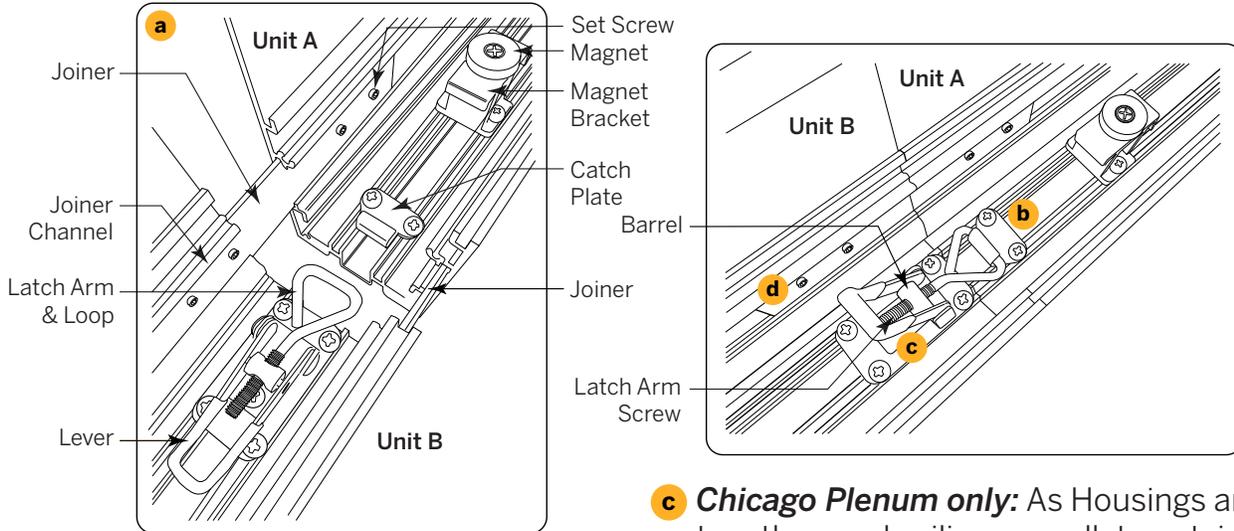


- a** Insert Joiners of Unit A (Middle or End Unit) into Joiner Channels of Unit B (adjacent unit).
- b** Draw units completely together. Hook Latch Arm & Loop over Catch Plate. Adjust length of Latch Arm by rotating Latch Arm Screw through Barrel.


- c** **Chicago Plenum only:** As Housings are drawn together apply silicone caulk to outside joint. Ensure that squeeze-out does not interfere with Joiners sliding into final position.
- d** Press Lever fully down to lock.
- e** Center each Joiner on Housing Joint.
- f** Tighten all Set Screws on both Joiners. **Do not** overtighten. Overtightening risks deforming Housing surface.

Step 6 - **Corners** - Multi Unit Run only

Pattern Inside (PI) and Pattern Outside (PO) Corners are welded at the factory. Follow **Steps 4 & 5** to mount to existing Run. Corners use same Latch Arm and Catch Plate joining system as on straight units. Illustration of light output shows direction only, and is not indicative of color, intensity, or actual spread.

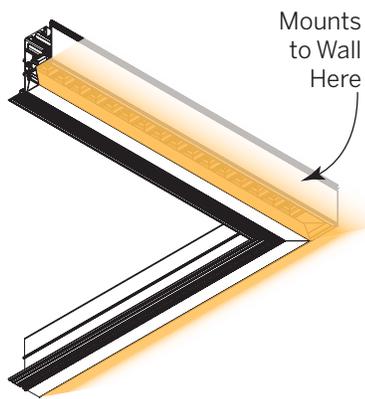

Pattern Inside (PI)

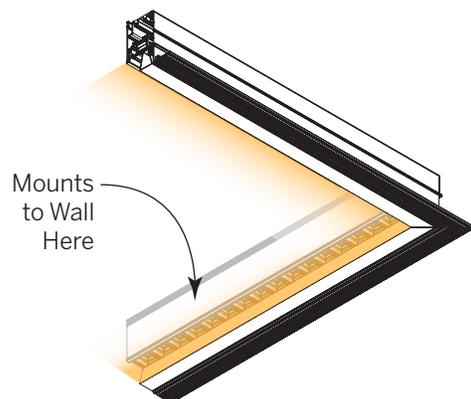

Pattern Outside (PO)




60 ProTools Linear

Perimeter

WG-60PTLP-RPT
WG-60PTLPSG1-RPT
WG-60PTLPSG2-RPT
WG-60PTLPSG3-RPT


Step 7 - **Apply Joint Compound**

- a** Drill holes in V-Groove along length of Screw Channel.
- b** Apply Blocking to top of Ceiling. Fasten profile to Ceiling with appropriate screws (by others).
- c** Apply Joint Compound as shown at right.

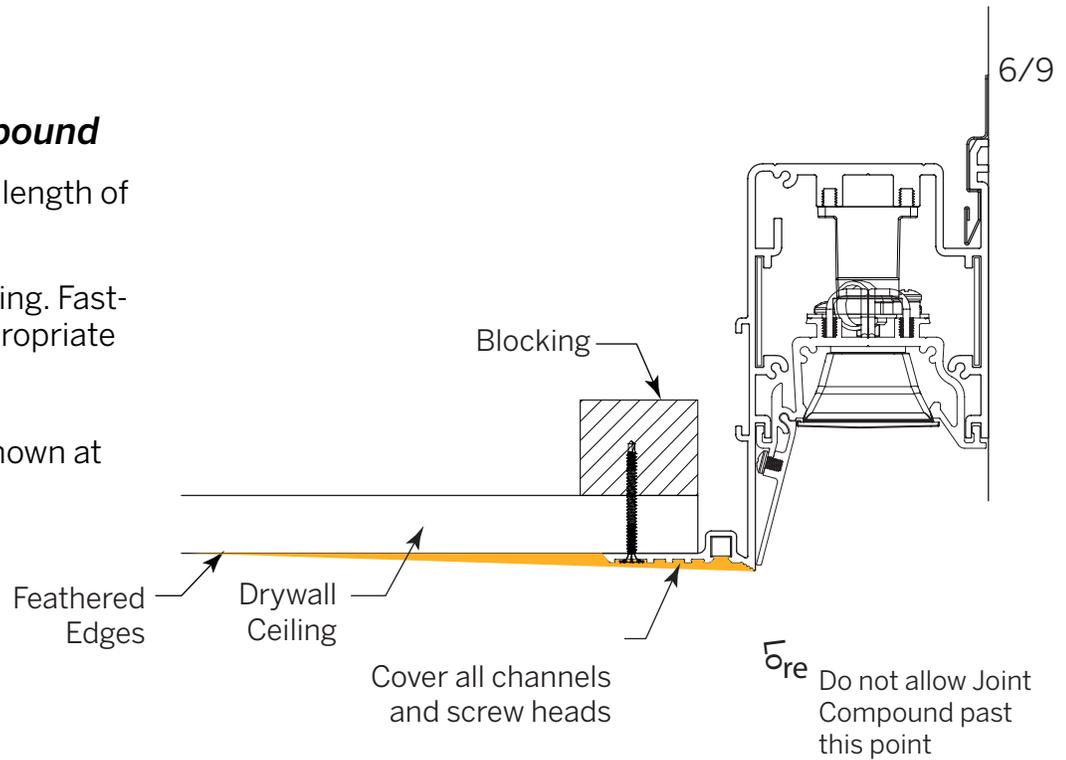

Step 8 - **Hang Gear Tray**

- a** Locate Safety Cables inside Housing.
- b** Clip Safety Cables to Gear Tray Eyes at each end of Housing. See illustration at right.
- c** Clip Power Feed(s) from Gear Tray to those in Housing with attached Quick-Connect terminals.

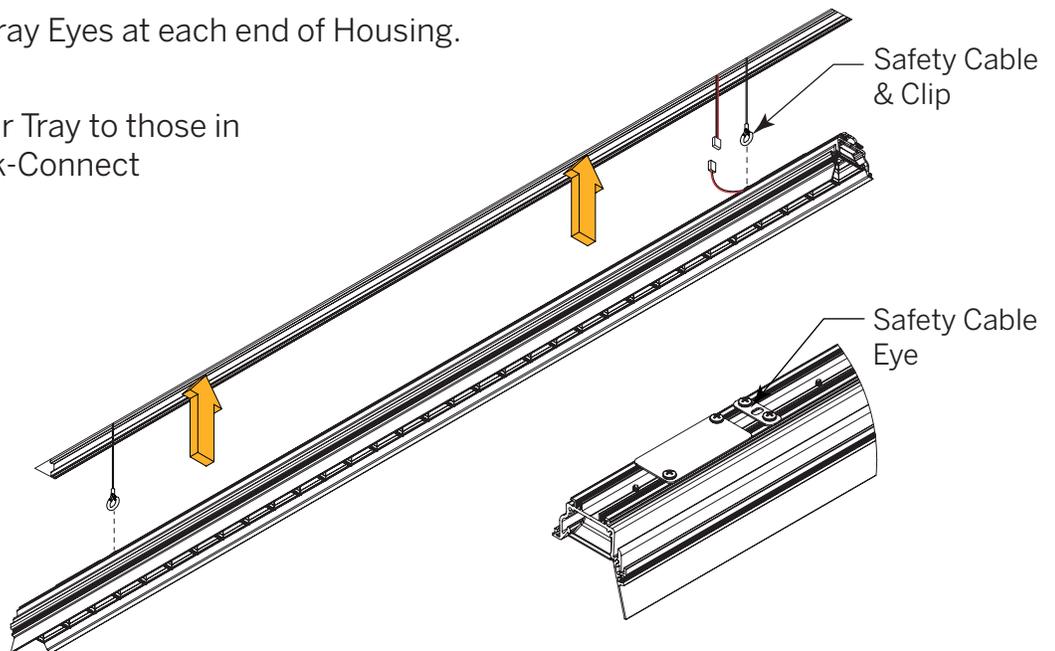

NOTE: The number of Drivers depends on length of Fixture and Power Levels specified. As such, there may be more than one Driver and Luminaire Power Feed. Similarly, controllers will add a second pair of feeds to each Driver.

Need Help?

60 ProTools Linear

WG-60PTLP-RPT
WG-60PTLPSG1-RPT
WG-60PTLPSG2-RPT
WG-60PTLPSG3-RPT

Perimeter


Recessed Plaster Trim

7/9

Step 9 - Wiring


Stand Alone Unit

Five wires extend from Gear Tray and terminate with Wago™ Connectors. Connect these wires to incoming Power Feed.

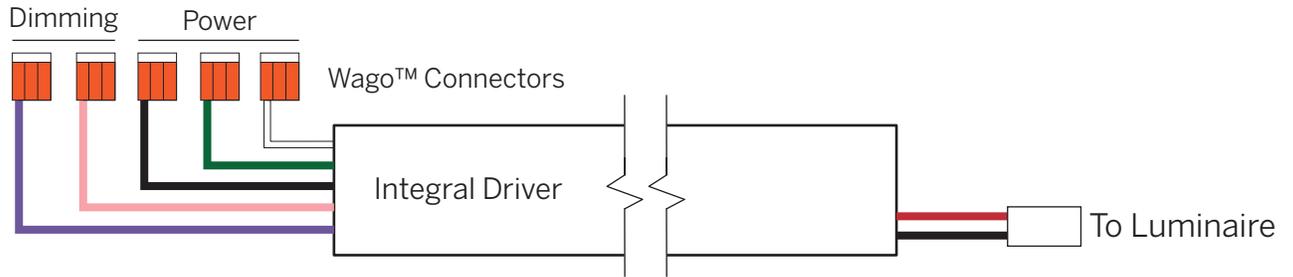


Multi Unit Run - Start Unit

Five wires extend from Gear Tray and terminate with Wago™ Connectors. Connect these wires to the Power Feed. To connect to the next unit in Run, use the pair of Male Wago™ Luminaire Disconnect Connectors.

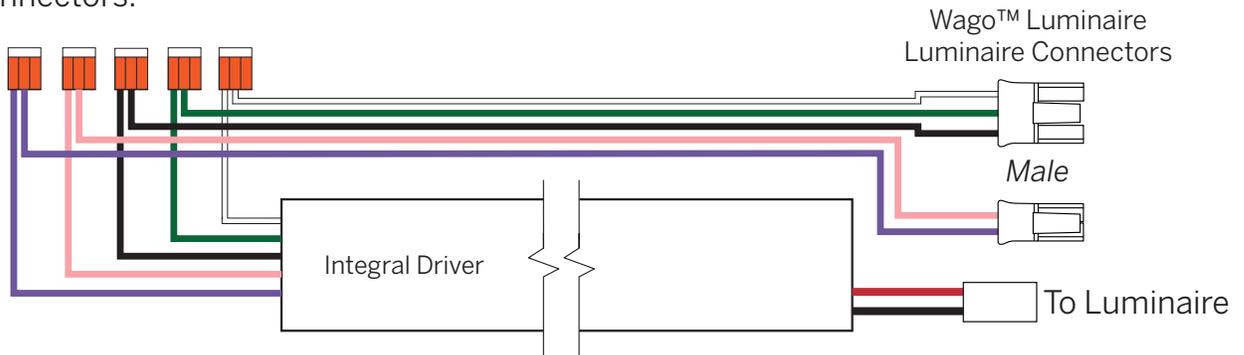

Multi Unit Run - Middle Unit

There are no wires that connect to the Power Feed (except if Middle Unit contains two Drivers). To connect to the previous and the next units in Run, use the pair of Female and Male Wago™ Luminaire Disconnect Connectors on each side of the unit.

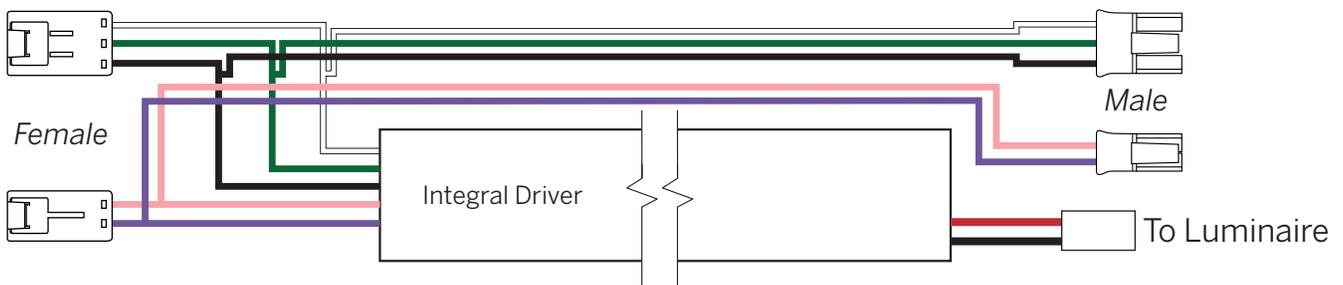

60 ProTools Linear

WG-60PTLP-RPT
WG-60PTLPSG1-RPT
WG-60PTLPSG2-RPT
WG-60PTLPSG3-RPT

Downlight


Recessed Plaster Trim

8/9

Step 9 - **Wiring** (continued)




Multi Unit Run - End Unit

The End Unit terminates with one pair of Female Wago™ Luminaire Disconnect Connectors.

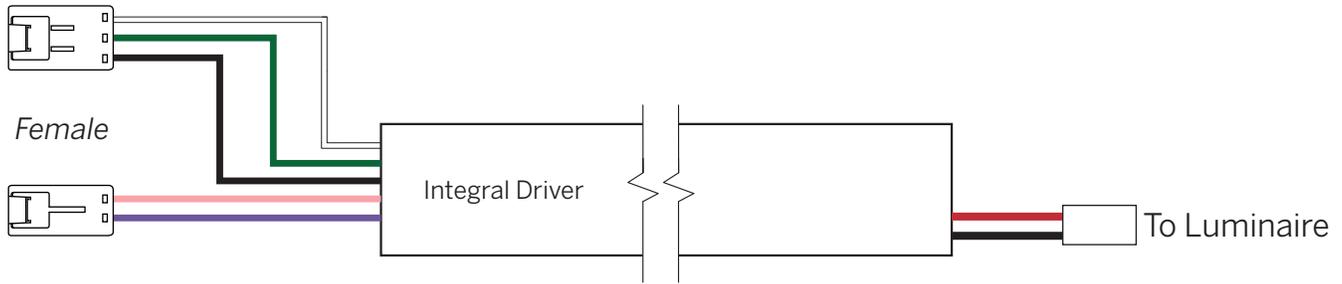

Step 10 - **Placing Gear Tray in Housing**

- a** Attached to Safety Cables, lift and insert Gear Tray into Housing.
- b** Magnet Plates on top of Gear Tray will engage Magnets on Brackets inside of Housing.
- c** Energize!

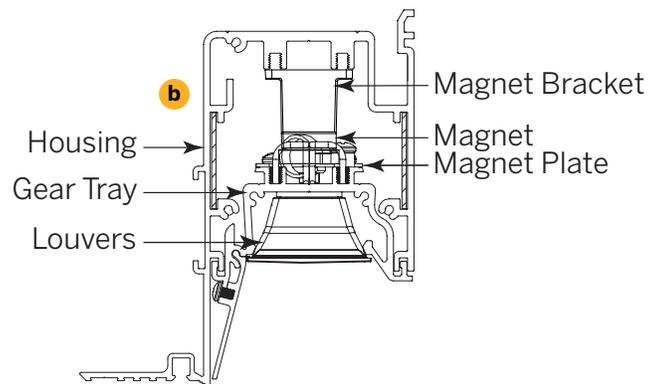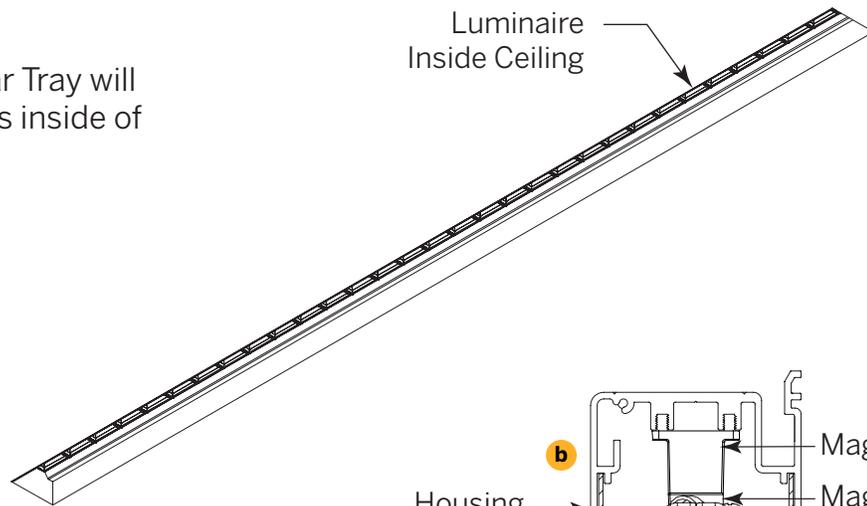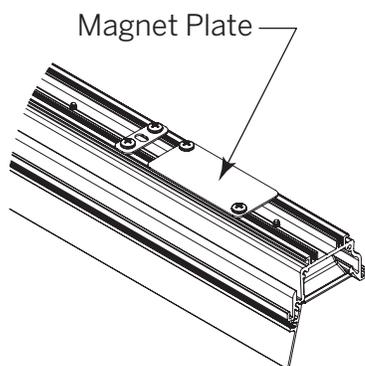

Cross Section of Gear Tray Seated in Housing



60 ProTools Linear

WG-60PTLP-RPT
WG-60PTLPSG1-RPT
WG-60PTLPSG2-RPT
WG-60PTLPSG3-RPT

Perimeter



Recessed Plaster Trim

9/9

Step 11 - Removing Gear Tray

Should there be a need to remove the Gear Tray, a Gear Tray Removal Tool is provided with every order. The following applies to multiple Gear Trays in a single housing and to a series of Gear Trays in a Multi Unit Run. To use:

- a** Carefully insert Removal Tool in between adjacent Gear Trays. Take care not to scratch nearby surfaces.

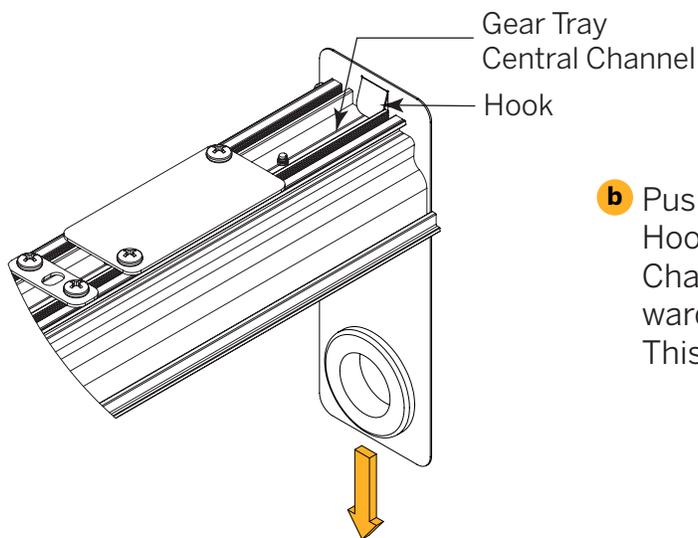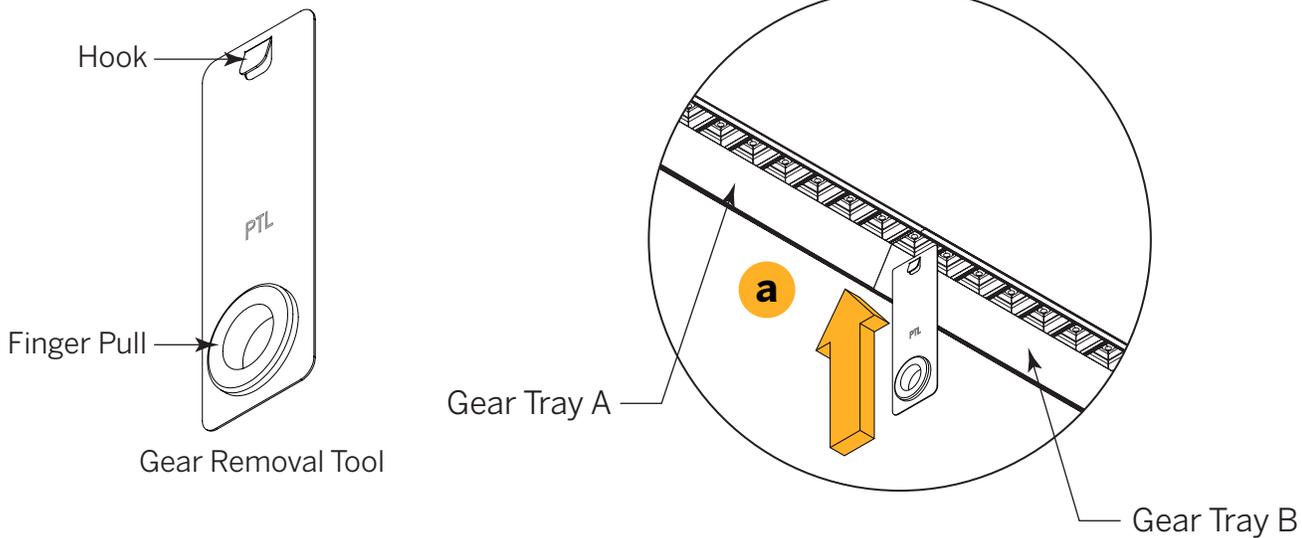

- b** Push Tool up into Housing Cavity. The Hook will catch the top Central Channel of the Gear Tray. Pull downward while holding other hand beneath. This will dislodge Gear Tray from Magnet.

