

3" ProTools

WG-75RPTAWW-RPT
WG-75SPTAWW-RPT

Installation Instructions

Accent Wall Wash

Round and Square
Recessed Plaster Trim

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document


Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.

Never connect a fixture to a live driver!!!


Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

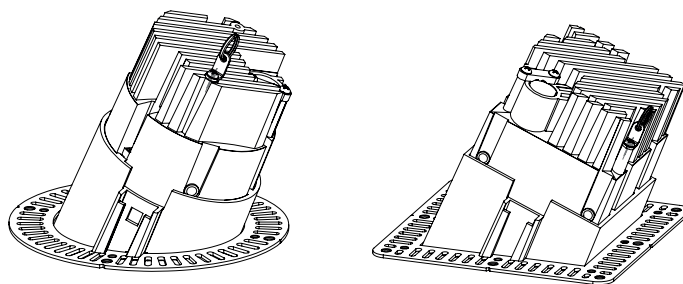

Step 1 - Open the Box


Unpack luminaire unit. Unit ships in **four** major parts: Fixture Insert, Remote Driver Box, Plaster Trim Housing, and Lens/Cover. Remote Drivers and Boxes are supplied by Inter-lux. If Drivers are not supplied, then Plenum-rated cable with bare leads is provided.

1

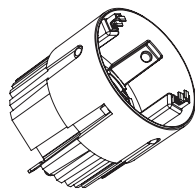


Fixture Insert

2

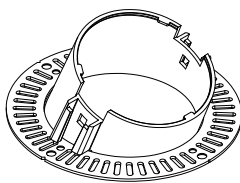


Plaster Trim Housing

3

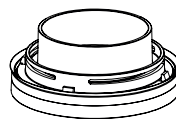

Cover/Lens

4

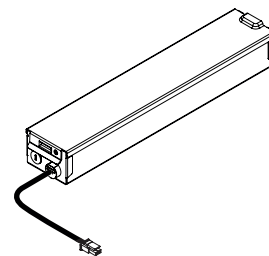

Driver Box

NOTE: Safety Cable not supplied with fixture.

Need Help?

3" ProTools


WG-75RPTAWW-RPT
WG-75SPTAWW-RPT

Accent Wall Wash


Round and Square
Recessed Plaster Trim

Step 2 - *Prep Ceiling*

- a** Cut appropriate size opening in the ceiling as shown below.

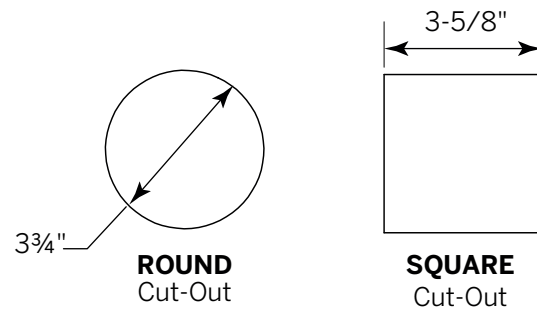


- b** Clear any insulation at least 3" from any part of the Fixture or Driver Enclosure.

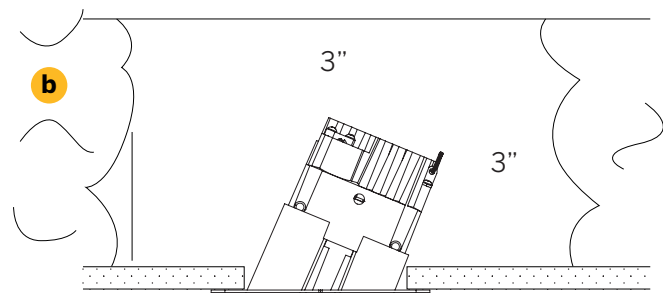

Step 3 - *Orient Housing*

- a** Before screwing Plaster Trim into ceiling, orient Housing such that Wall Wash Cover/Lens opening faces opposite wall surface.
- b** Push Housing up into ceiling hole. Rotate Housing towards Wall such that Plaster Trim is flat on ceiling.

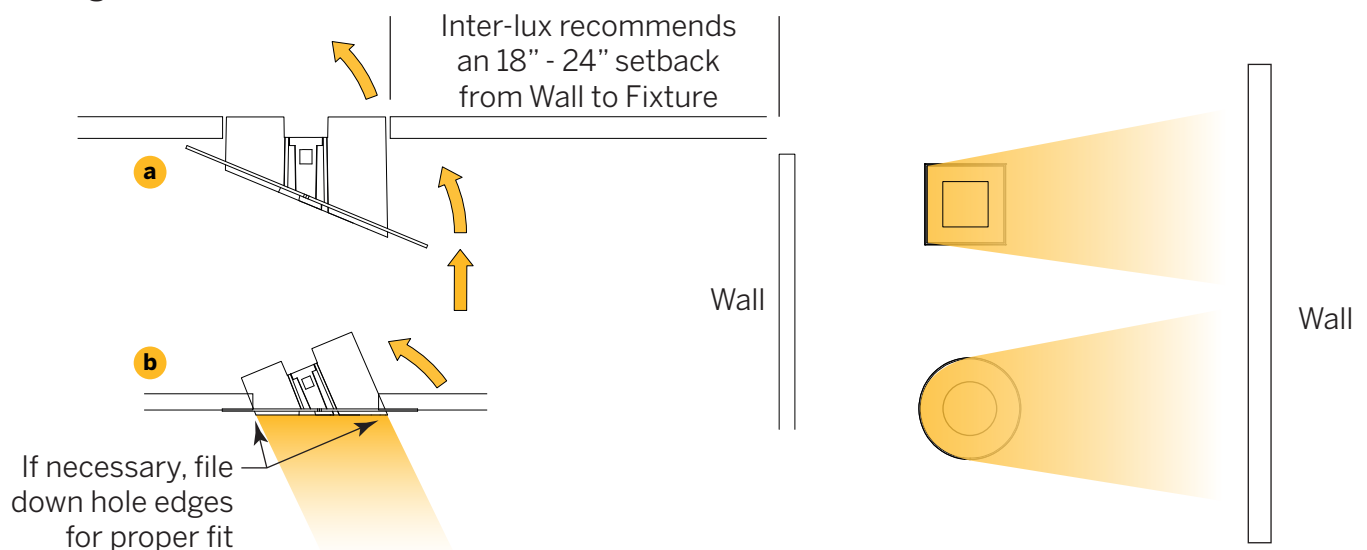

Need
Help?

3" ProTools

WG-75RPTAWW-RPT
WG-75SPTAWW-RPT


Accent Wall Wash

Round and Square
Recessed Plaster Trim

Step 4 - **Mount Housing**

3/6


- a** Screw Housing into ceiling blocking or structure.
- b** Pull incoming Power (and Control) cables out through Housing.

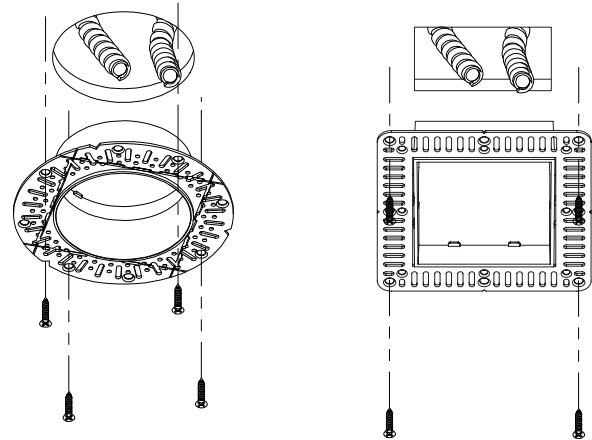

NOTE: Illustrations show Conduit exiting from ceiling. This may not be the case in your installation.

Step 5 - **Apply Joint Compound**

Apply Joint Compound onto Plaster Trim Housing. Joint Compound should be flush with inside edge of Housing. Clean excess while still wet.

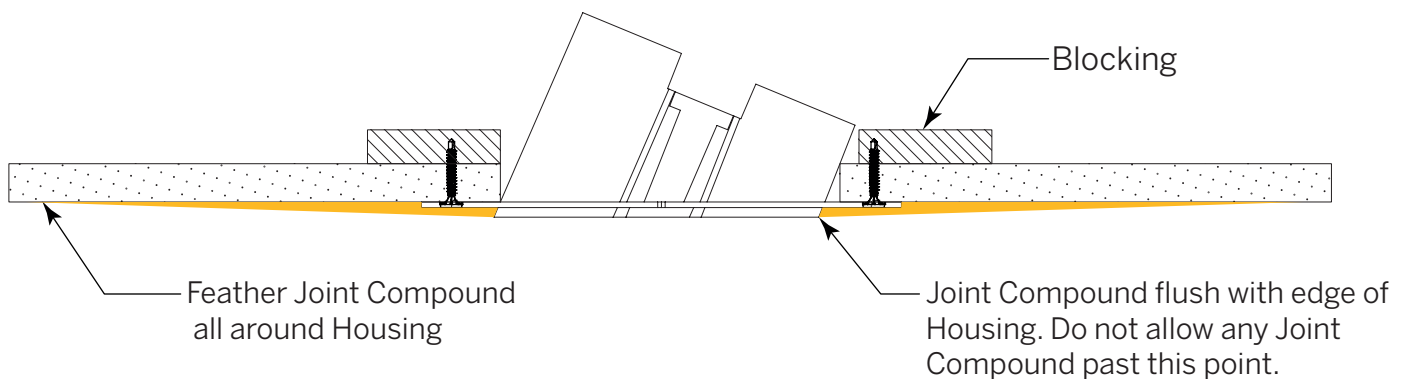

Need
Help?

3" ProTools


WG-75RPTAWW-RPT
WG-75SPTAWW-RPT

Accent Wall Wash

Round and Square
Recessed Plaster Trim


Step 6 - *Wire Driver Box to Incoming Power and to Fixture Insert*

4/6

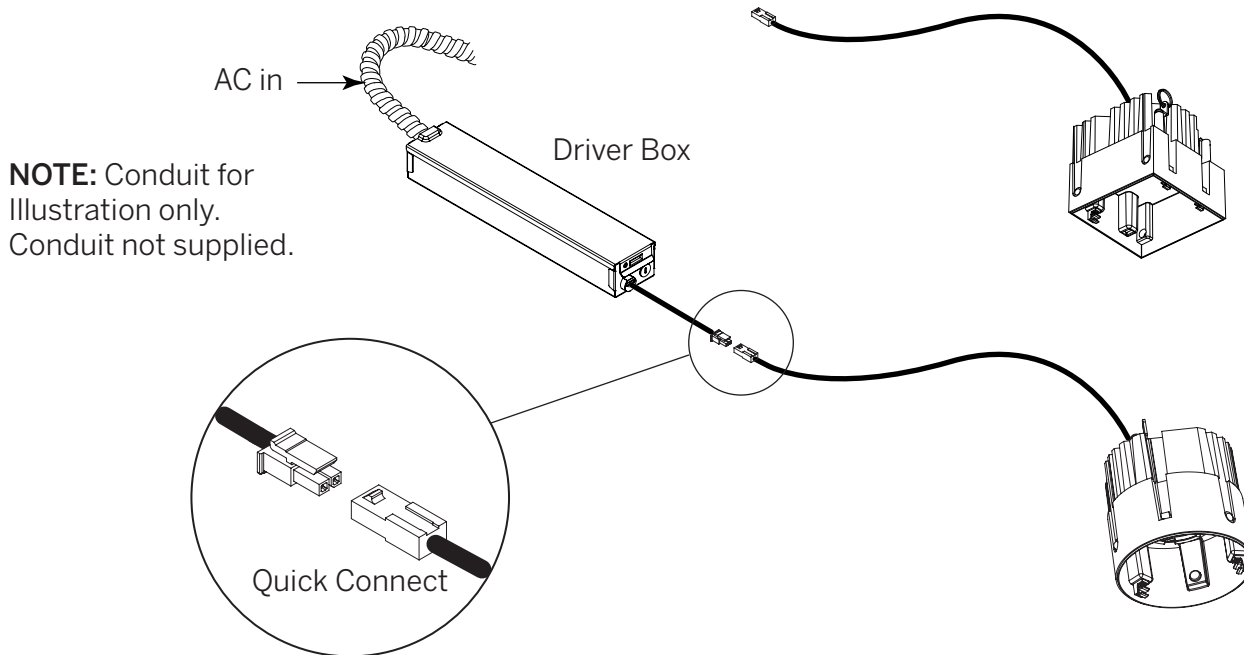

Step 7 - *Place Fixture Insert inside Housing*

Push Fixture Insert into Housing and click into place. Bullet Catches must be fully extended above Top Edge of Housing.

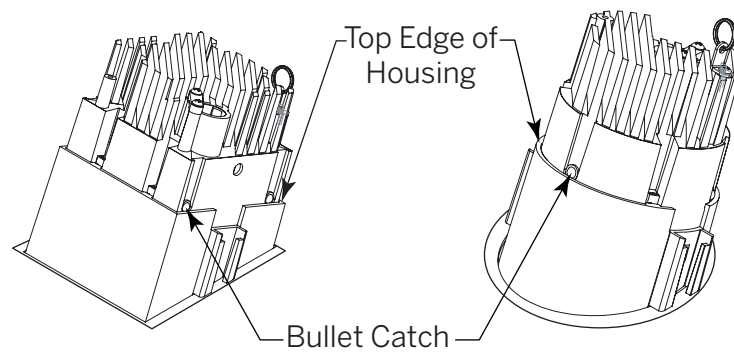

View Inside Ceiling

Need
Help?

3" ProTools

WG-75RPTAWW-RPT
WG-75SPTAWW-RPT


Accent Wall Wash

Round and Square
Recessed Plaster Trim

Step 8 - *Insert Cover/Lens*


5/6

- a** Latches are Push-to-lock/Push-to-release. Check that Latches are **OPEN** (down) to receive Cover/Lens.
- b** Orient Slots in Cover/Lens with Latch locations.

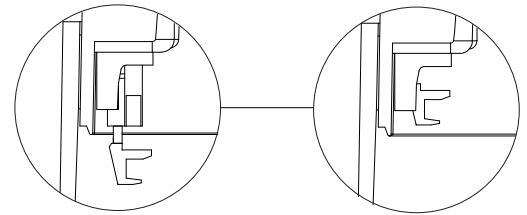

OPEN
Latches Down

CLOSED
Latches Up

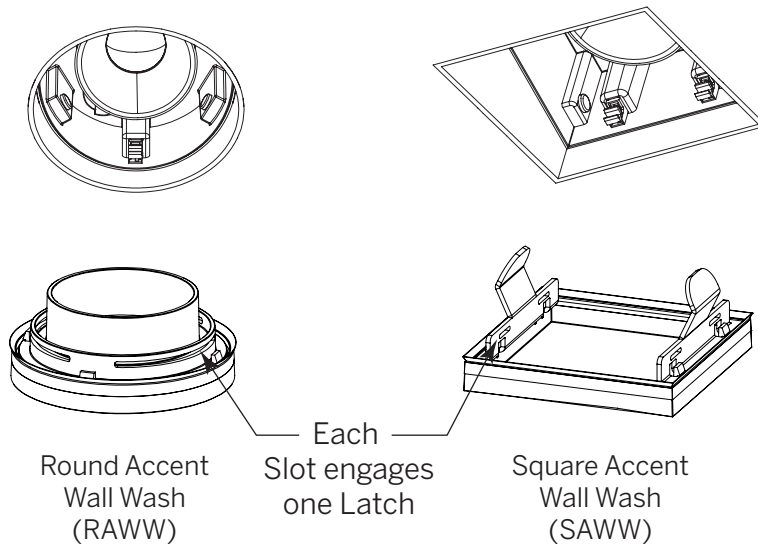


Round Accent
Wall Wash
(RAWW)

Each
Slot engages
one Latch

Square Accent
Wall Wash
(SAWW)

- c** Push up into Fixture Insert until a click is heard. Release, and Cover/Lens will be locked in place.
- d** Energize!

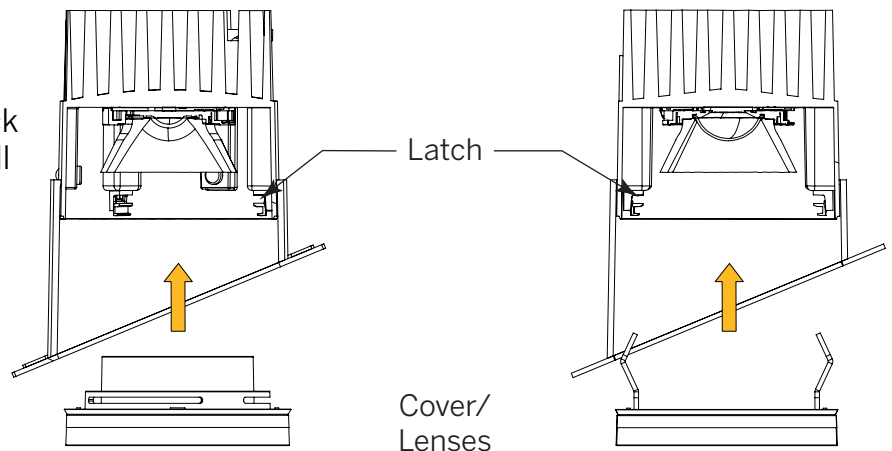

Housing and Fixture Insert shown
upright and out of ceiling for clarity

IMPORTANT: Be careful not to damage
LED or Optic during installation process.

Need
Help?

3" ProTools


WG-75RPTAWW-RPT
WG-75SPTAWW-RPT

Accent Wall Wash


Round and Square
Recessed Plaster Trim

6/6

Correct Seating for Round and Square Accent Wall Wash Cover/Lenses

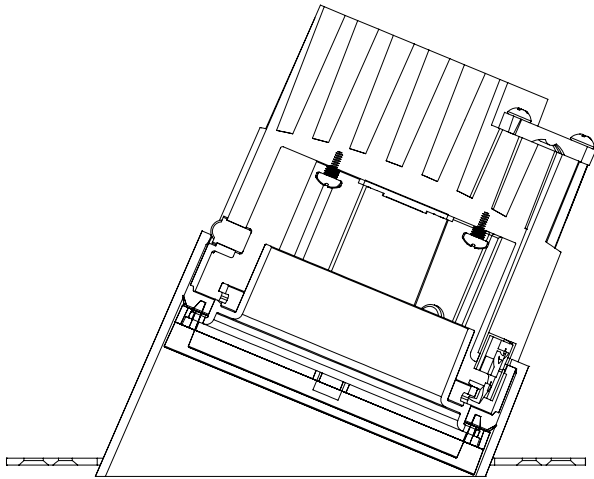

Round Accent
Wall Wash
(RAWW)

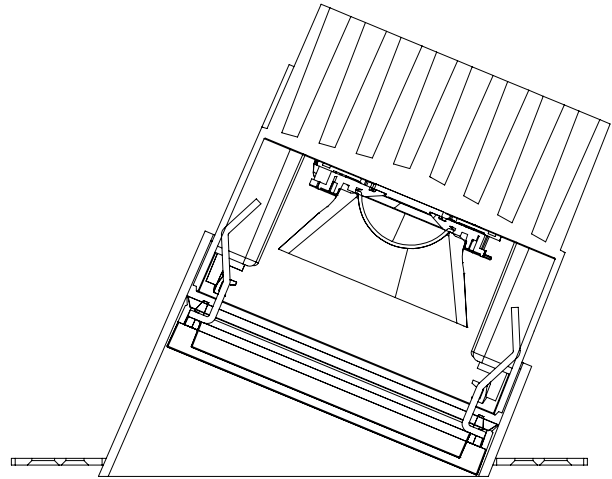

Square Accent
Wall Wash
(SAWW)

Need
Help?