

IMPORTANT: Fixture(s) must be wired in series! Refer to driver wiring document


Luminaires must be installed by a qualified electrician. Check with local and national codes for proper installation.



To prevent electrical shock disconnect electrical supply before installation or servicing.


Never connect a fixture to a live driver!!!

Contractor is responsible for adequately reinforcing walls and/or ceilings to support fixture weight. Provide blocking when necessary.

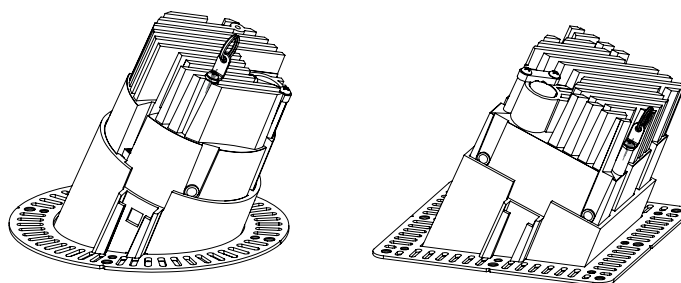

Step 1 - Open the Box


Unpack luminaire unit. Unit ships in **three** major parts: Fixture Insert/Driver Box Assembly, Plaster Trim Housing, and Lens /Cover. Remote Drivers and Housings are supplied by Inter-lux. If Drivers are not supplied, then Plenum-rated cable with bare leads is provided. In this configuration, Integral Conduit and Driver Boxes are not included, but a Strain Relief is added to where the low voltage wires exit.

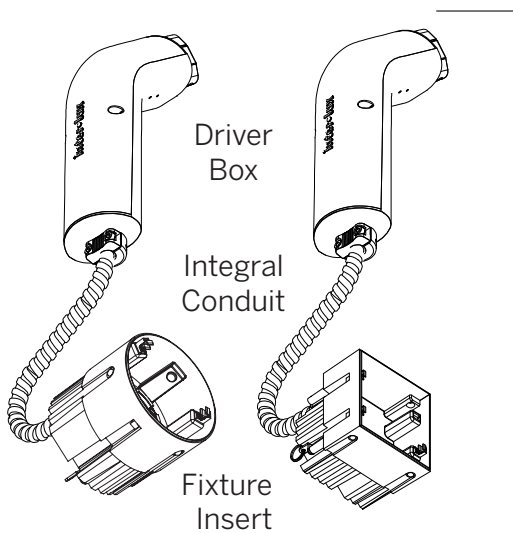

1


Fixture Insert/
Driver Box
Assembly

2


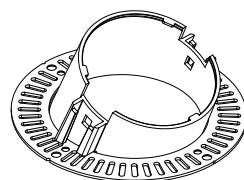


Plaster Trim
Housing

3

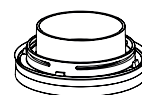

Lens/Cover

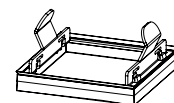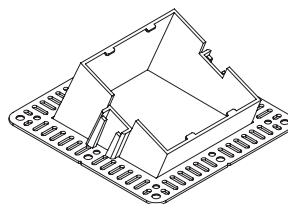

Need
Help?

NOTE: Safety Cable not supplied with fixture.

3" ProTools

WG-75RPTAWW-RPT
WG-75SPTAWW-RPT


Accent Wall Wash

Round and Square
Recessed Plaster Trim


2/7

Step 2 - *Prep Ceiling*

- a** Cut appropriate size opening in the ceiling as shown at right.

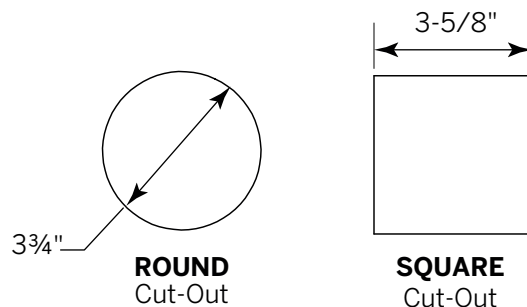


- b** Clear any insulation at least 3" from any part of the Fixture or Driver Enclosure.

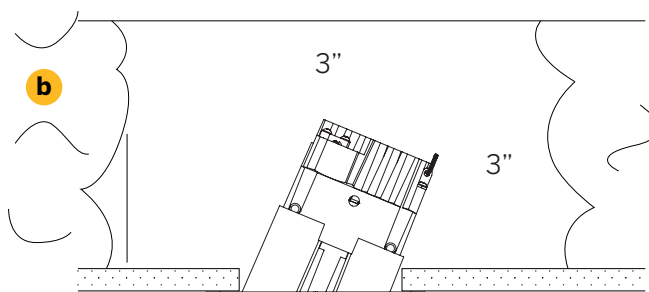

Step 3 - *Orient Housing*

- a** Before screwing Plaster Trim into ceiling, orient Housing such that Wall Wash Lens Cover opening faces opposite wall surface.
- b** Push Housing up into ceiling hole. Rotate Housing towards wall such that Plaster Trim is flat on ceiling.

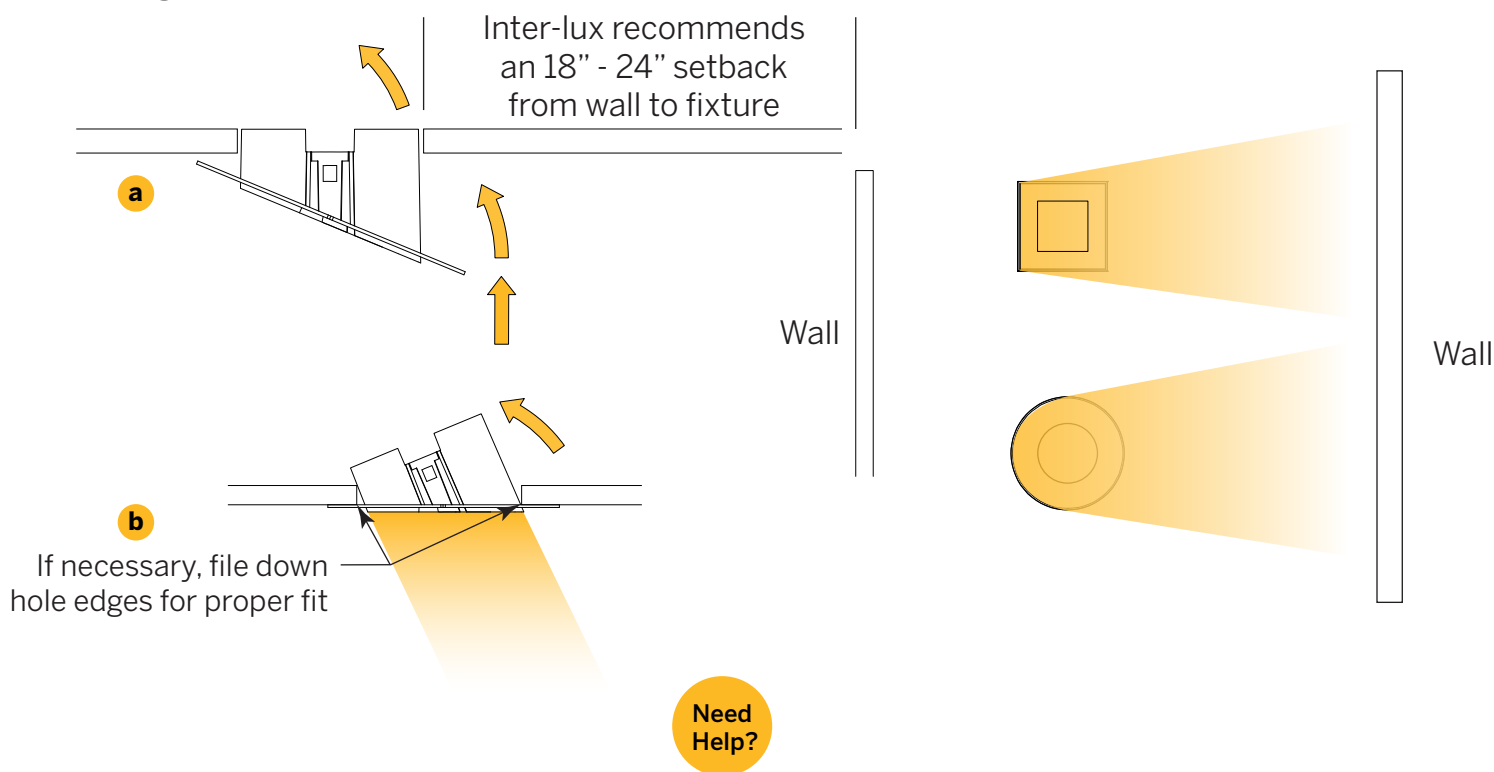

3" ProTools

WG-75RPTAWW-RPT
WG-75SPTAWW-RPT


Accent Wall Wash

Round and Square
Recessed Plaster Trim

3/7


Step 4 - **Mount Housing**

- a** Screw Housing into ceiling blocking or structure.
- b** Pull Power (and Control) cables out through Housing.

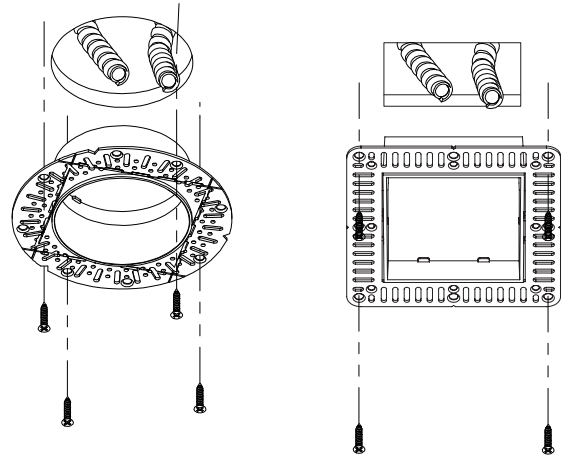

Step 5 - **Apply Joint Compound**

- a** Mask or Remove Cover/Lens.
- b** Apply Joint Compound onto Plaster Trim Housing. Joint Compound should be flush with inside edge of Housing. Clean excess while still wet.

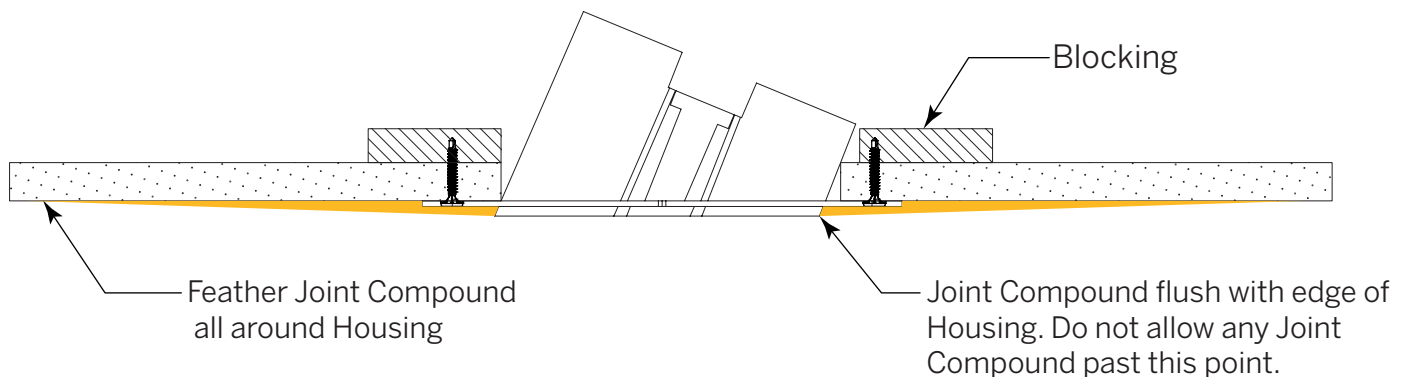

Need
Help?

3" ProTools

WG-75RPTAWW-RPT
WG-75SPTAWW-RPT


Accent Wall Wash

Round and Square
Recessed Plaster Trim

4/7


Step 6 - **Wire Driver Box to Incoming Power**

- a** Locate Fixture Insert/Driver Box assembly.
- b** Remove Driver Box cover. Loosen Cable Strain Relief Bracket(s) and Hex Screws. Remove (unscrew) Knock-outs as necessary.

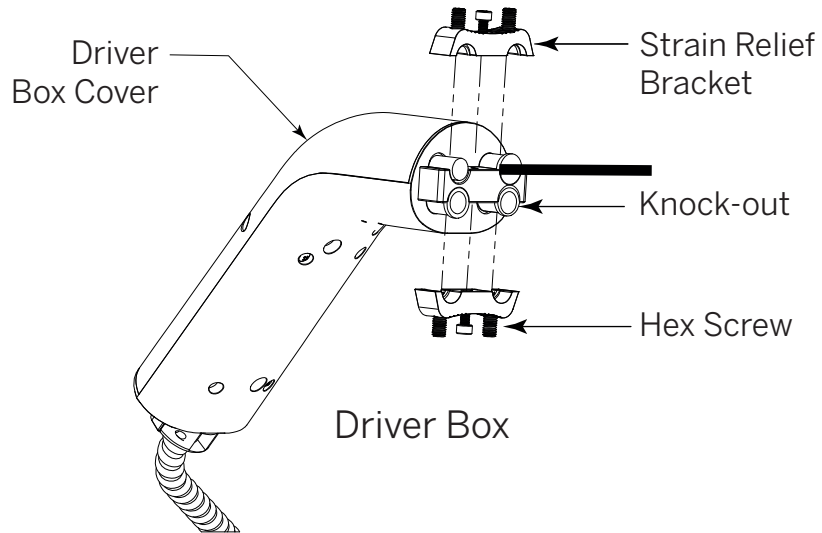

Step 7 - **Wire Driver Box to Incoming Power**

Connect the Power Feed Cable to the Black (L), White (N) and Green (Gnd) Terminals. Connect the Control Wires, if applicable.

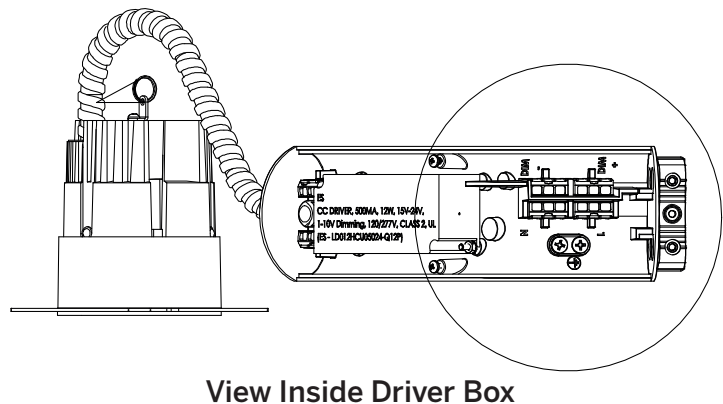

Need
Help?

Continued Next Page

3" ProTools

WG-75RPTAWW-RPT
WG-75SPTAWW-RPT


Accent Wall Wash

Round and Square
Recessed Plaster Trim


5/7

Step 7 - Wire Driver Box to Incoming Power (continued)

Driver Box
Connected to
Conduit

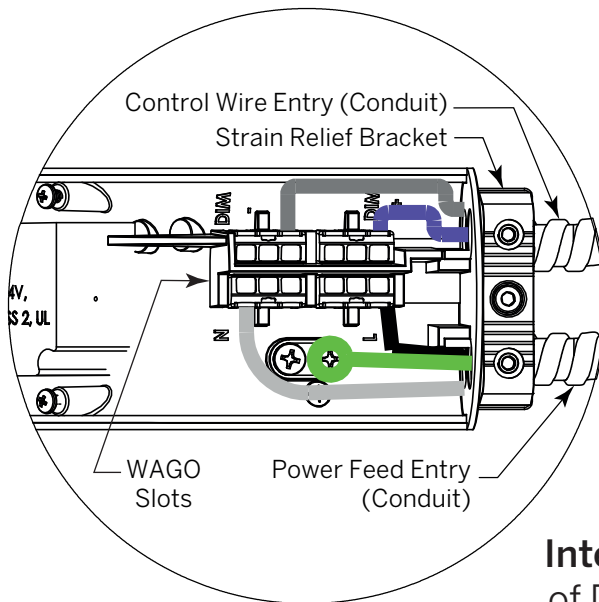

Driver Box
Connected to
Romex

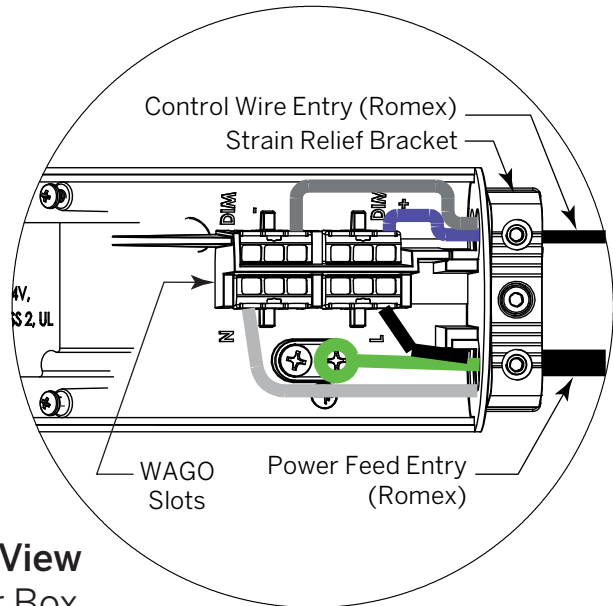

Interior View
of Driver Box

Typical Trade Size ½ Conduit
cannot enter driver box.
It is held in place by Strain
Relief Bracket only.

If Romex is used, fasten
Set Screws to secure
in addition to closing Strain
Relief bracket.

Use 7/64" Allen key to fasten Set Screws.

Refer to Driver Wiring Instructions
for other control protocols

Need
Help?

3" ProTools

WG-75RPTAWW-RPT
WG-75SPTAWW-RPT

Accent Wall Wash


Round and Square
Recessed Plaster Trim

6/7

Step 8 - *Place Fixture Insert into Housing*


- a** Push Fixture Insert into Housing and click into place. Bullet Catches must be fully extended above Top Edge of Housing.

View Inside Ceiling

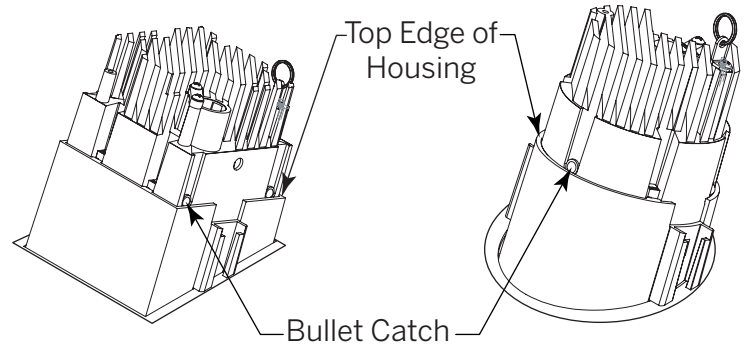



Step 9 - *Insert Cover/Lens*

- a** Latches are Push-to-lock/Push-to-release. Check that Latches are **OPEN** (down) to receive Cover/Lens.
- b** Orient Slots in Cover/Lens with Latch locations.

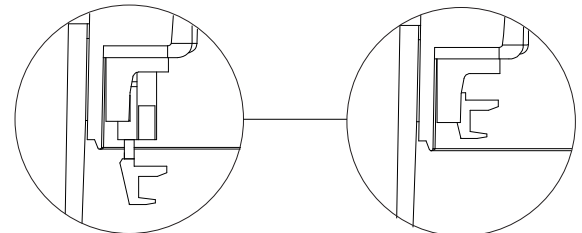


OPEN
Latches Down


CLOSED
Latches Up

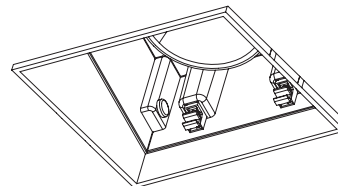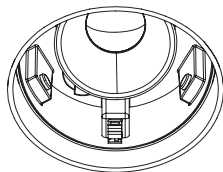

Round Accent
Wall Wash
(RAWW)

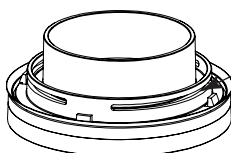

Each Slot
engages
one Latch

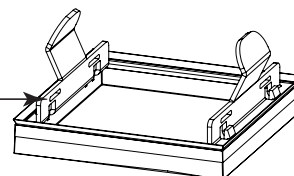

Square Accent
Wall Wash
(SAWW)

**Need
Help?**

3" ProTools

WG-75RPTAWW-RPT
WG-75SPTAWW-RPT

Accent Wall Wash


Round and Square
Recessed Plaster Trim

7/7

Step 9 - **Insert Cover/Lens** (continued)


- c** Push up into Fixture Insert until a click is heard. Release, and Cover/Lens will be locked in place.
- d** Energize!

Housing and Fixture Insert shown upright and out of ceiling for clarity

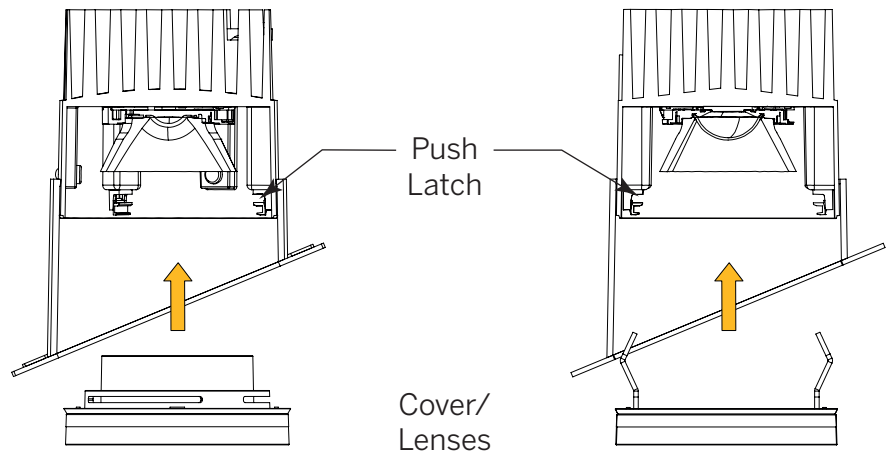


IMPORTANT: Be careful not to damage LED or Optic during installation process.

Correct Seating for Round and Square Accent Wall Wash Cover/Lenses

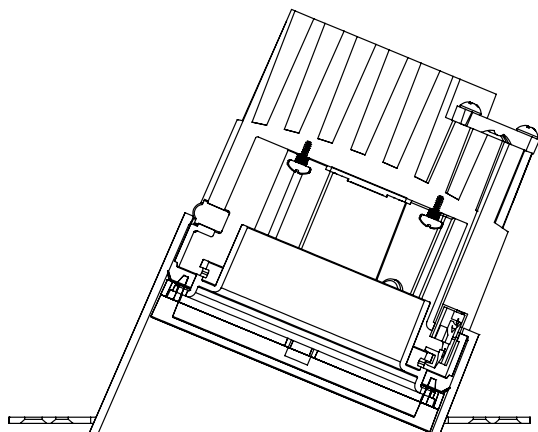

Round Accent
Wall Wash
(RAWW)

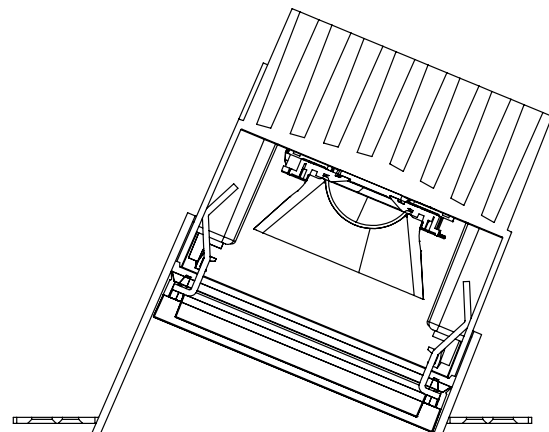

Square Accent
Wall Wash
(SAWW)

Need
Help?