
Edgeless Nose
WG-EN-RPT

Cove
Recessed Plaster Trim

Installation Instructions

Step 1 - ***Open the Box***

Unpack profile unit. Each unit consist of ***one*** major part: Housing.

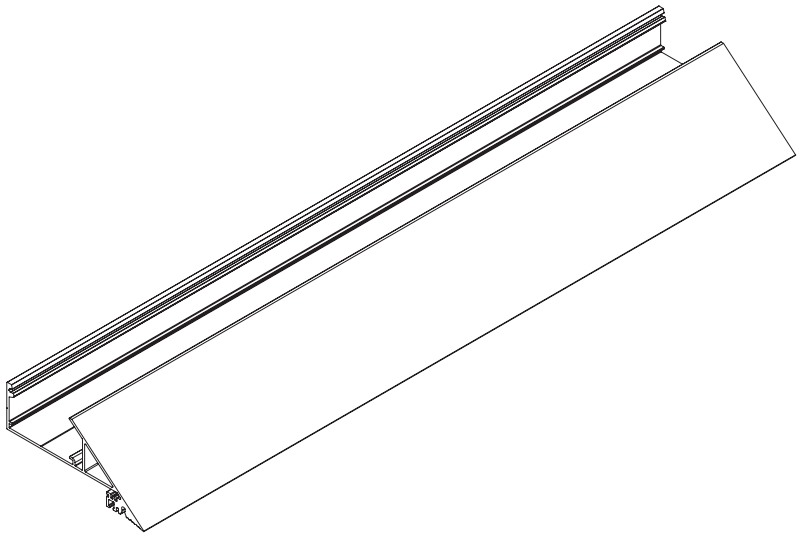



2mm
Hex Key



(1) Wide Joiner
with Set Screws
and 4mm Hex Key



1.5mm
Hex Key




(1) Narrow
Joiner with Set
Screws and
3mm Hex Key

Need Help?


Step 2 - ***Installation Prep***


As with the straight section Mini Edgeless Cove, the Soft Corners are fastened to the Riser of a False Ceiling. Construct False Ceiling as shown below.

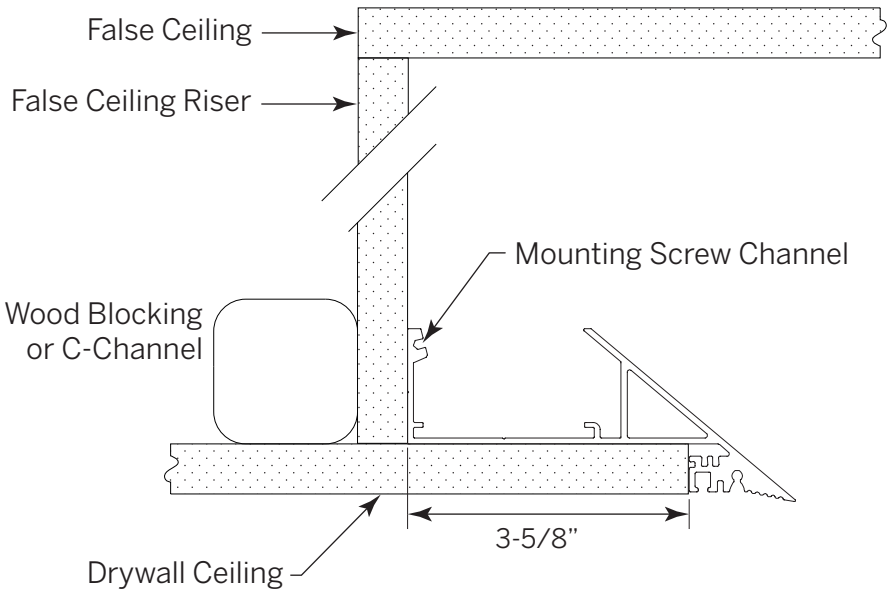

Step 3 - ***Install Housing***

- **a** Drill holes 16" on center into Mounting Channel as needed.
- **b** Slide Housing onto Edge of exposed ceiling and against Riser of False Ceiling.
- **c** Insert Mounting Screws (by others) into drilled holes and fasten to False Ceiling Riser and blocking.
- **d** Insert Mounting Screws (by others) into drywall and bottom of fixture.

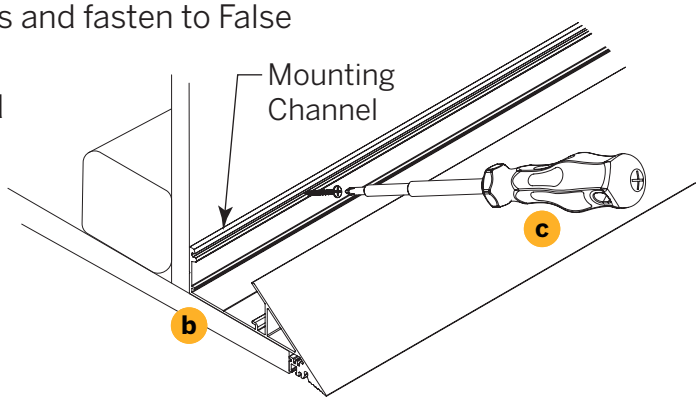

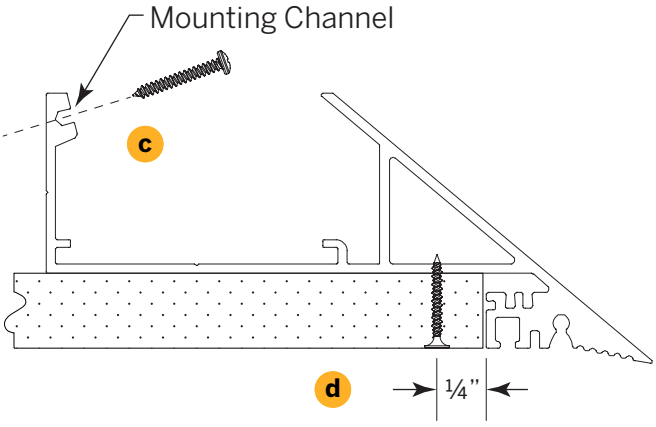


Need Help?


Step 3 - ***Install Housing*** *(continued)*

For Multi Unit Run only


When installing a Pattern, the customer may find it easier starting with a Corner. The Pattern Coffer and Raft (PC & PR) corners and the Plane-to-Plane Inside (PPI) and Plane-to-Plane outside corners are welded at the factory. Follow ***Steps 3 - 5*** to mount to existing Run.

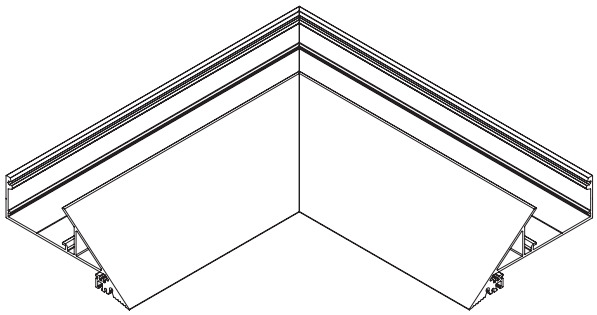


Pattern Coffer (PC)

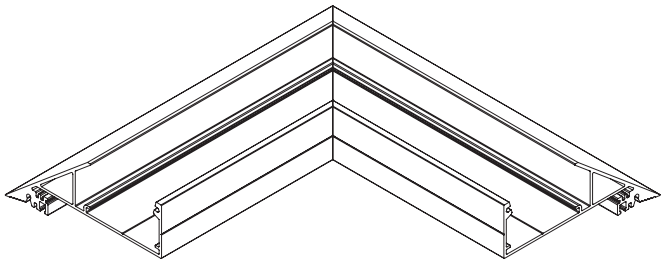

Pattern Raft (PR)

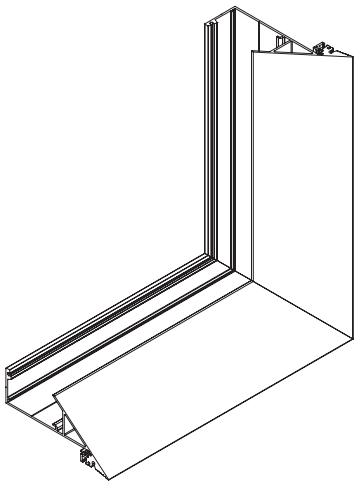

Plane-to-Plane Inside (PPI)

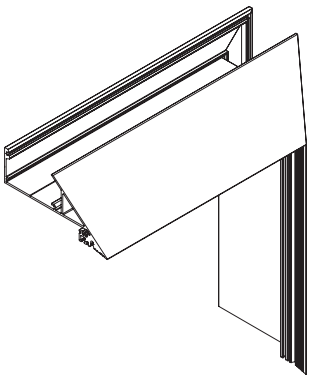

Plane-to-Plane Outside (PPO)


Need Help?

Step 4 - ***Insert Joiners*** - *Multi Unit Run only*

a Insert Wide Joiner on far end of Start Unit Housing. Slide Jointer *completely* into Wide Channel.

b Insert Narrow Joiner on far end of Start Unit Housing. Slide Jointer *completely* into Narrow Channel.

c ***Do not*** fasten Set Screws at this time.

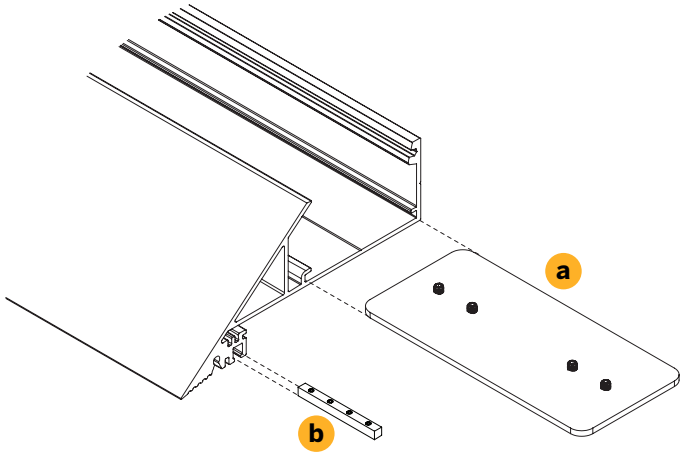


Step 5 - ***Join Housings*** - *Multi Unit Run only*


a As in Step 4, slide Housing onto Edge of exposed Ceiling and against Riser of False Ceiling. Butt up to previous Housing.

b Slide Wide and Narrow Joiners such that they bridge both units equally. Tighten Set Screws: Wide Joiner from the top; Narrow Joiner from the bottom.


c Fasten Housing using screws and anchors (by others).

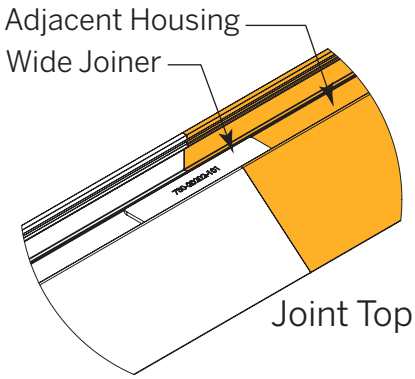

Joint Top View

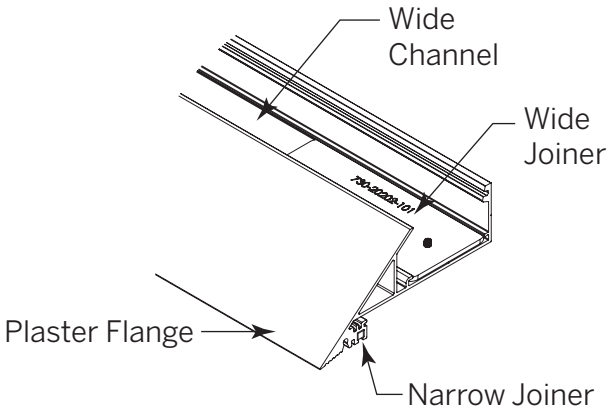

Joiners Slid Fully into Starting Unit

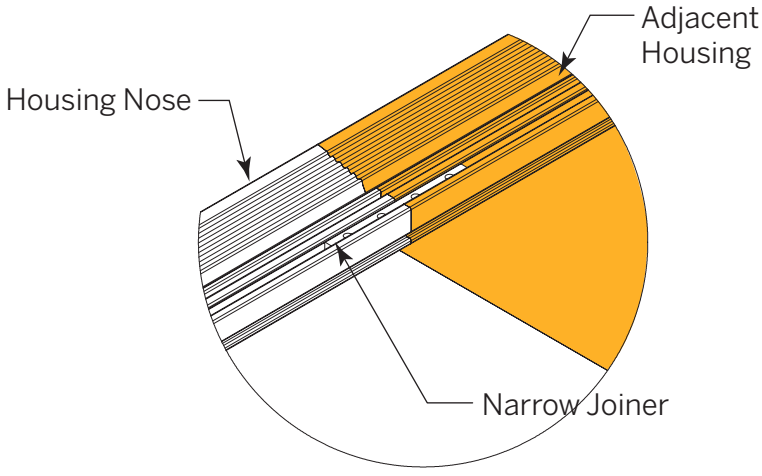


Joint Bottom View

Need Help?

Step 6 - ***Apply Joint Compound***

Apply Joint Compound all around the trim taking care to apply it flush with the Nose of the Housing.

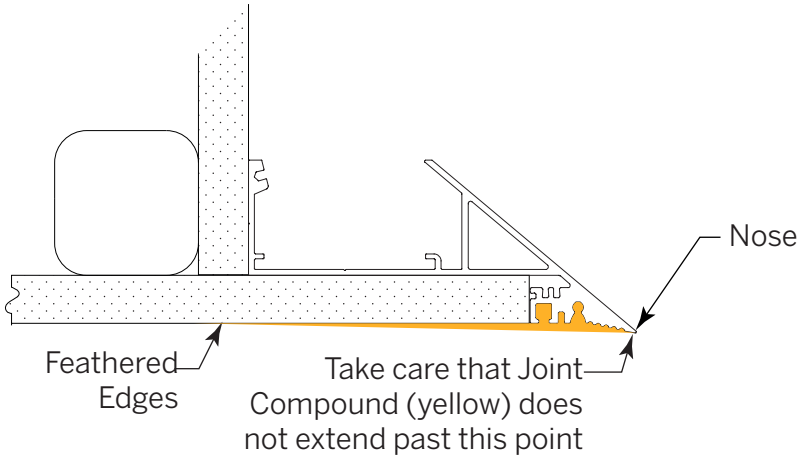

Need Help?