






Step 5; Install Housing: Ensure all Low voltage cables are pulled through the wall and accessible. Check that Housings (A) have correct End caps and Joiners installed. Then push the Housing (A) up until it engages with the Mounting Clips (C). Repeat until all Housings (A) are installed. Next slide the joiners (example below) halfway in between each Housing (A) and tighten the set screws. Run Low voltage cables through Housing (A) feed holes. Finally make electrical connections to Luminaire (B) cables with supplied connectors.

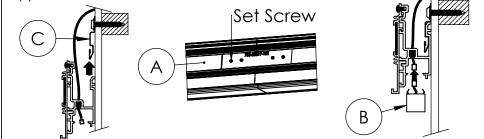


Step 6; Install Luminaire: Push the Luminaries (B) up until they snap into the Housings (A). If possible, arrange Luminaire (B) lenses so that they overlap fixture joints. Next, power the Luminaires (B) to double check electrical connections. When the ceiling is installed, it will need to end 1 - 1/2" from the the wall to accomodate the Housings (A).

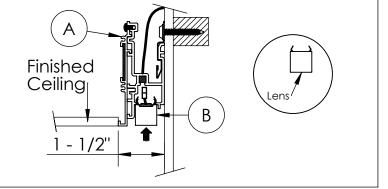

inter•lux	410-381-1497	inter-lux.com	PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-lux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITEN PERMISSION OF Inter-lux. IS PROHIBITED.	Page 1 of 3
*Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice.			DRAWING NOT TO SCALE 9	40-20LPF-RRT REV 1

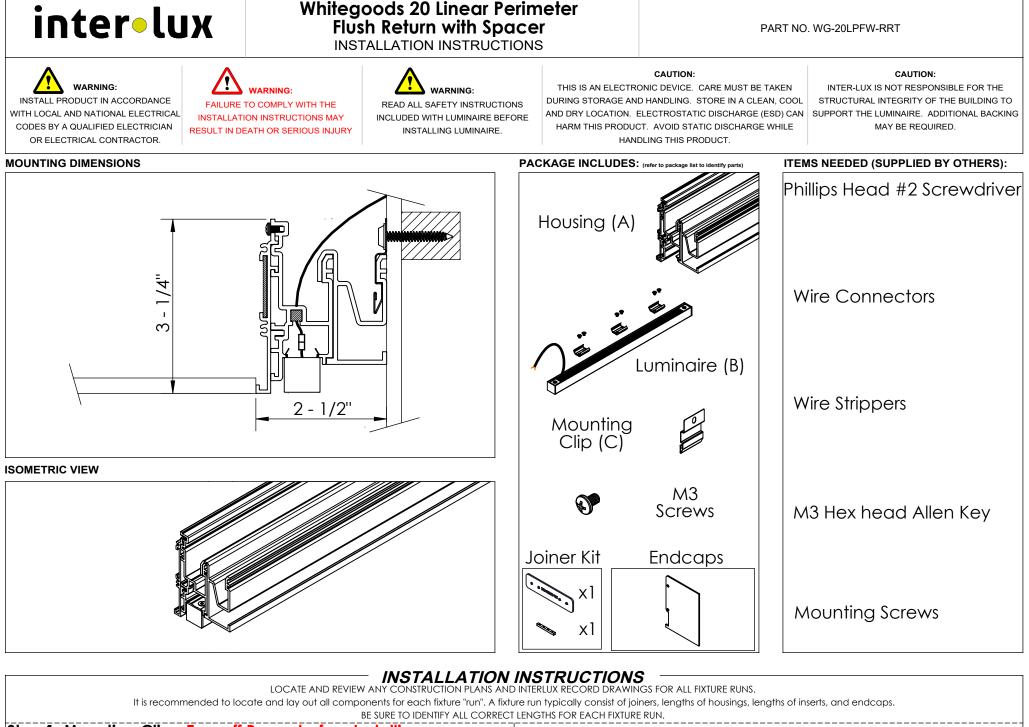


Step 1; Mounting Clips: Turn off Power before Installing. Mark the wall at the intended height of the Mounting Clips (C), 3 - 1/4'' above the bottom of the intended ceiling. Then screw Mounting Clips (C) into the wall, it is recommended you use appropriate backing or drywall anchors. The surrounding structure is required to support the weight of the fixture (1 - 1/2 lb per foot). Recommeded at least one Clip every 16'', for each Housing (A) Length. Must use at least 2 Clips per Housing (A), 3 recommended. No Clip should be within 3'' from the ends of any

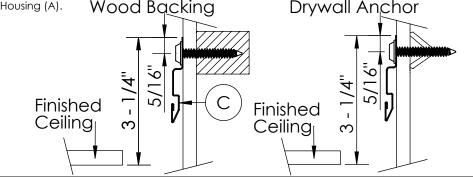


Step 3; Remote Drivers: Install the Remote drivers and run Low voltage cables to the wall. Then run the Low voltage cables through the feed holes drilled above the Mounting Clips (C).


Driver Enclosure

Step 2; Feed Holes: Determine which end the Luminaire (B) cables will start at on each Housing (A) and mark them on the shown location on the Housings (A), no less than 3 inches from the end. Then drill 1/4" holes where you marked. Finally look at where the Housings (A) will be installed and drill 1/4" holes above the line of the Mounting Clips, and close to where the holes in the Housings (A) will end up.

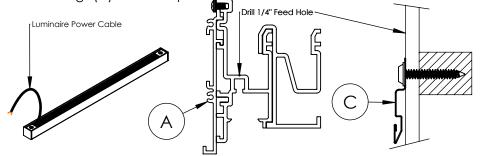


Step 4; Mounting Hardware: Install Endcaps on first and last Housing (A) of each run. Install Joiners on each Housing (A), before putting in the ceiling. Install Snap-in Clips onto Luminaires

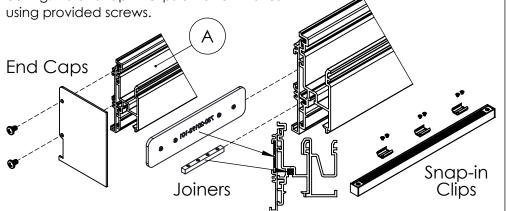





Step 5; Install Housing: Ensure all Low voltage cables are pulled through the wall and accessible. Check that Housings (A) have correct End caps and Joiners installed. Then push the Housing (A) up until it engages with the Mounting Clips (C). Repeat until all Housings (A) are installed. Next slide the joiners (example below) halfway in between each Housing (A) and tighten the set screws. Run Low voltage cables through Housing (A) feed holes. Finally make electrical connections to Luminaire (B) cables with supplied connectors.

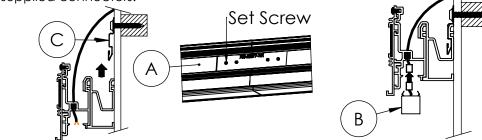


Step 6; Install Luminaire: Push the Luminaries (B) up until they snap into the Housings (A). If possible, arrange Luminaire (B) lenses so that they overlap fixture joints. Next, power the Luminaires (B) to double check electrical connections. When the ceiling is installed, it will need to end 2 - 1/2" from the the wall to accomodate the Housings (A).

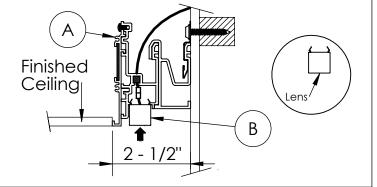


inter∘lux	410-381-1497	inter-lux.com	PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Inter-Iux. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITEN PERMISSION OF Inter-Iux. IS PROHIBITED.	Page 2 of 3	
*Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice.			DRAWING NOT TO SCALE 940-20LPFW-RRT REV 1		

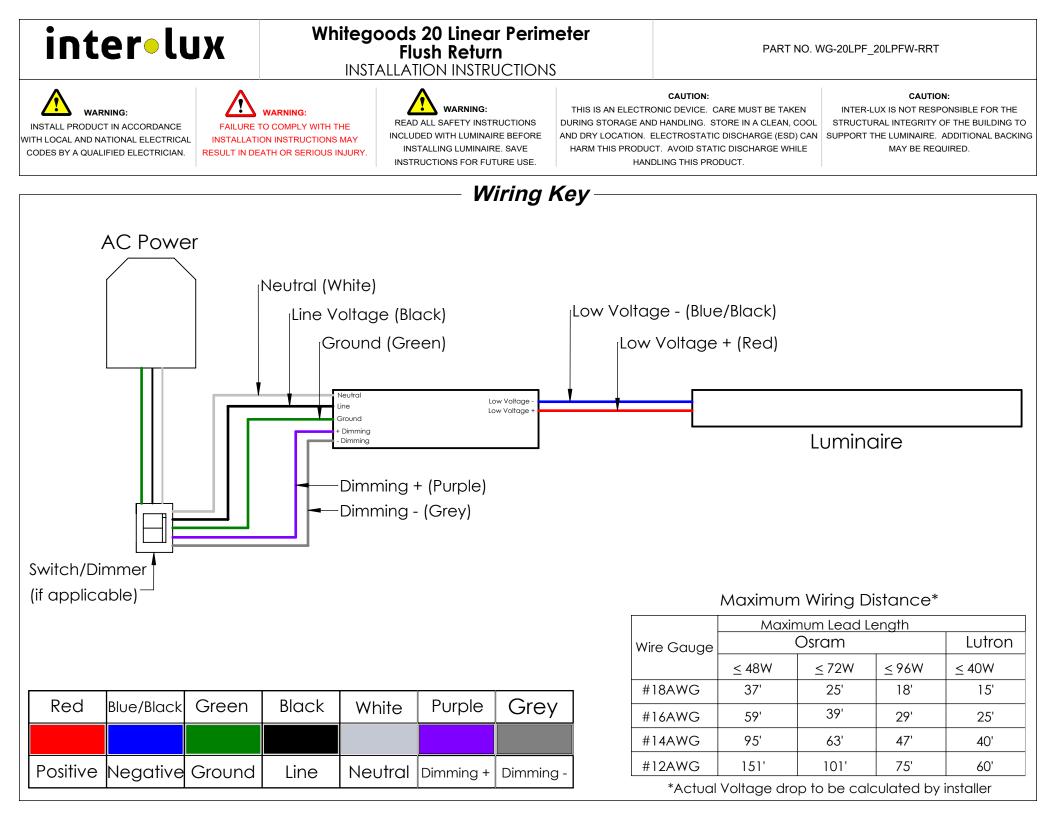

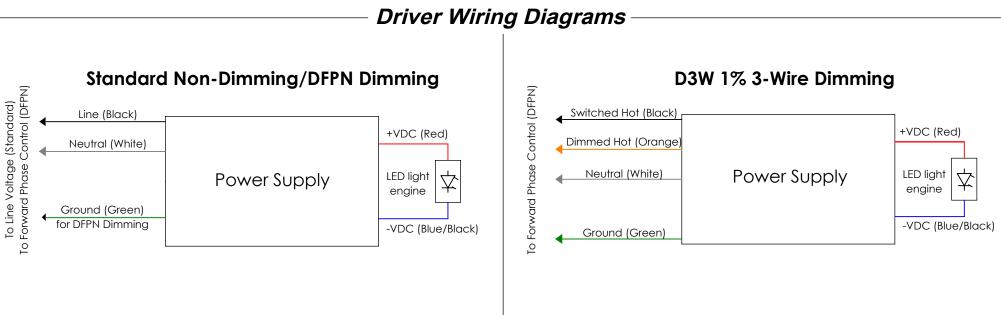

L3DAE 1%/L3D0E 0.1% Dimming

0-10V Dimming

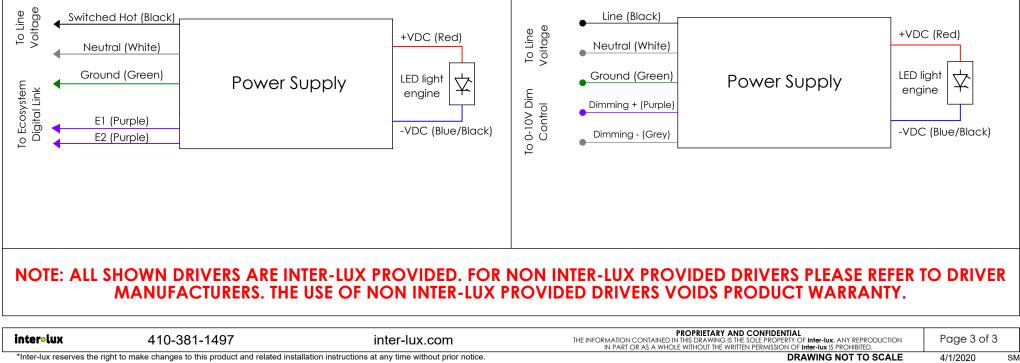

*Inter-lux reserves the right to make changes to this product and related installation instructions at any time without prior notice